



## 6. Rear Seat Reclining System

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear seat. <Ref. to SE-32, REMOVAL, Rear Seat.>
- 3) Remove the trim panel - rear apron. <Ref. to EI-102, REMOVAL, Rear Quarter Trim.>
- 4) Remove the clips and bolts, then remove the striker - backrest rear.

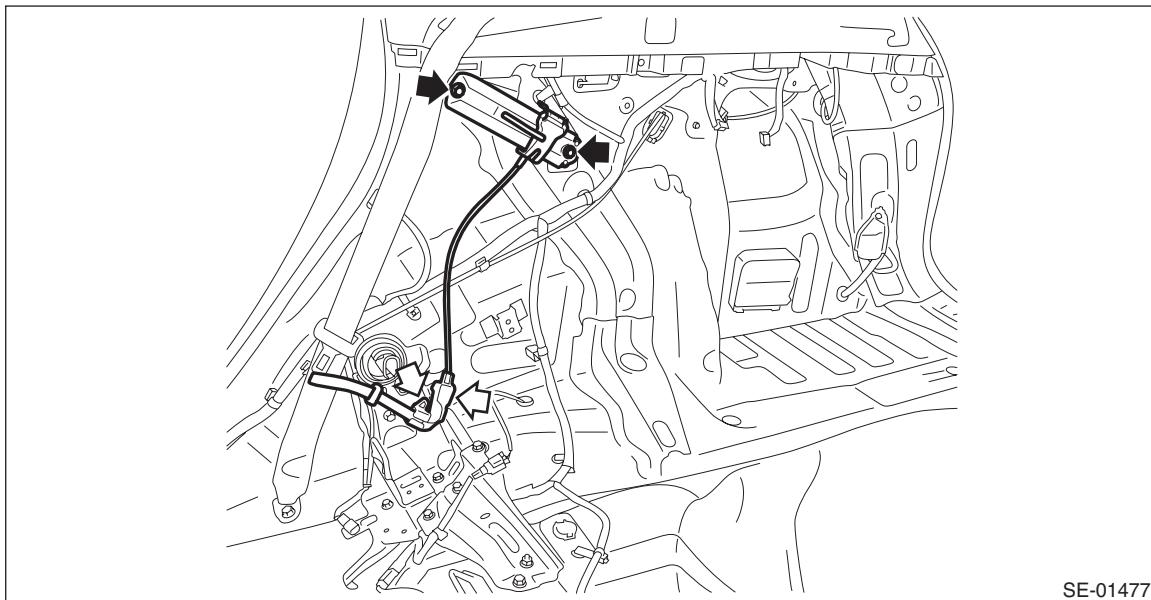


- 5) Remove the bolts and nuts, and remove the hinge assembly - rear backrest stay.

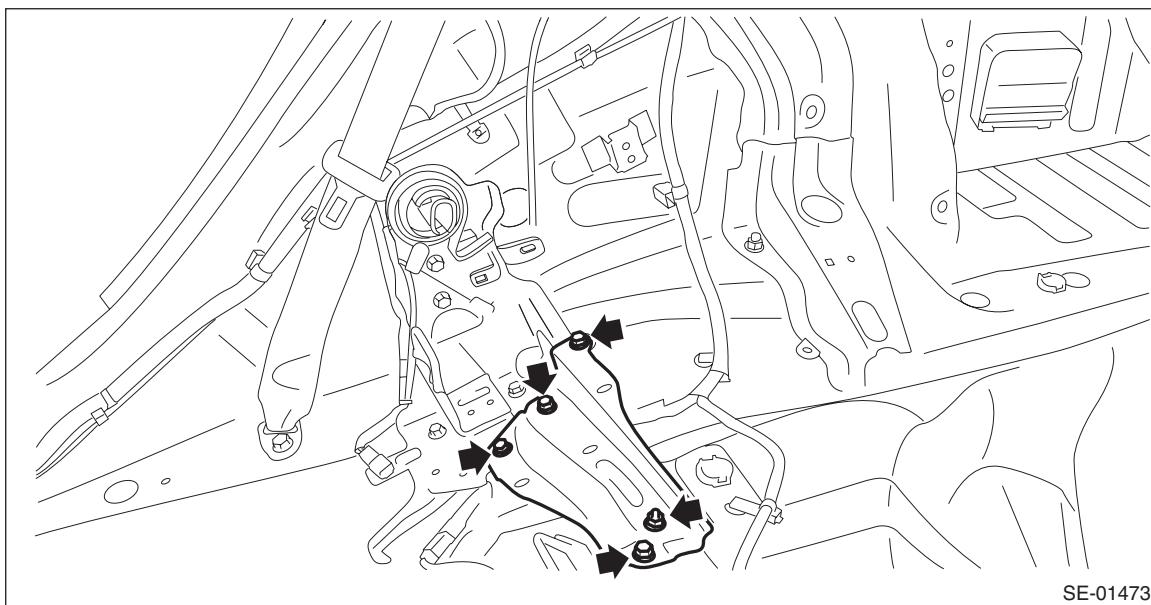

# Rear Seat Reclining System

## SEATS

6) Remove the bolts, and remove the hinge assembly - rear backrest.

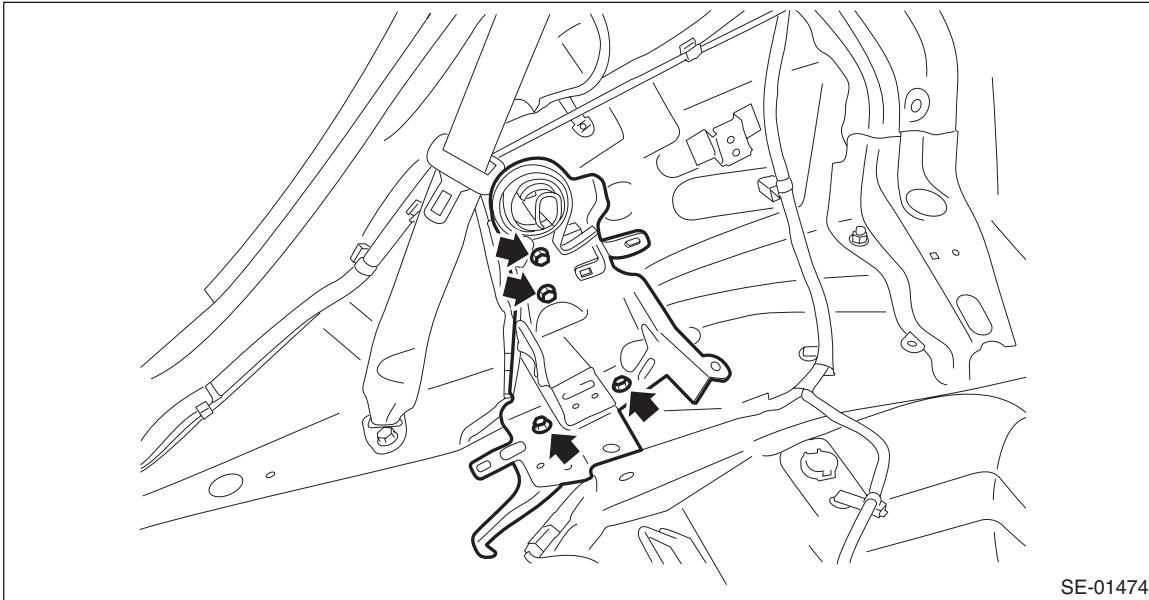

## B: INSTALLATION

Install each part in the reverse order of removal.

### *Tightening torque:*

*Refer to "COMPONENT" of "General Description". <Ref. to SE-6, REAR SEAT, COMPONENT, General Description.>*