


17. Remote Openers

A: REMOVAL


1. FRONT HOOD OPENER

- 1) Remove the opener handle.
 - (1) Remove the cable.
 - (2) Remove the bolt, and remove the opener handle.

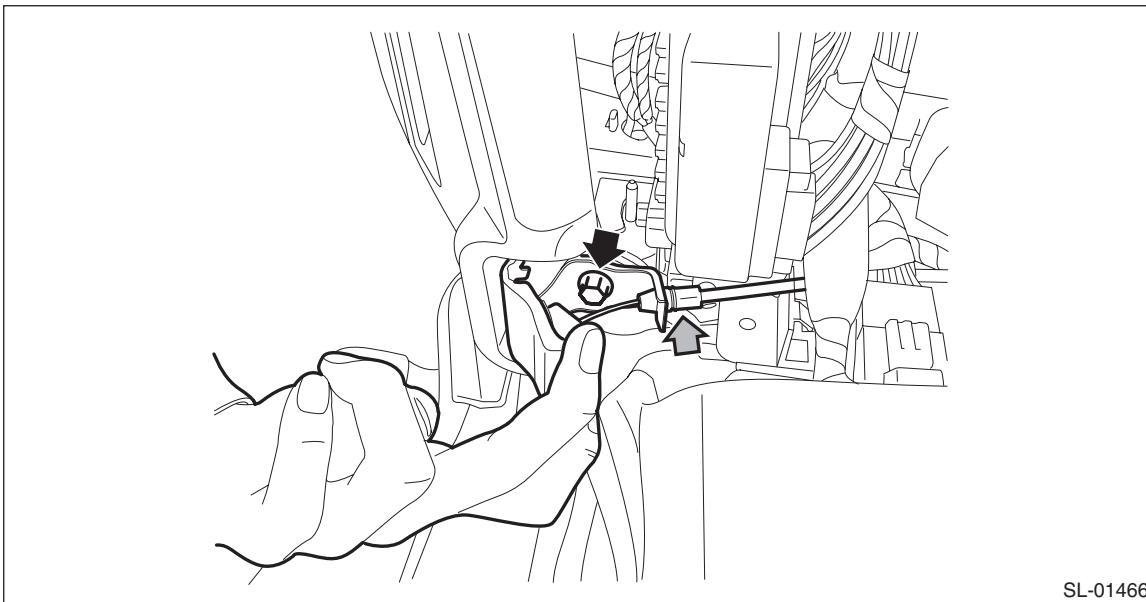

- 2) Remove the following parts and remove the cable clip and cable.

- Lock assembly - front hood: <Ref. to SL-52, REMOVAL, Front Hood Lock Assembly.>
- Cover assembly - instrument panel LWR driver: <Ref. to EI-59, REMOVAL, Instrument Panel Lower Cover.>

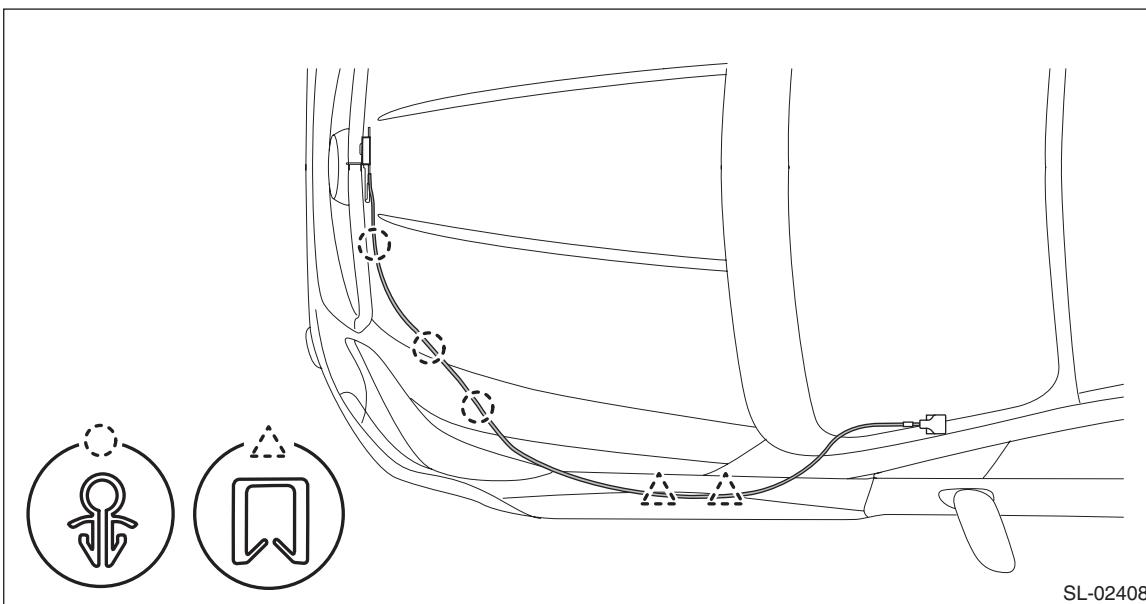


Remote Openers

SECURITY AND LOCKS

2. FUEL FLAP OPENER


1) Remove the cover - handle.

- (1) Open the cover by using a flat tip screwdriver.
- (2) Remove the screws and detach the cover - handle.

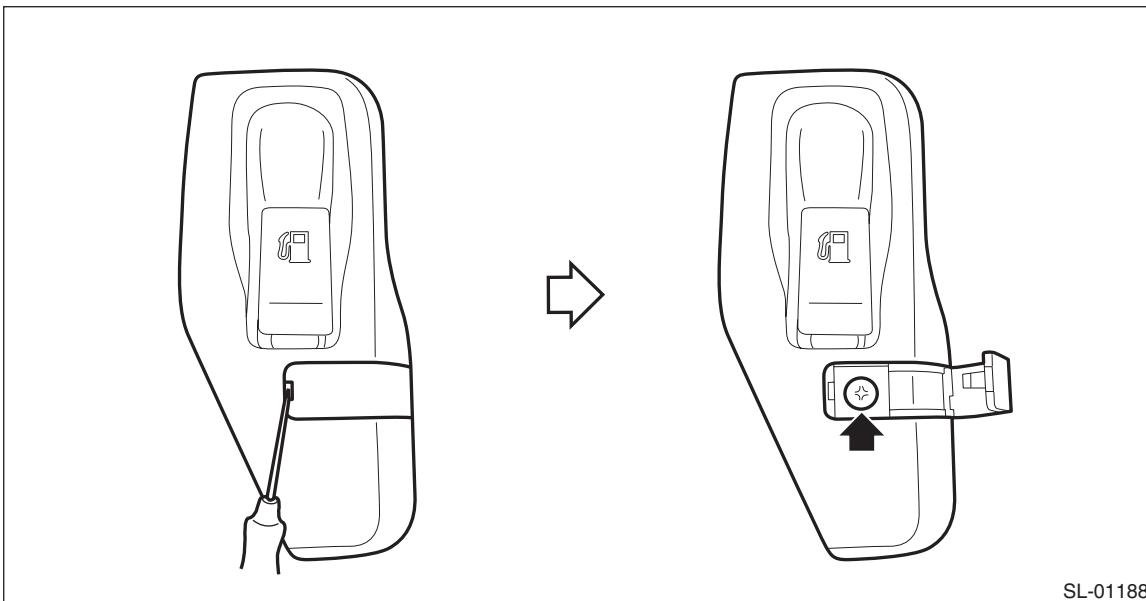

2) Remove the pull handle - opener.

- (1) Remove the nut.
- (2) Remove the cable from pull handle - opener.

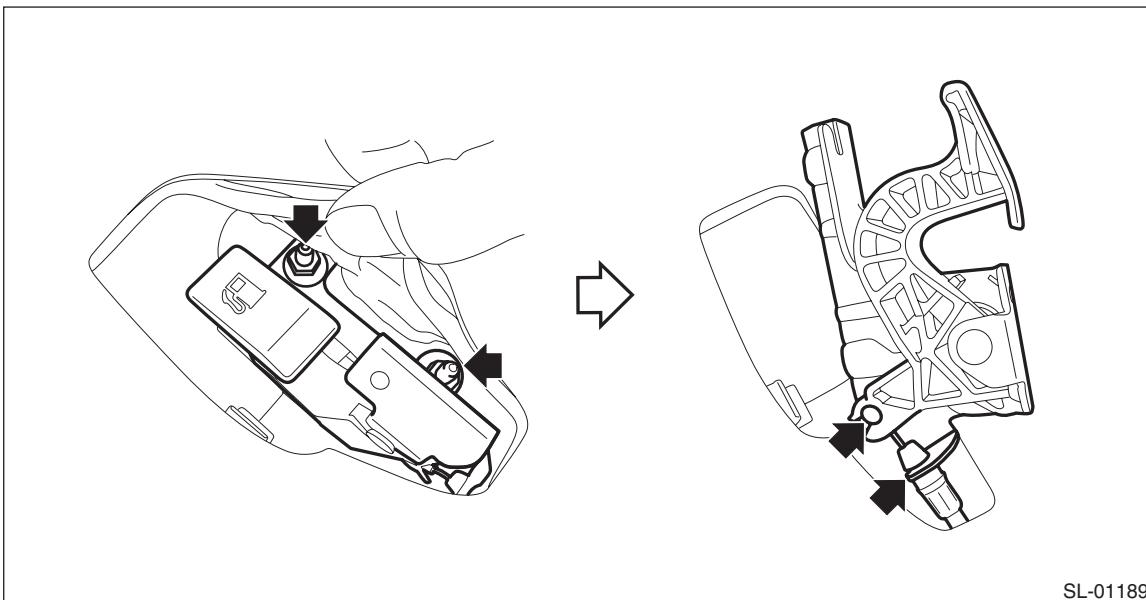


3) Remove the trim panel - rear apron RH. <Ref. to EI-102, REMOVAL, Rear Quarter Trim.>

4) Remove the fuel lock inside the quarter panel.


(1) Press the claws of the fuel lock.

(2) While keeping the condition in step (1), pull the fuel lock to the rearward of the vehicle.

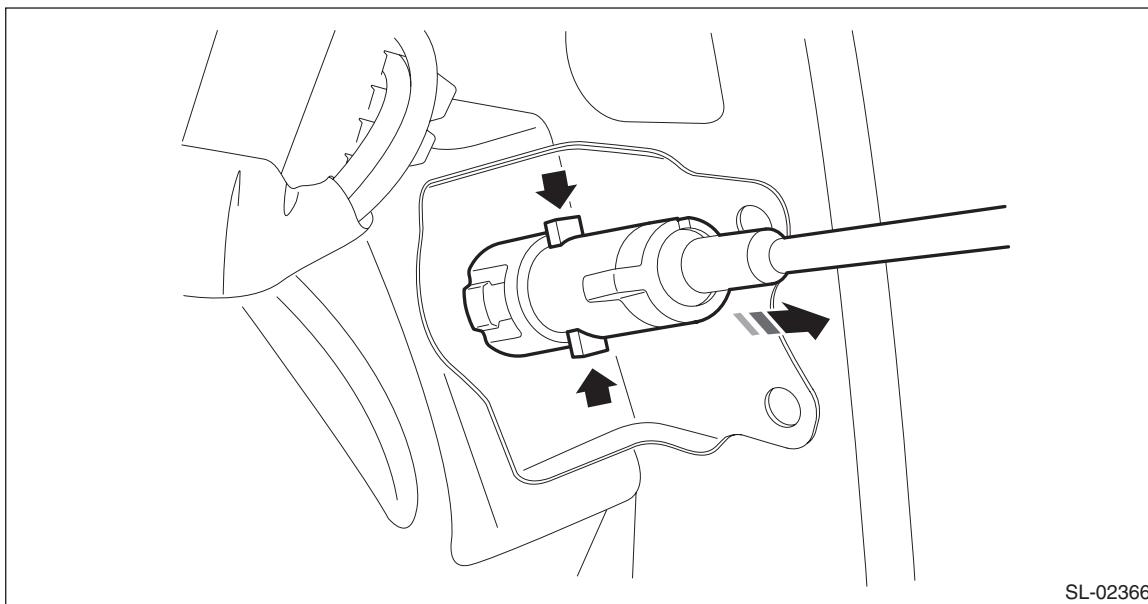

5) Remove the lower inner trim. <Ref. to EI-92, REMOVAL, Lower Inner Trim.>

6) Remove the cable clip, and remove the cable.

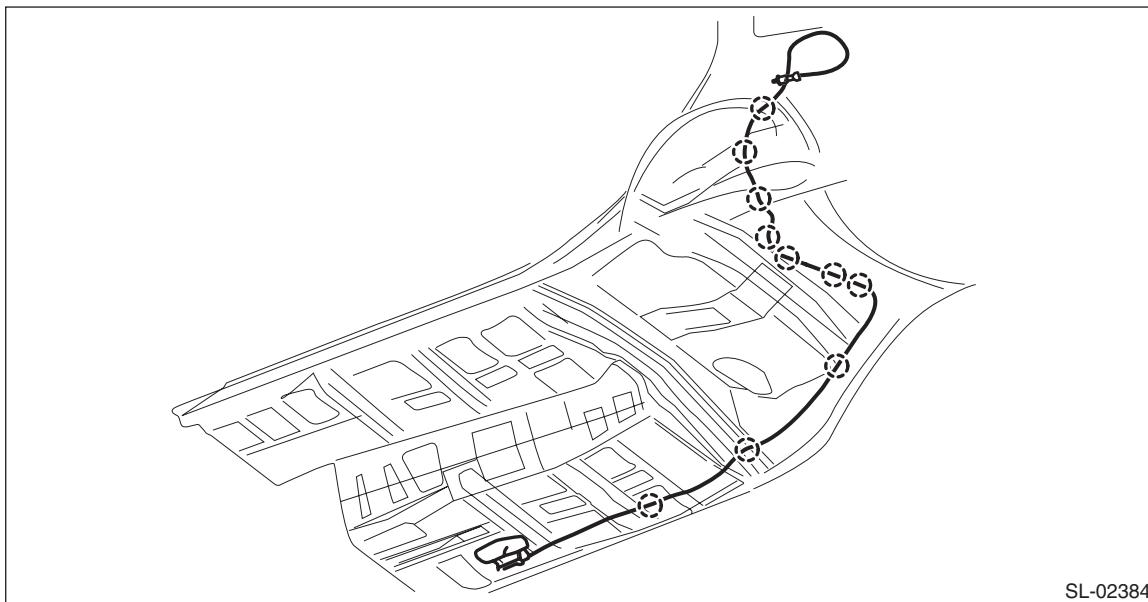

B: INSTALLATION

1) Before installation, check the following items.

- Cable is free from deformation such as fray.

2) Install each part in the reverse order of removal.

Tightening torque:

Front hood lock: <Ref. to SL-4, FRONT HOOD LOCK, COMPONENT, General Description.>

Remote opener: <Ref. to SL-4, FUEL FLAP OPENER, COMPONENT, General Description.>

C: INSPECTION

Check if the front hood and fuel flap operate normally.