


20. Security Control Module

A: REMOVAL

NOTE:

Equipped on C0 and C5 models without keyless access.

- 1) Remove the heater and cooling unit assembly. <Ref. to AC-58, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the security control module.
 - (1) Disconnect the connector.
 - (2) Remove the nuts, and remove the security control module.

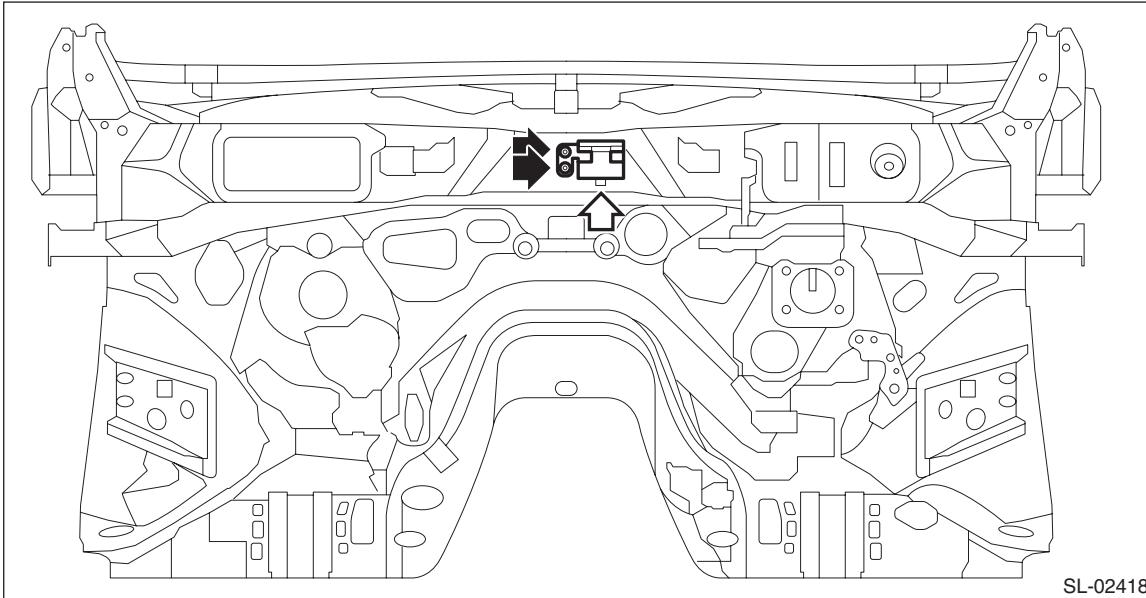

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Heater and Cooling Unit". <Ref. to AC-61, INSTALLATION, Heater and Cooling Unit.>

Tightening torque:

Security control module: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)