


22. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear apron RH and trim panel - rear quarter pillar UPR RH. <Ref. to EI-102, REMOVAL, Rear Quarter Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and then remove the keyless entry control module.

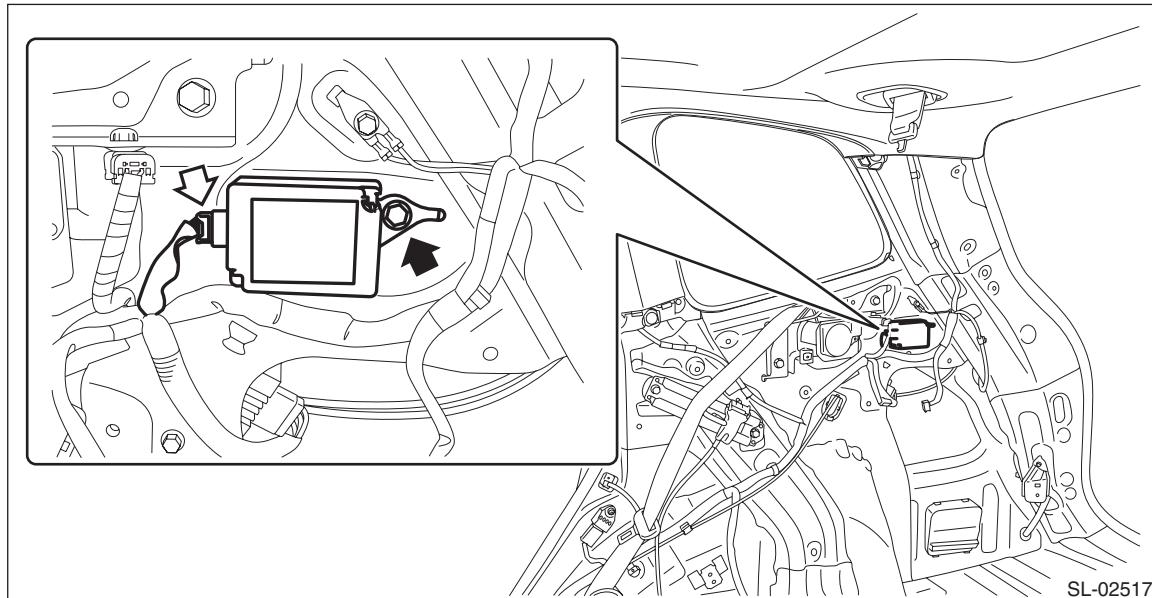

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Rear Quarter Trim". <Ref. to EI-106, INSTALLATION, Rear Quarter Trim.>

Tightening torque:

Keyless entry control module: 13 N·m (1.33 kgf·m, 9.6 ft-lb)