

### 27. Immobilizer Control Module

#### A: NOTE

The control of immobilizer system is carried out in body integrated unit. For the detailed procedure, refer to the section of body integrated unit.

- Removal: <Ref. to SL-74, REMOVAL, Body Integrated Unit.>
- Installation: <Ref. to SL-76, INSTALLATION, Body Integrated Unit.>