


## 29. Keyless Access Indoor Antenna

### A: REMOVAL

#### 1. FRONT ANTENNA

- 1) Remove the tray assembly - CTR. <Ref. to EI-65, REMOVAL, Console Box.>
- 2) Disconnect the connector and remove the front antenna assembly - interior.

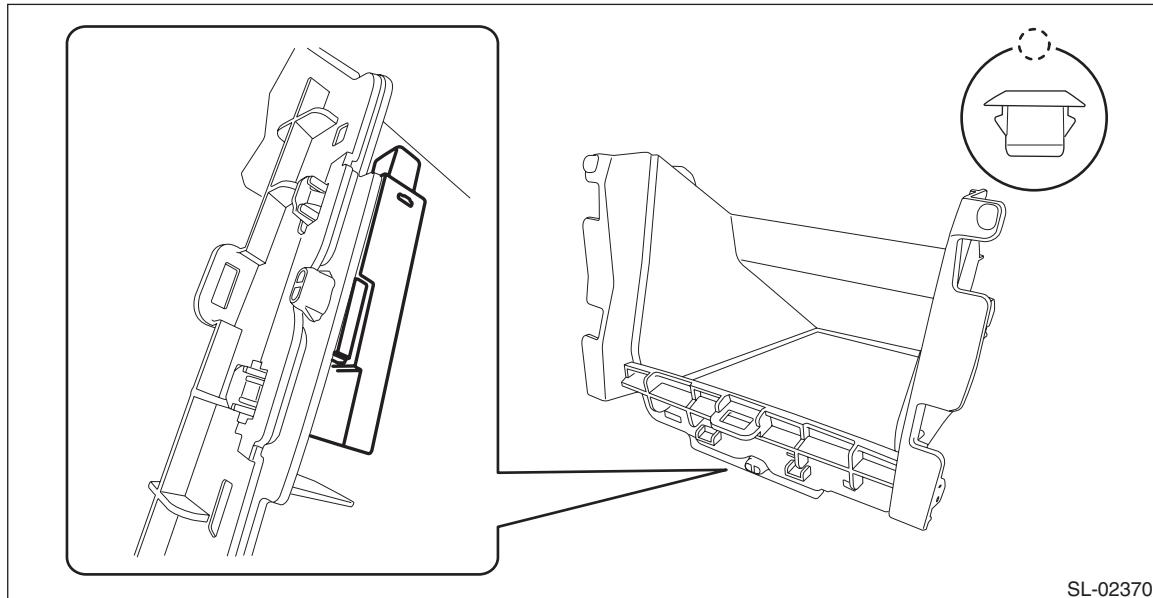


#### 2. CENTER ANTENNA

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear seat cushion assembly. <Ref. to SE-32, REMOVAL, Rear Seat.>
- 3) Remove the center antenna assembly - interior.

NOTE:


Do not remove the antenna assembly from the cover. If removed, the antenna assembly and cover mounting becomes loose, causing abnormal noises.

- (1) Disconnect the connector.
- (2) Remove the screw, and remove the center antenna assembly - interior.

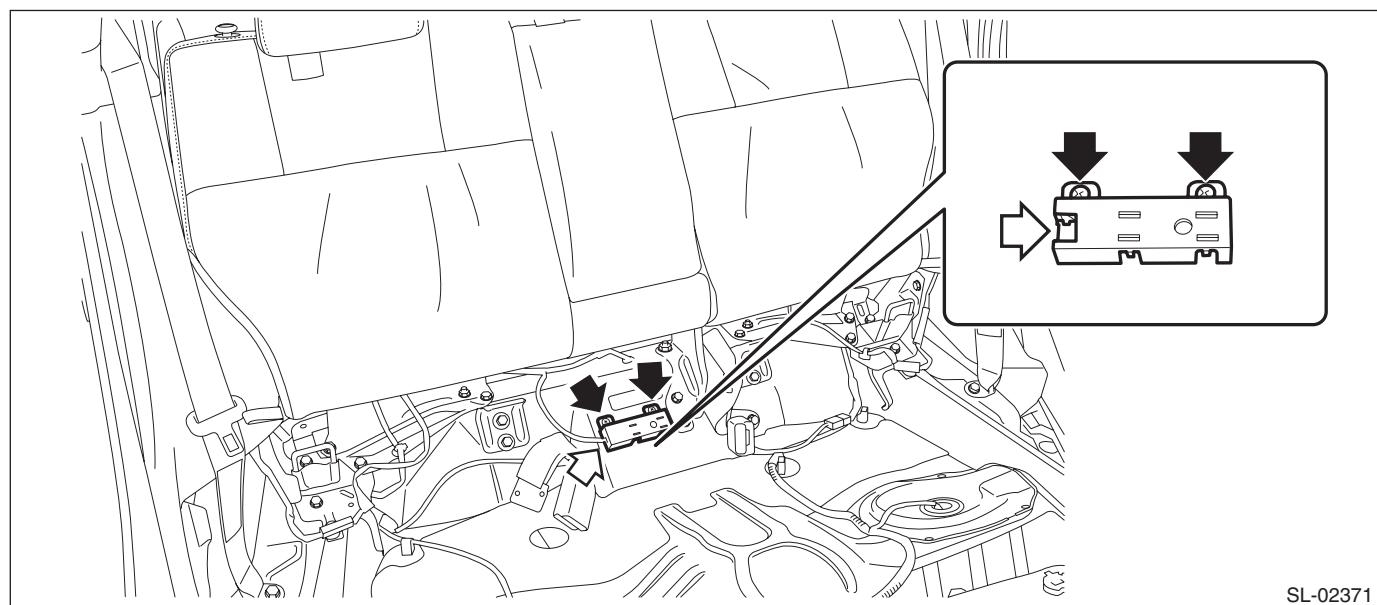

### 3. REAR ANTENNA

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear seat cushion assembly. <Ref. to SE-32, REMOVAL, Rear Seat.>
- 3) Disconnect the connector and remove the rear antenna assembly - interior.

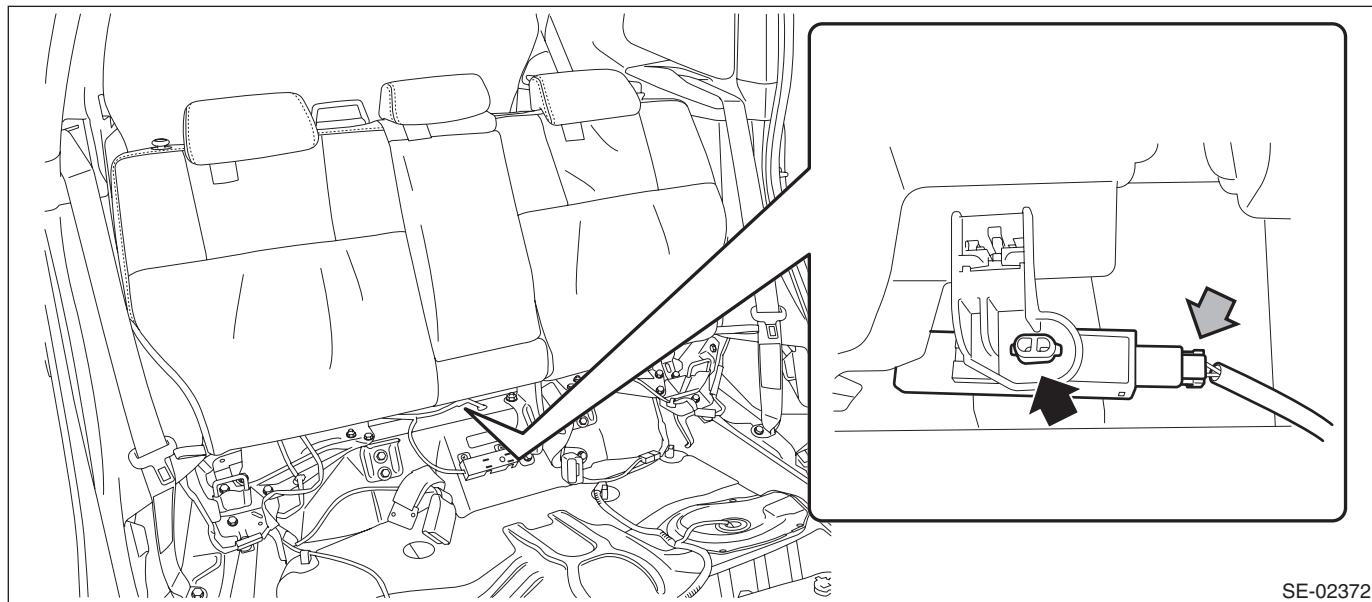

### B: INSTALLATION

Install each part in the reverse order of removal.

#### NOTE:

Refer to "INSTALLATION" of the following parts.

- Tray assembly - CTR: <Ref. to EI-68, INSTALLATION, Console Box.>
- Rear seat cushion assembly: <Ref. to SE-35, INSTALLATION, Rear Seat.>

### C: INSPECTION

- 1) Check the setting by performing Keyless access system check using the Subaru Select Monitor. <Ref. to KPS(diag)-28, OPERATION, Keyless Access System Check.>
- 2) Disconnect the Subaru Select Monitor. After placing the access key near the changed antenna, operate the push button ignition switch to check that the power can be switched.
- 3) If the system does not operate normally as the result of inspection, refer to "General Diagnostic Table" of the "KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)" section. <Ref. to KPS(diag)-88, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>