


31. Rear Lock Button

A: REMOVAL

NOTE:


The rear lock button is integrated into the rear gate opener button.

- 1) Remove the garnish assembly - rear gate. <Ref. to EI-126, REMOVAL, Rear Gate Garnish.>
- 2) Remove the screws and remove the rear lock button.

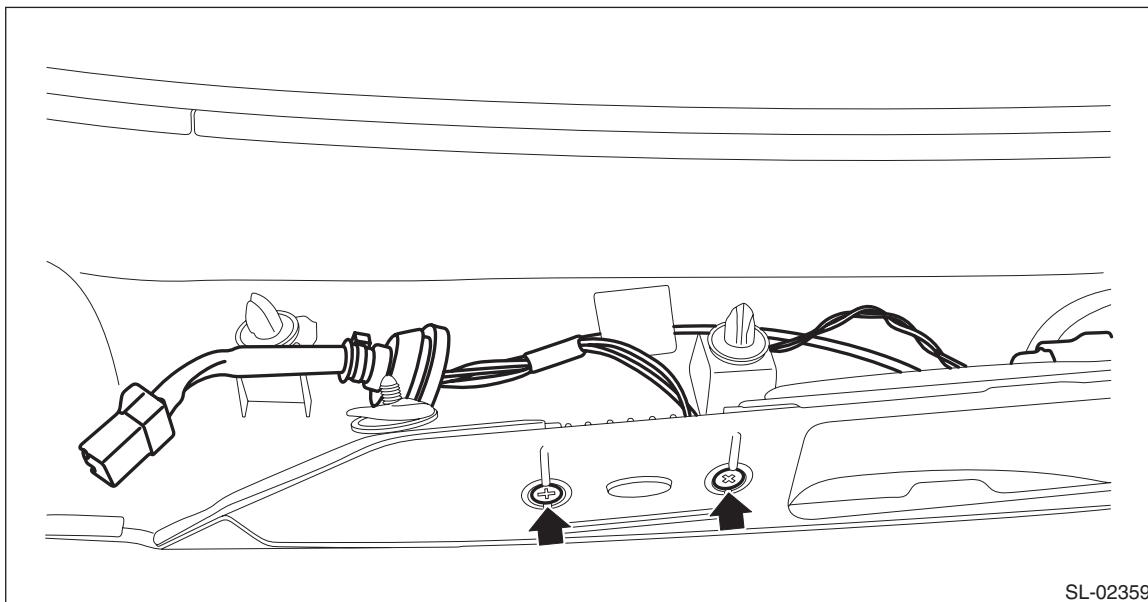

- 3) Remove the rear antenna assembly - exterior.

- 4) Release the locks at both ends of the button - opener rear gate by pushing them with a flat tip screwdriver, remove the button - opener rear gate and remove the integrated harness.

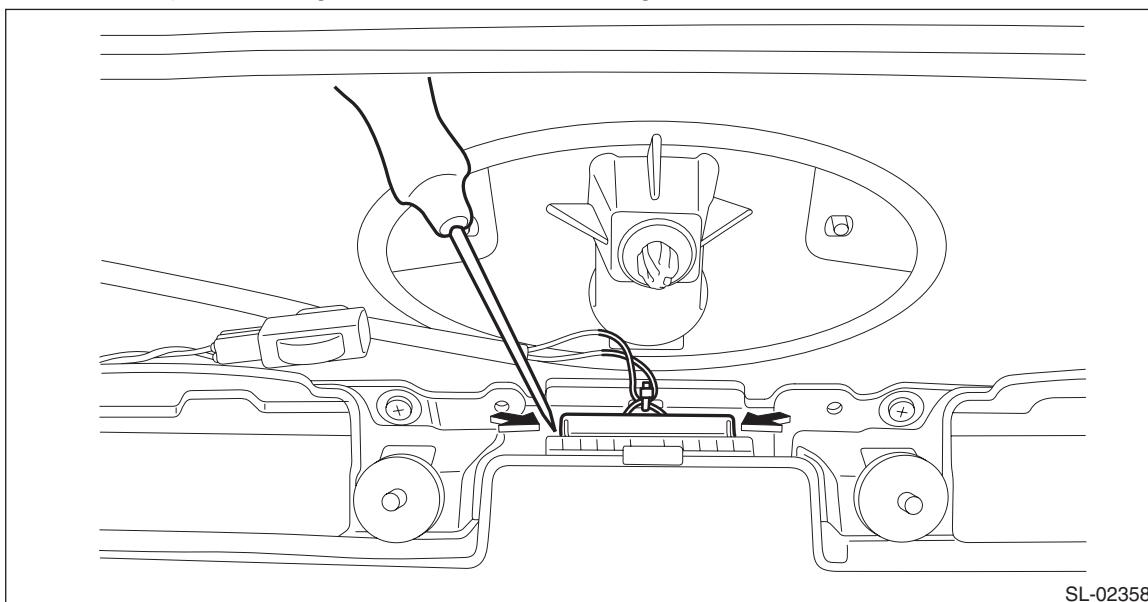

B: INSTALLATION

CAUTION:

Make sure that the harness grommet is securely installed.

If not properly installed, this may cause leaks.

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Garnish Assembly - Rear Gate". <Ref. to EI-128, INSTALLATION, Rear Gate Garnish.>

C: INSPECTION

- 1) Display the current data using the Subaru Select Monitor.
- 2) Check if the display changes when the rear lock button is operated.
- 3) If the display is not correct as the result of inspection, refer to "General Diagnostic Table" of the "KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)" section. <Ref. to KPS(diag)-88, KEY-LESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>