



33. Keyless Access CM

A: REMOVAL

- 1) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-39, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

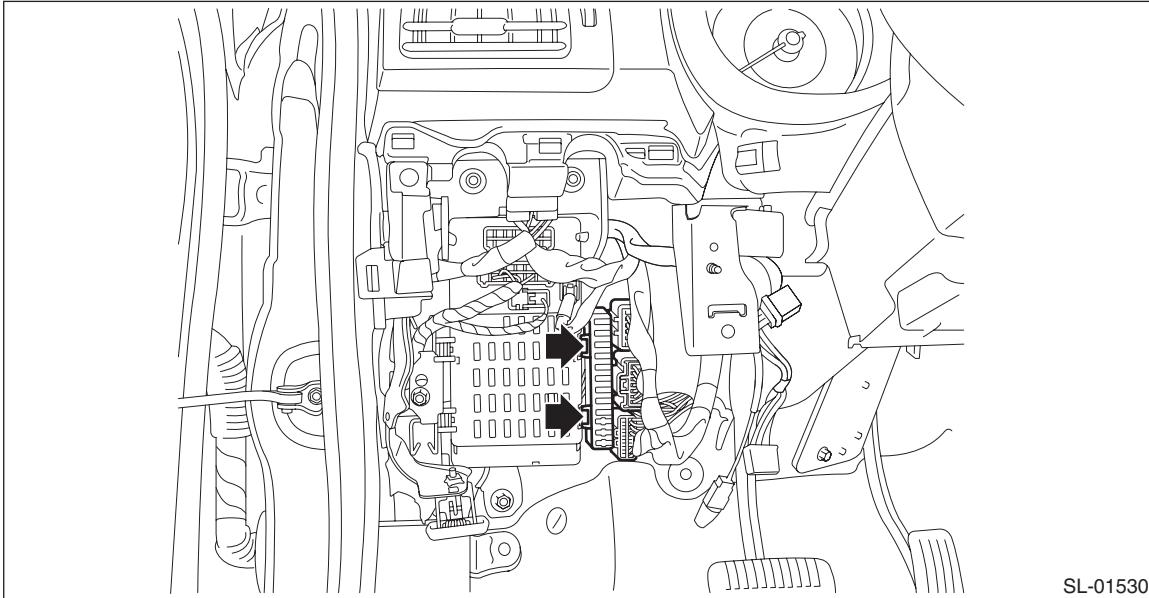

- 3) Remove the relay & fuse box.
 - (1) Disconnect the connector.
 - (2) Remove the bolts and nuts, and remove the relay & fuse box.

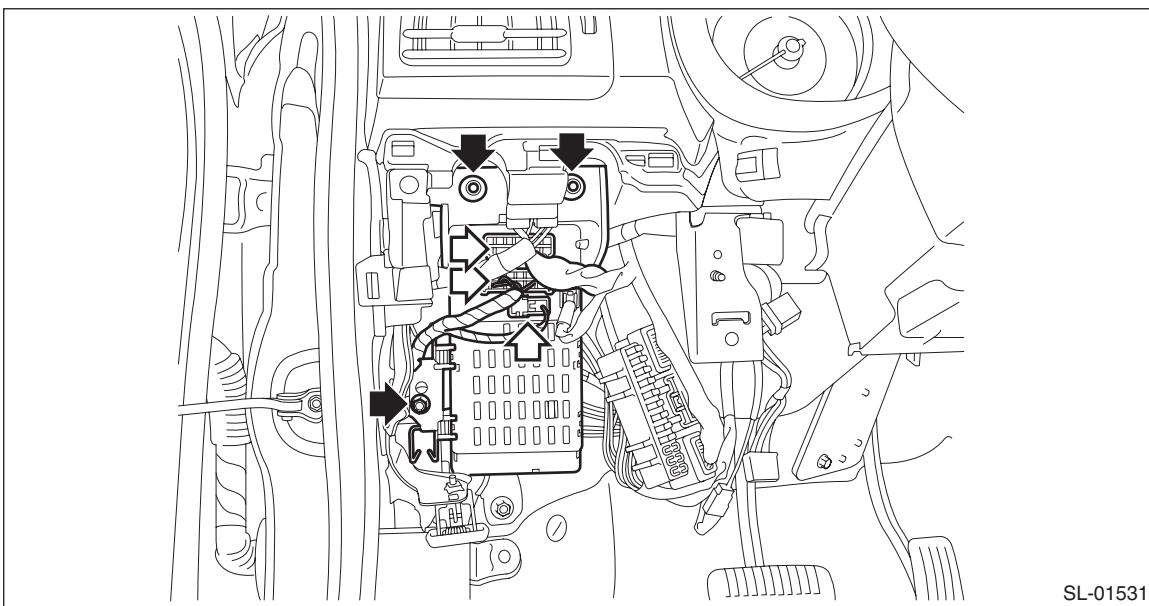

Keyless Access CM


SECURITY AND LOCKS

4) Remove the keyless access CM.


CAUTION:

Be careful to keep water and other foreign materials away from body integrated unit.

(1) Disconnect the connector.

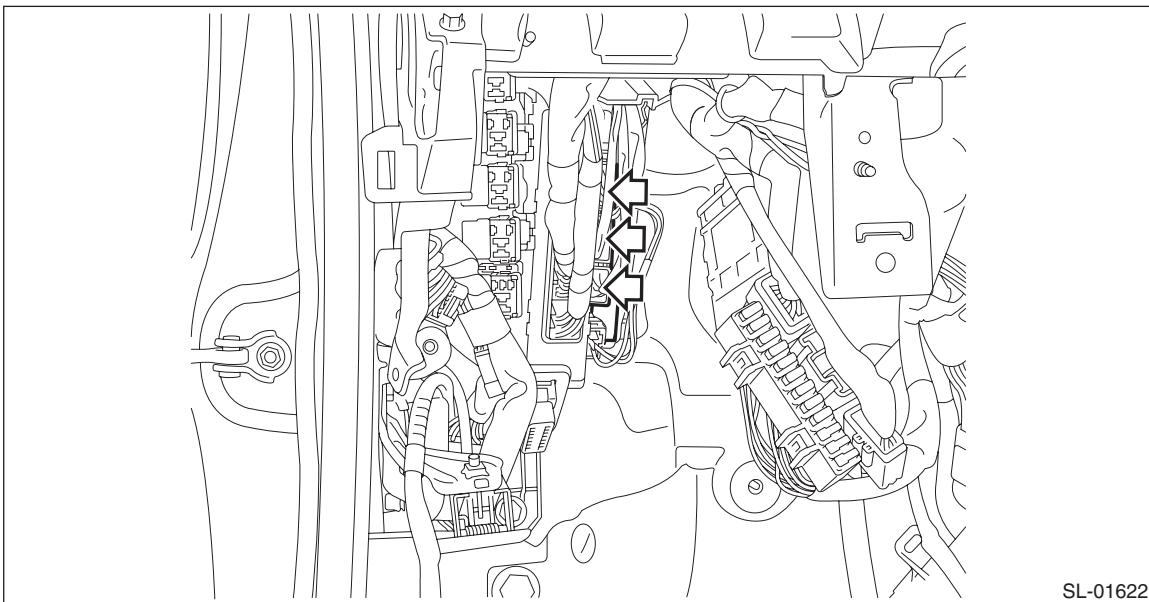

(2) Release the claws, and pull out the keyless access CM from the bracket.

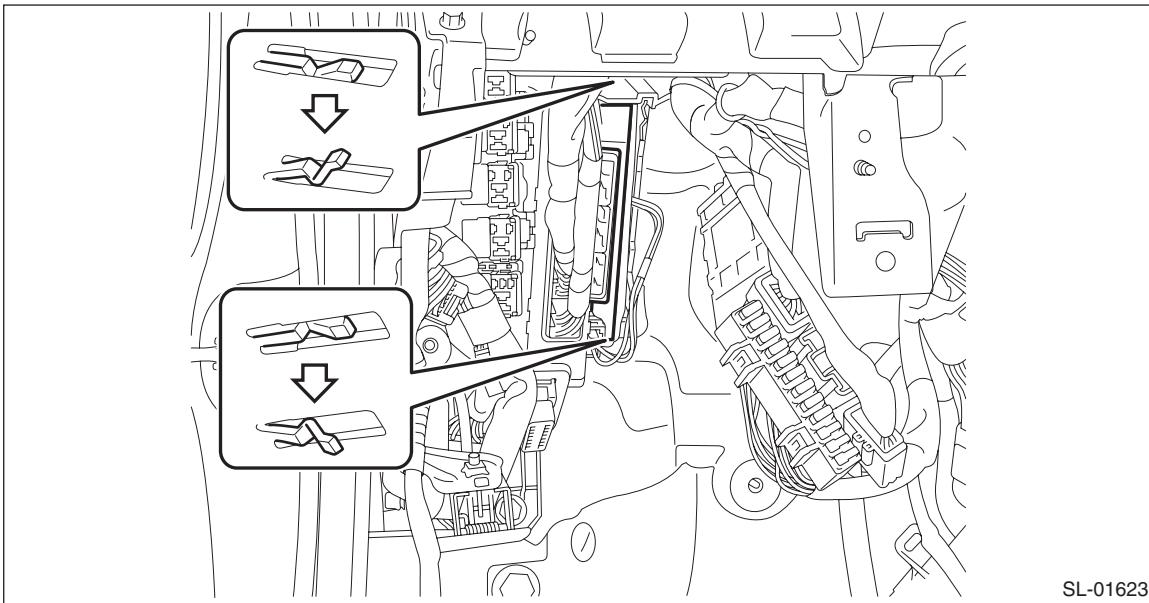

B: INSTALLATION

CAUTION:

Registration of the immobilizer is necessary when a immobilizer-related control module has been replaced. For detailed operation procedure, refer to the "REGISTRATION MANUAL FOR IMMOBILIZER".

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Instrument Panel Lower Cover". <Ref. to EI-60, INSTALLATION, Instrument Panel Lower Cover.>

Tightening torque:

Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)