



36.Starter Relay (Push Button Start)

A: REMOVAL

- 1) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-39, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

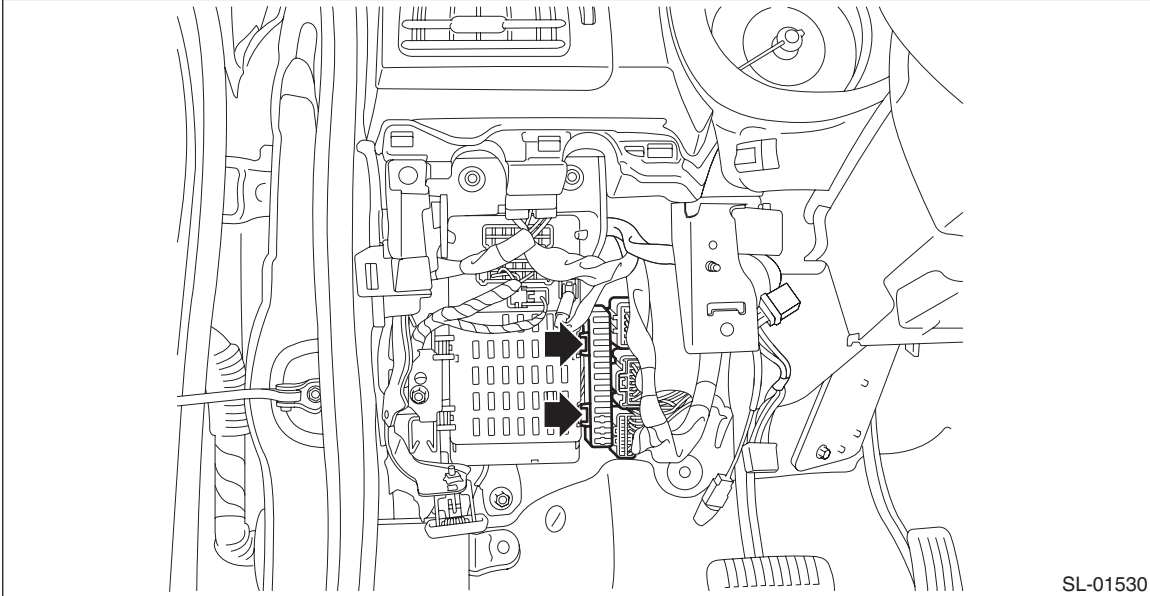


- 3) Remove the relay & fuse box.
 - (1) Disconnect the connector.
 - (2) Remove the bolts and nuts, and remove the relay & fuse box.

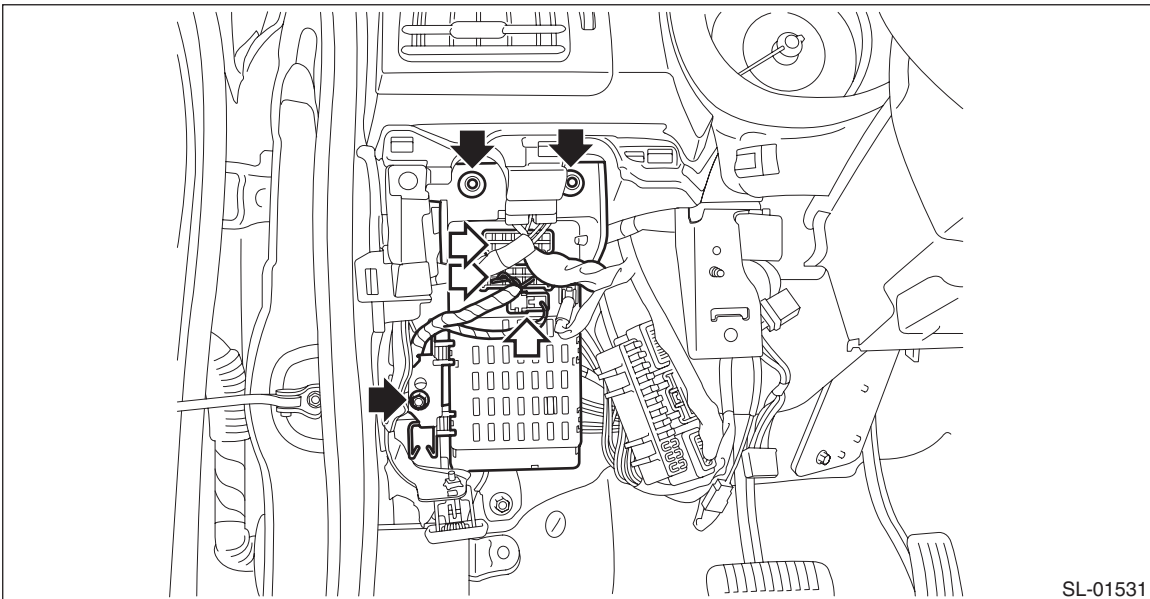

Starter Relay (Push Button Start)

SECURITY AND LOCKS

4) Remove the starter relay (push button start) (A) from the relay holder.

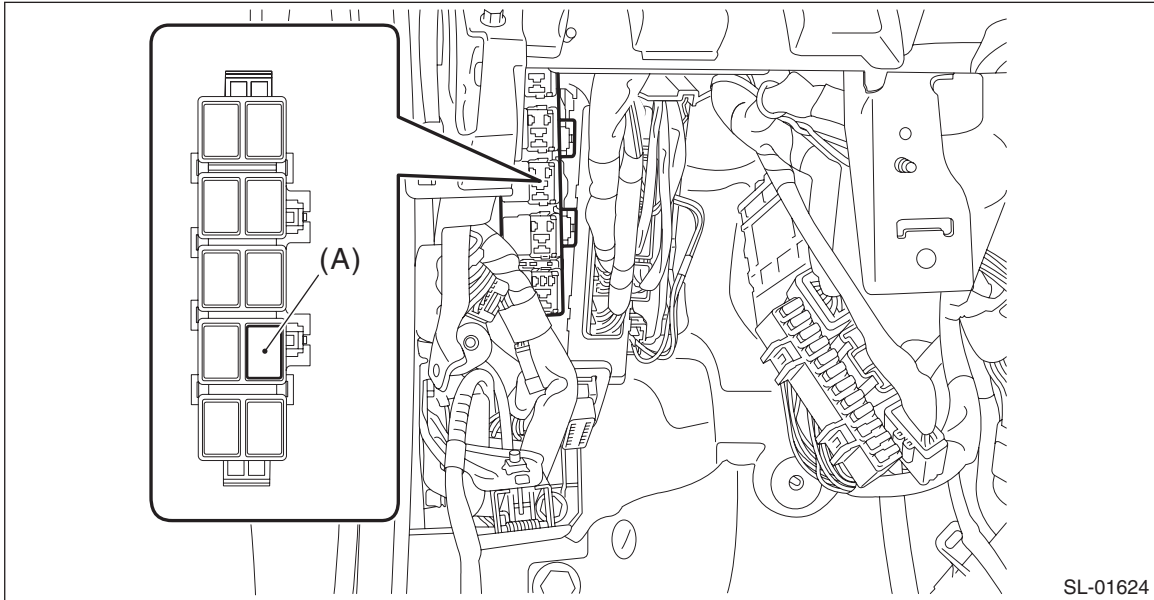

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Instrument Panel Lower Cover". <Ref. to EI-60, INSTALLATION, Instrument Panel Lower Cover.>

Tightening torque:

Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

Refer to "CHECK RELAY" in "Relay and Fuse". <Ref. to SL-10, CHECK RELAY, INSPECTION, Relay and Fuse.>