



## 38.IG Relay2 (Push Button Start)

### A: REMOVAL

- 1) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-39, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

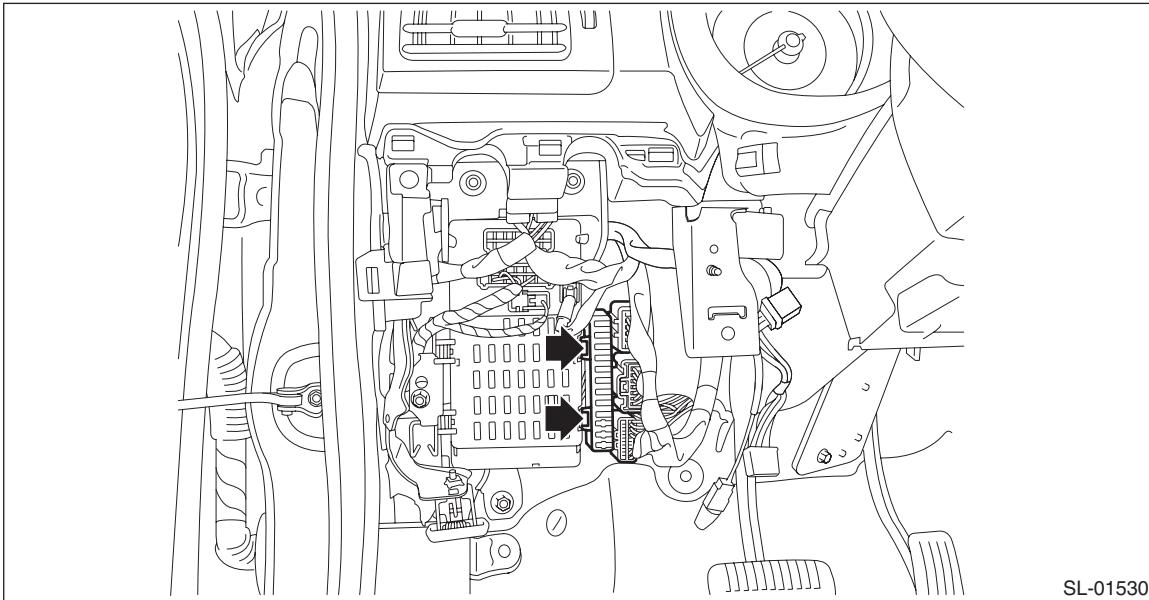


- 3) Remove the relay & fuse box.
  - (1) Disconnect the connector.
  - (2) Remove the bolts and nuts, and remove the relay & fuse box.

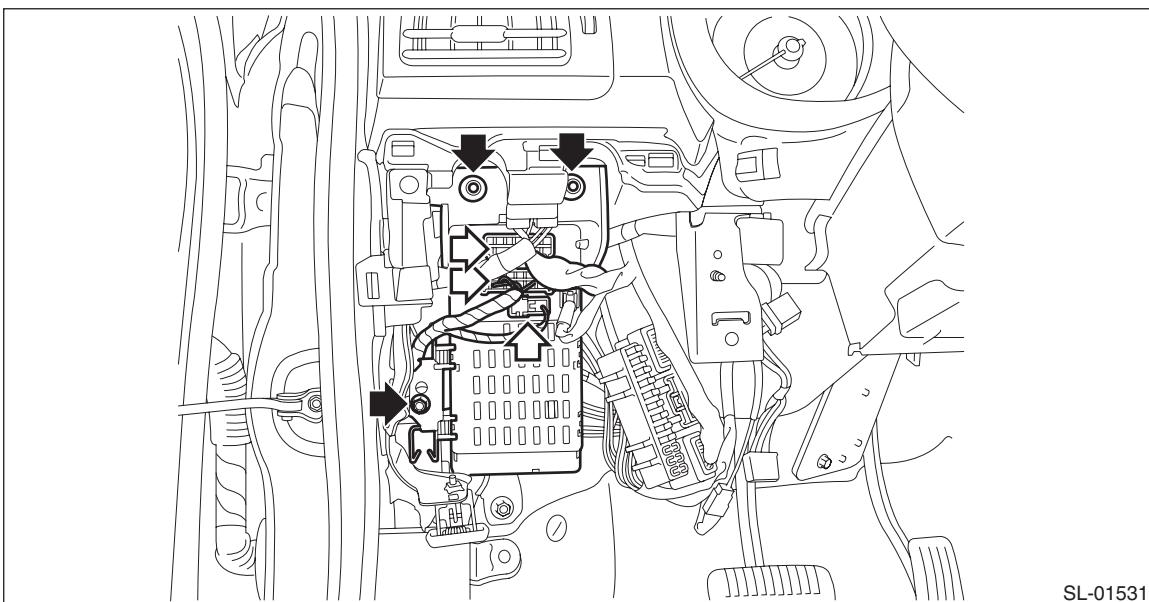

## IG Relay2 (Push Button Start)

### SECURITY AND LOCKS

- 4) Remove IG relay 2 (push button start) (A) from the relay holder.

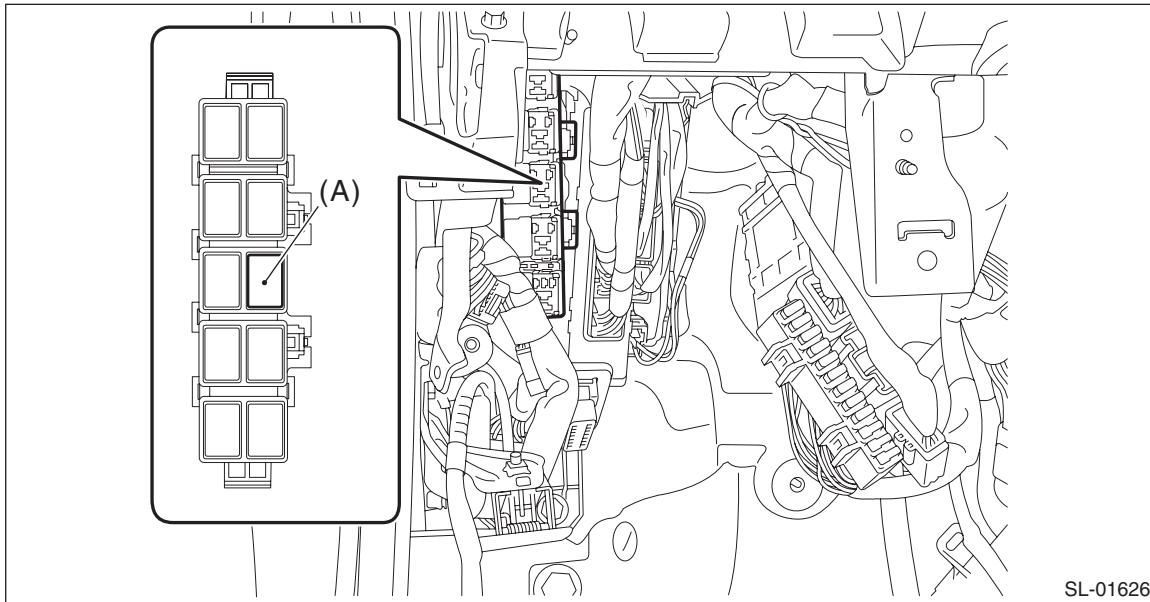

### B: INSTALLATION

#### NOTE:

Refer to "INSTALLATION" of "Instrument Panel Lower Cover". <Ref. to EI-60, INSTALLATION, Instrument Panel Lower Cover.>

#### ***Tightening torque:***

***Relay & fuse box: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)***

### C: INSPECTION

Refer to "CHECK RELAY" in "Relay and Fuse". <Ref. to SL-10, CHECK RELAY, INSPECTION, Relay and Fuse.>