



## 39. Accessory Relay (Push Button Start)

### A: REMOVAL

- 1) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-39, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

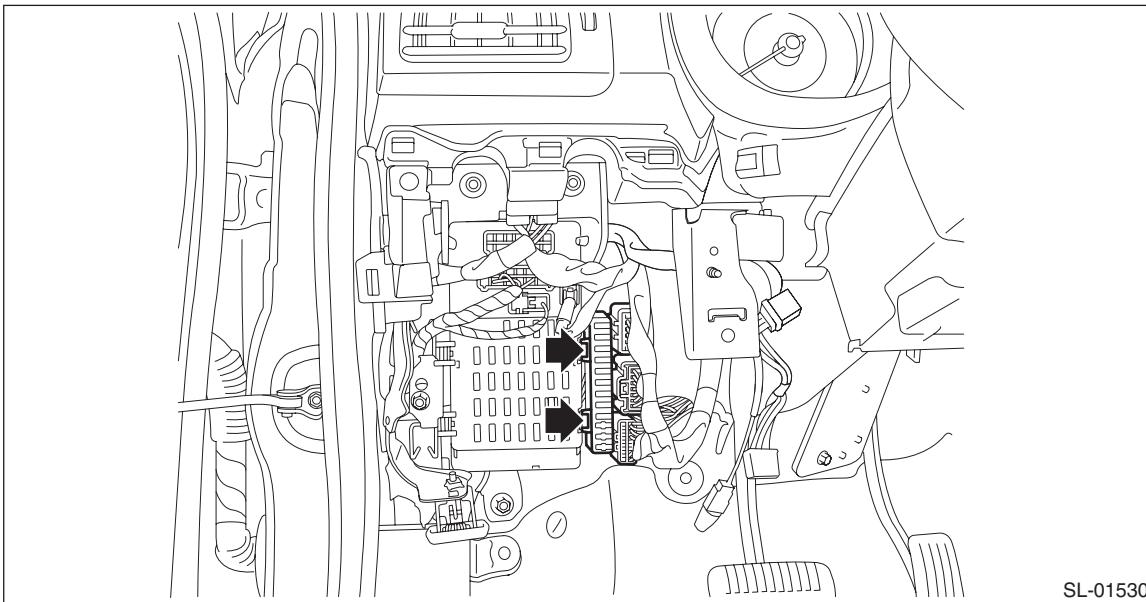

- 3) Remove the accessory relay (push button start) (A) from the relay and fuse box.

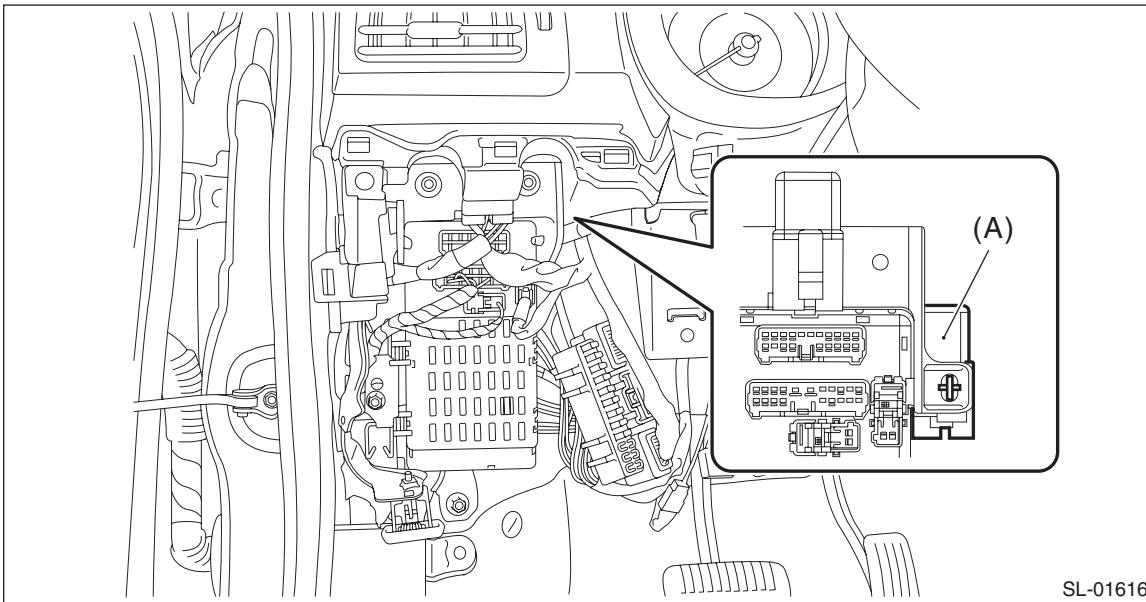

### B: INSTALLATION

Install each part in the reverse order of removal.

#### NOTE:

Refer to "INSTALLATION" of "Instrument Panel Lower Cover". <Ref. to EI-60, INSTALLATION, Instrument Panel Lower Cover.>

### C: INSPECTION

Refer to "CHECK RELAY" in "Relay and Fuse". <Ref. to SL-10, CHECK RELAY, INSPECTION, Relay and Fuse.>