



### 41. Access Buzzer

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the clips, and turn over the front side of the mud guard - front.

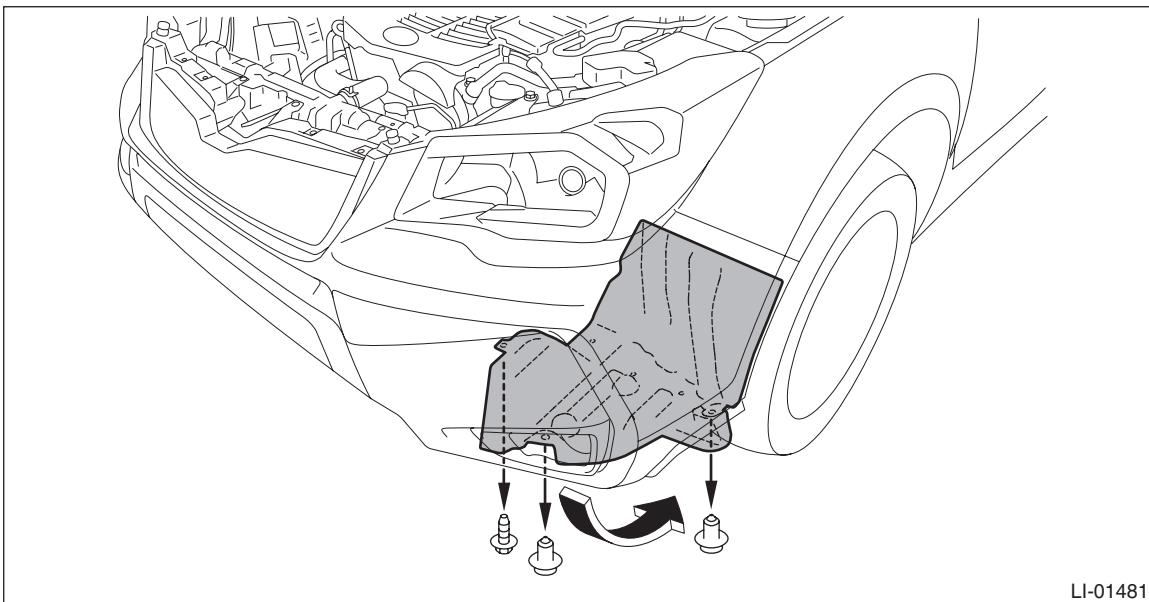

- 4) Remove the keyless buzzer.
  - (1) Disconnect the connector.
  - (2) Remove the clip and detach the keyless buzzer.

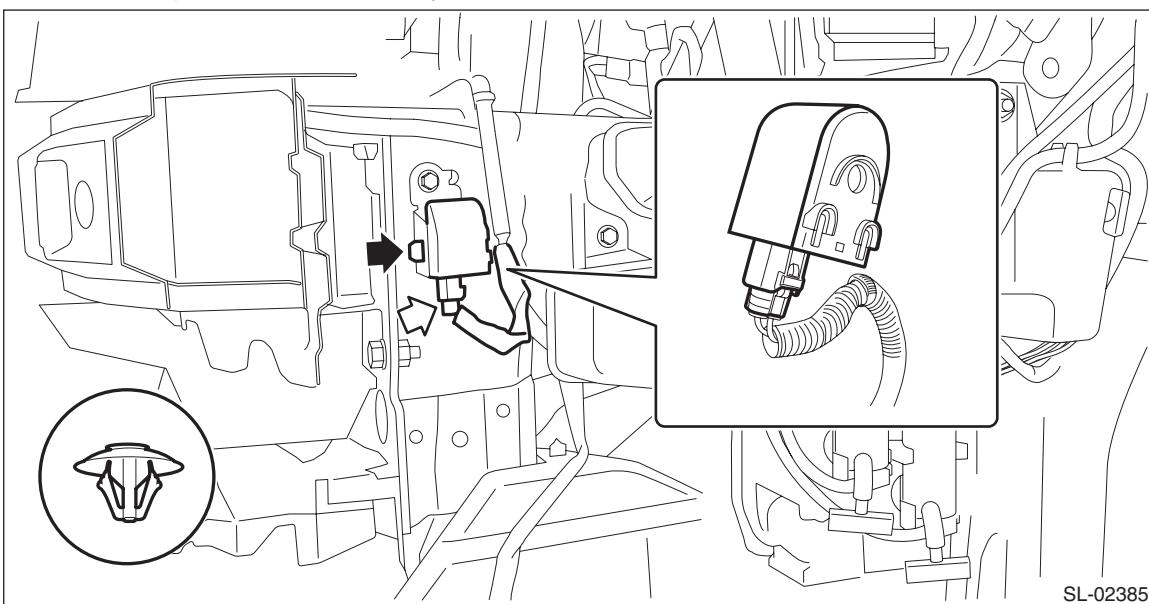

#### B: INSTALLATION

Install each part in the reverse order of removal.

**C: INSPECTION**

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to BC(diag)-15, OPERATION, User Customizing.>

If a buzzer does not sound, refer to “Diagnostics with Phenomenon” of “KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)” section. <Ref. to KPS(diag)-98, KEYLESS ACCESS EXTERNAL BUZZER DOES NOT BEEP, INSPECTION, Diagnostics with Phenomenon.>