


5. Sunroof Assembly

A: REMOVAL

CAUTION:

- Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-9, CAUTION, General Description.>
 - When removing the clip, use great care not to damage the trim panel - roof assembly.
- 1) Completely close the lid assembly - sunroof, and open the sunshade assembly.
 - 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
 - 3) Remove the trim panel - roof assembly. <Ref. to EI-109, REMOVAL, Roof Trim.>
 - 4) Disconnect the harness connector of the motor assembly.
 - 5) Remove the curtain airbag. <Ref. to AB-73, REMOVAL, Curtain Airbag Module.>
 - 6) Remove the rail assembly.
 - (1) Remove the drain tube - sunroof.

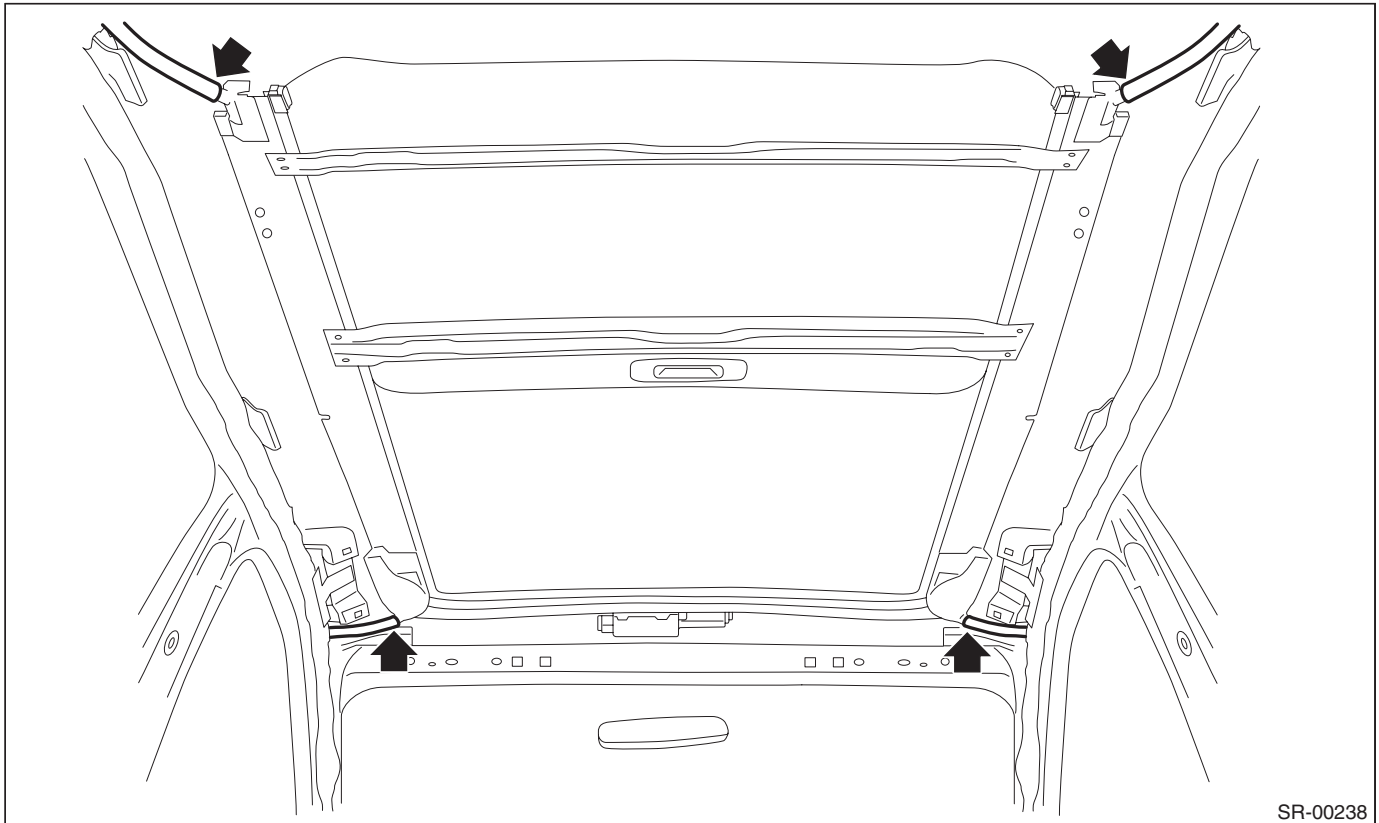


SR-00238


Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- (2) Remove the bolts, and then remove the cover - sunroof.

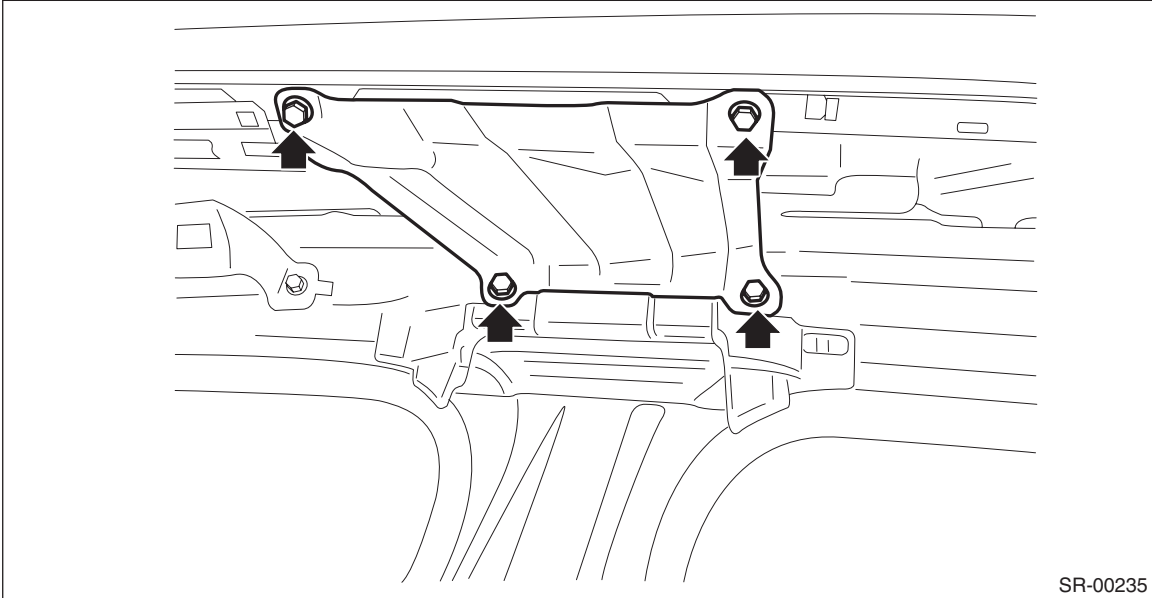


- (3) Remove the bolts, and then remove the bracket - sunroof.

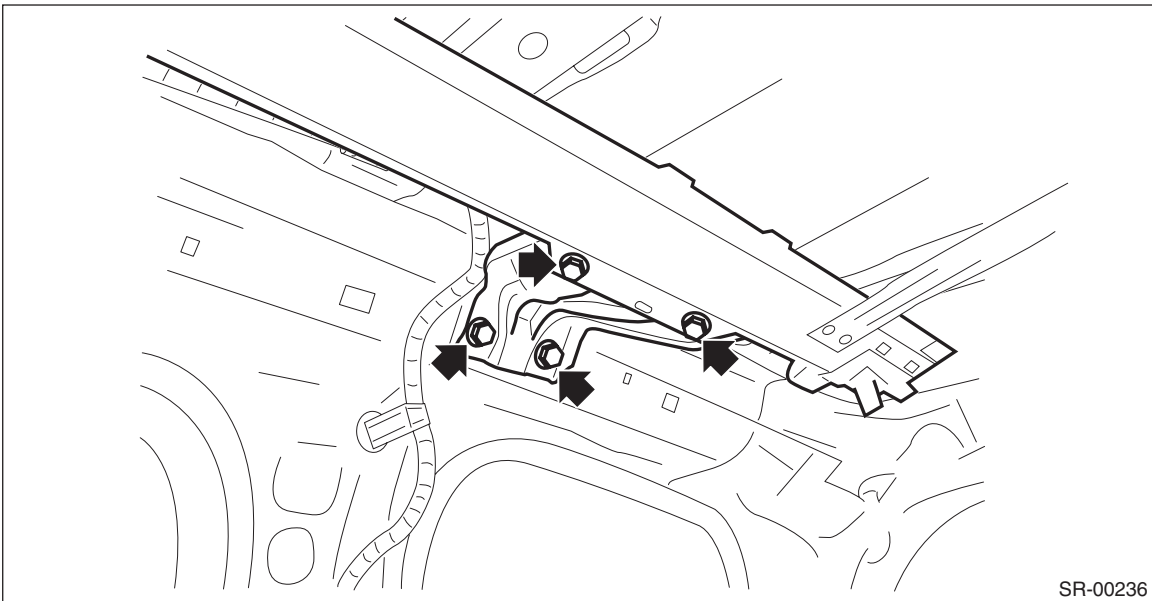

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

(4) Remove the bolts, then remove the rail assembly.

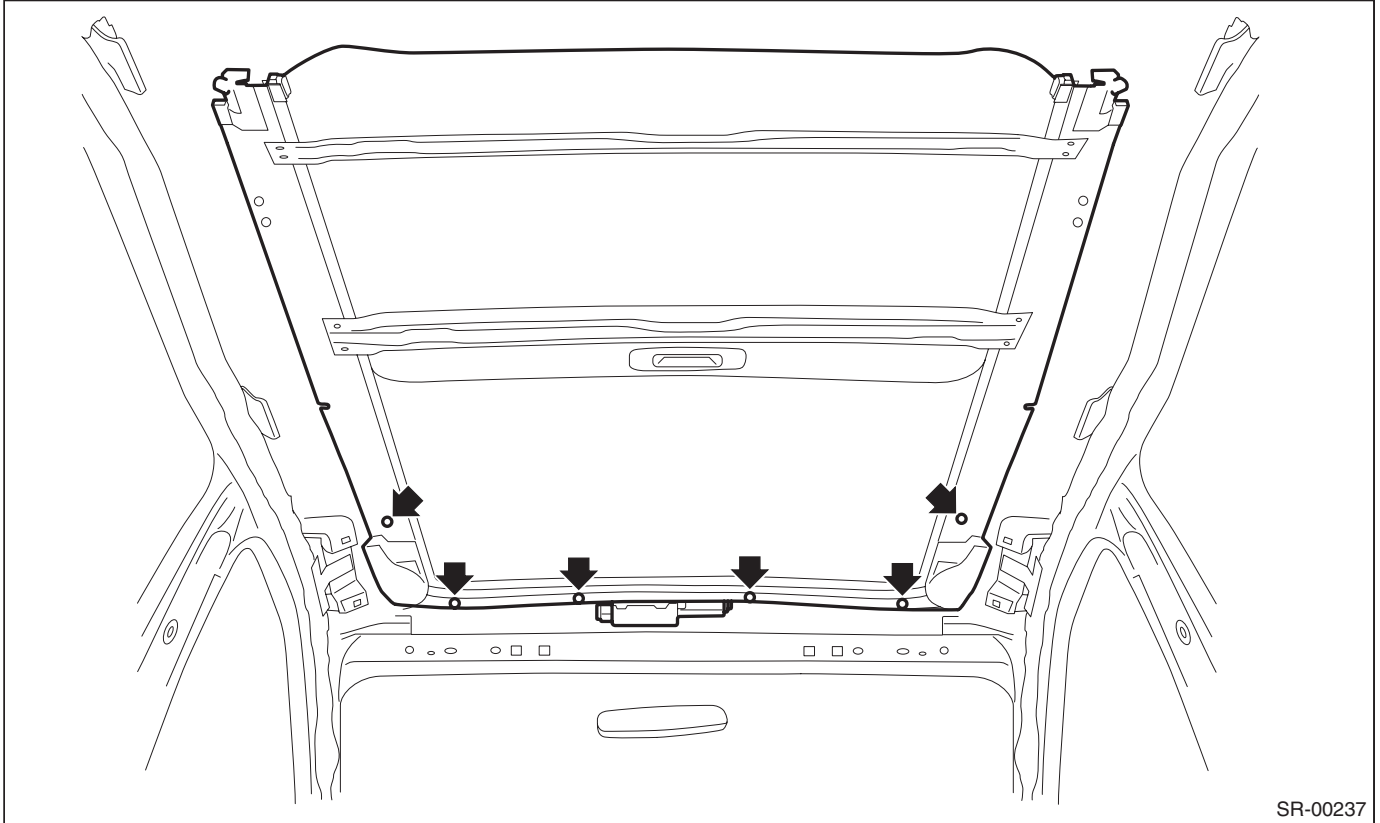

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

B: INSTALLATION

CAUTION:

Be careful not to snag the harness.

Install each part in the reverse order of removal.

Tightening torque:


Refer to “COMPONENT” of “General Description”. <Ref. to SR-2, COMPONENT, General Description.>

NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube - sunroof, insert it securely into drain pipe.


Length A:

15 mm (0.59 in) or more

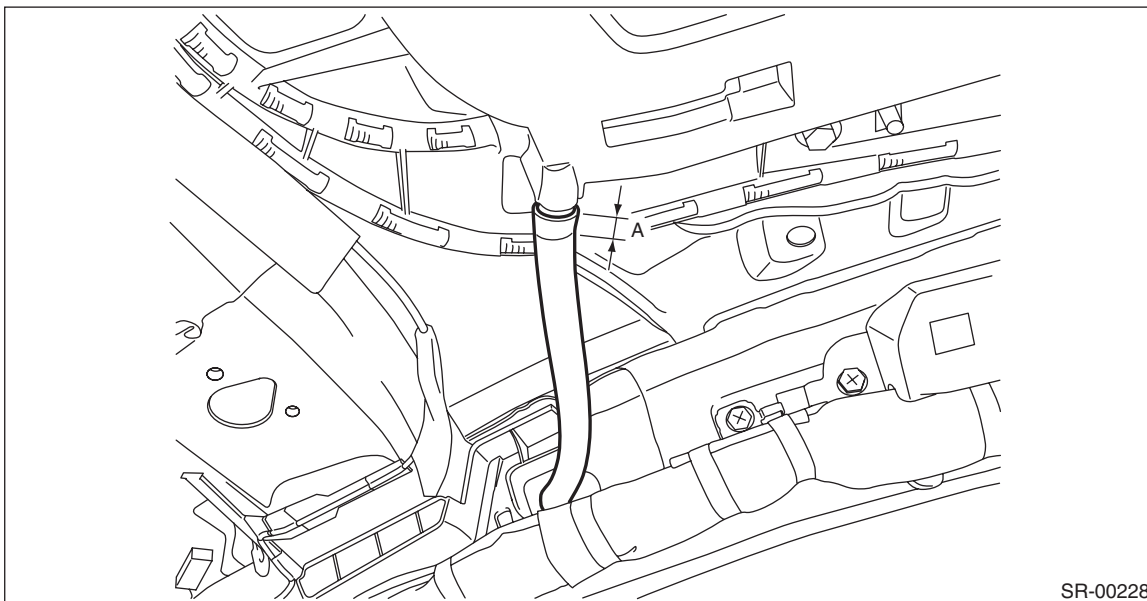

C: DISASSEMBLY


- 1) Remove the screw and remove the sunroof motor.

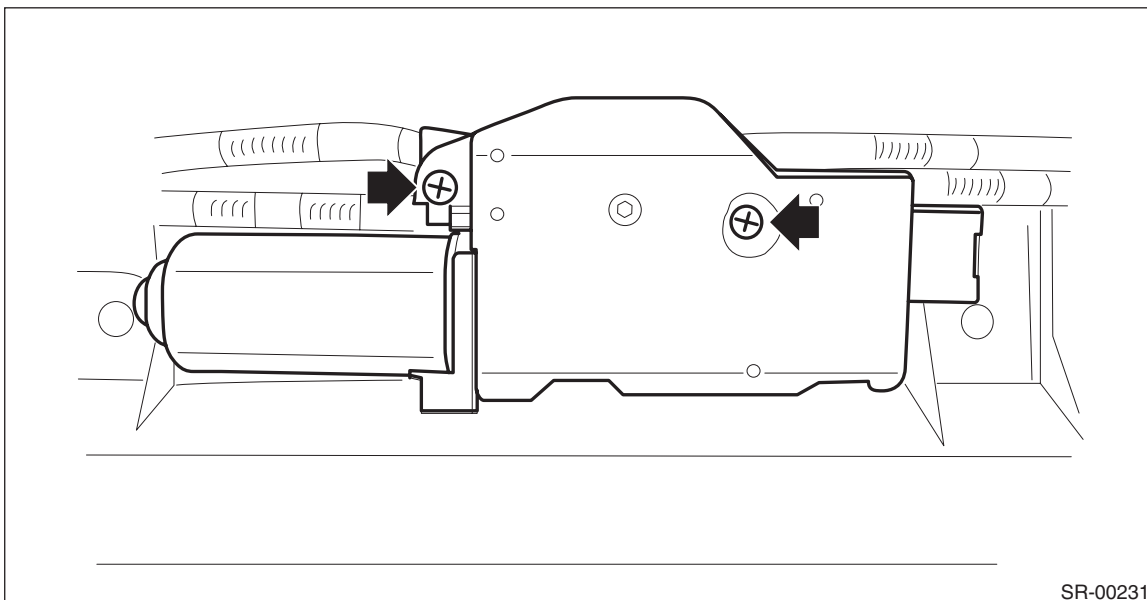

Sunroof Assembly

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- 2) Remove the stopper rubber and pull out the sunshade assembly from the rail assembly - sunroof.

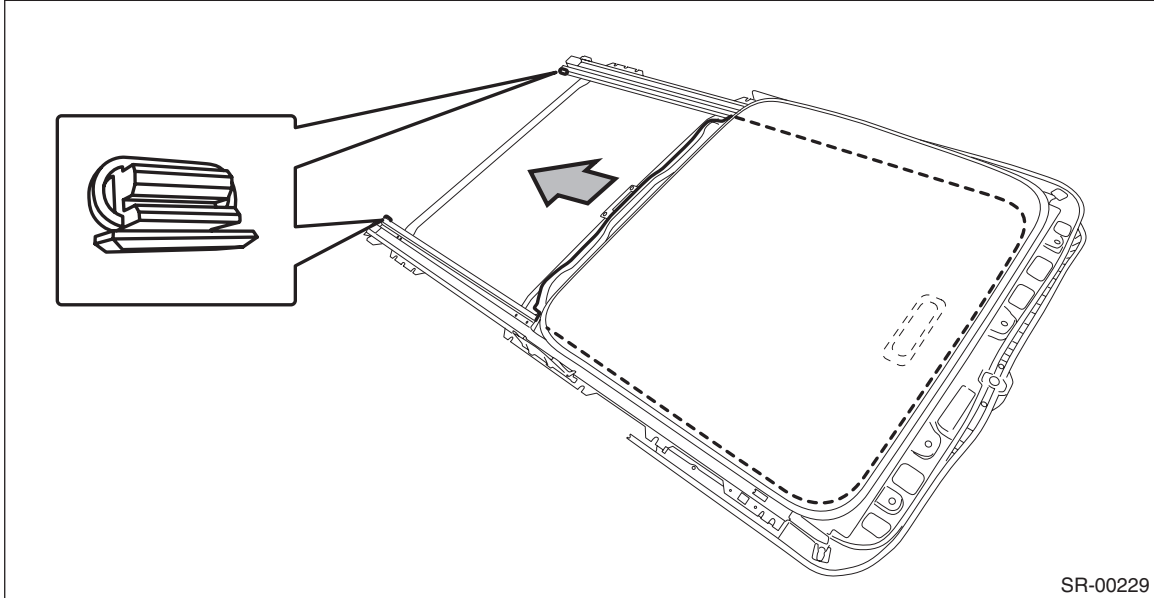

D: ASSEMBLY

Install each part in the reverse order of removal.