

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

8. Sunshade


A: REMOVAL

CAUTION:

- Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-9, CAUTION, General Description.>

- When removing the clip, use great care not to damage the trim panel - roof assembly.

- 1) Completely close the lid assembly - sunroof, and open the sunshade assembly.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the trim panel - roof assembly. <Ref. to EI-109, REMOVAL, Roof Trim.>
- 4) Disconnect the harness connector of the motor assembly - sun roof.
- 5) Remove the curtain airbag. <Ref. to EI-109, REMOVAL, Roof Trim.>
- 6) Remove the rail assembly - sunroof.
 - (1) Remove the drain tube - sunroof.

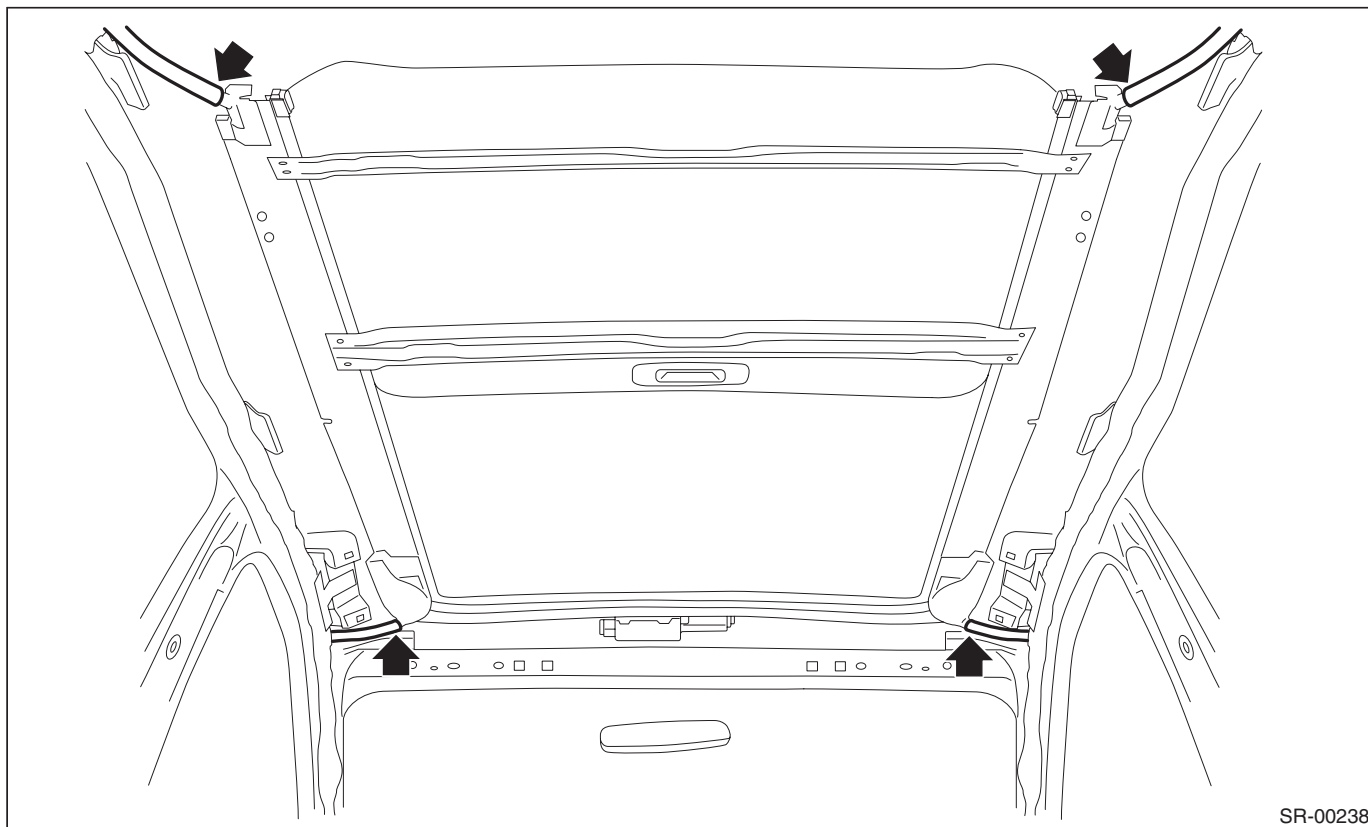


SR-00238


Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- (2) Remove the bolts, and then remove the cover - sunroof.

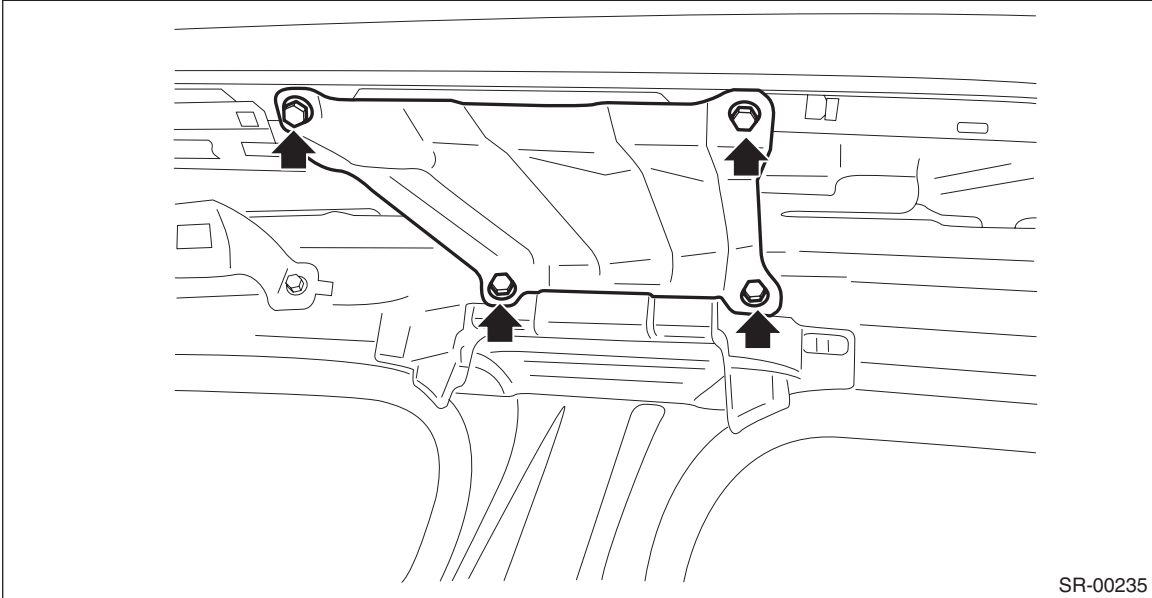


- (3) Remove the bolts, and then remove the bracket - sunroof.

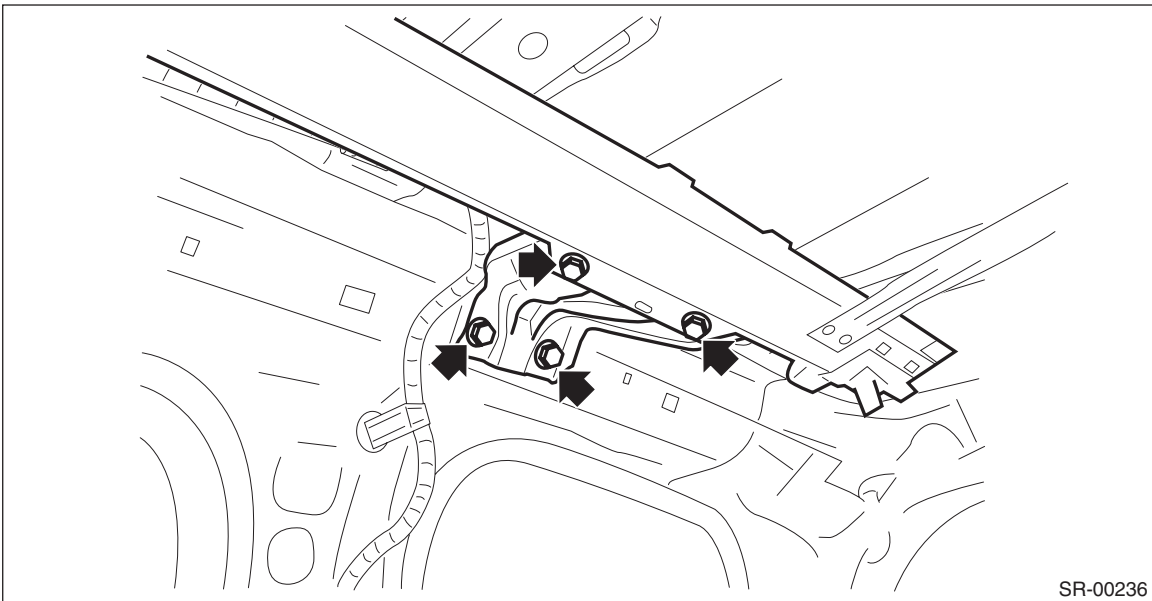

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


- (4) Remove the bolt, and then remove the rail assembly - sunroof.

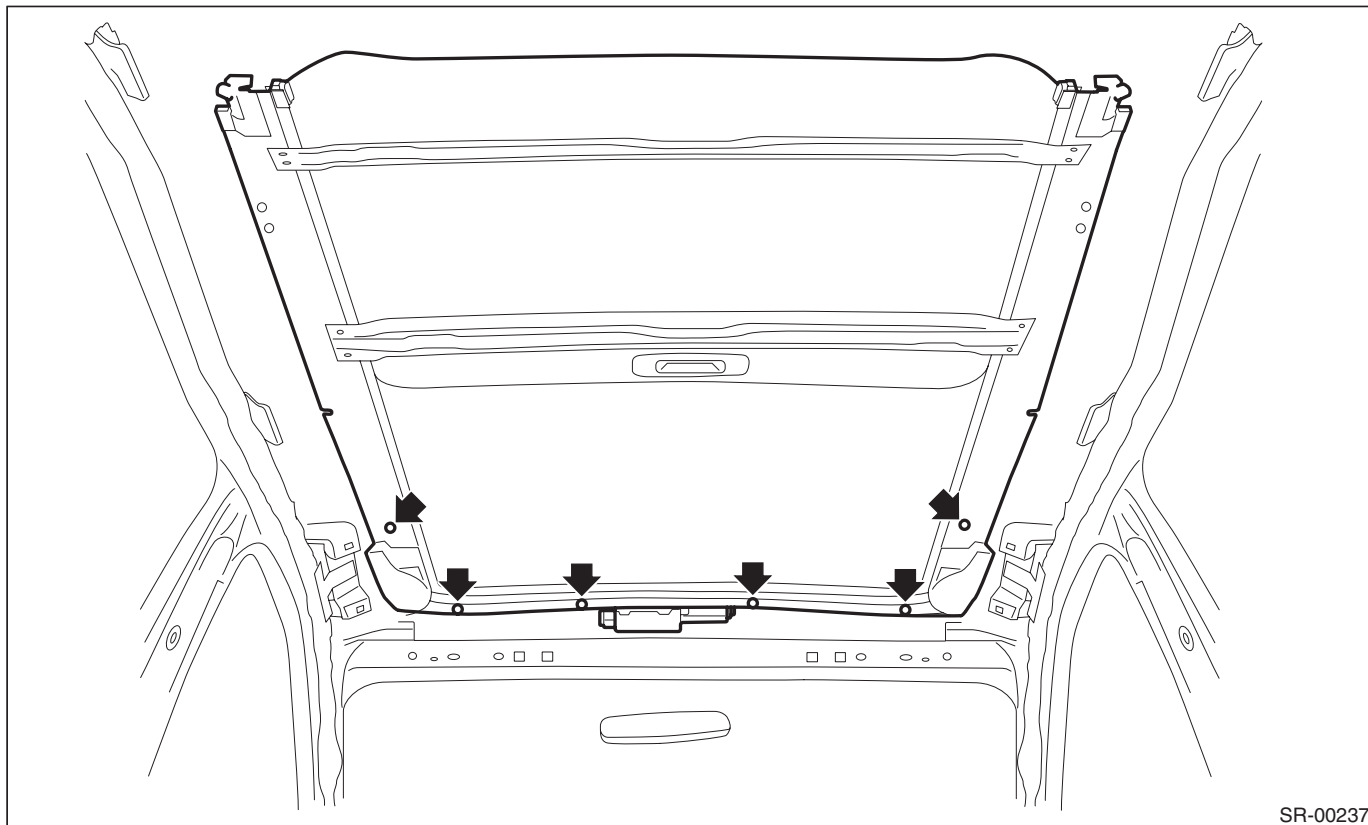

CAUTION:

Be careful not to damage the sunshade assembly.

- 7) Remove the stopper rubber and pull out the sunshade assembly from the rail assembly - sunroof.

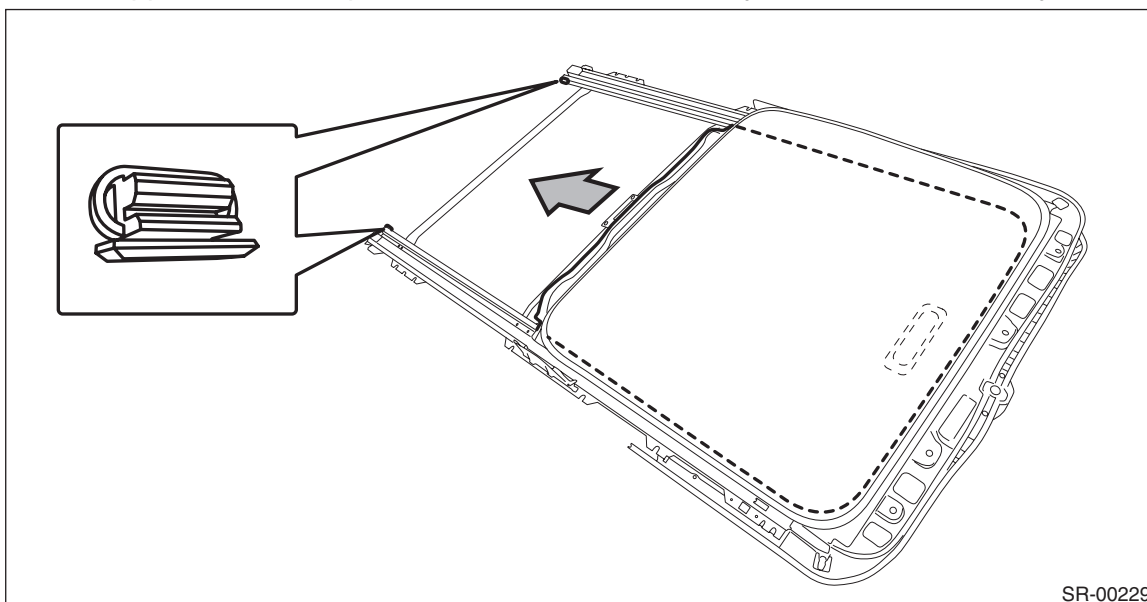

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SR-2, COMPONENT, General Description.>


C: INSPECTION

1. MOVING LOAD OF SUNSHADE ASSEMBLY

- 1) Attach a spring scale together with a cloth to the edge of sunshade assembly.
- 2) Pull the spring scale to check the moving load of the sunshade assembly.

Moving load of sunshade assembly:

9.8 — 25 N (1.00 — 2.55 kgf, 2.2 — 5.6 lbf)

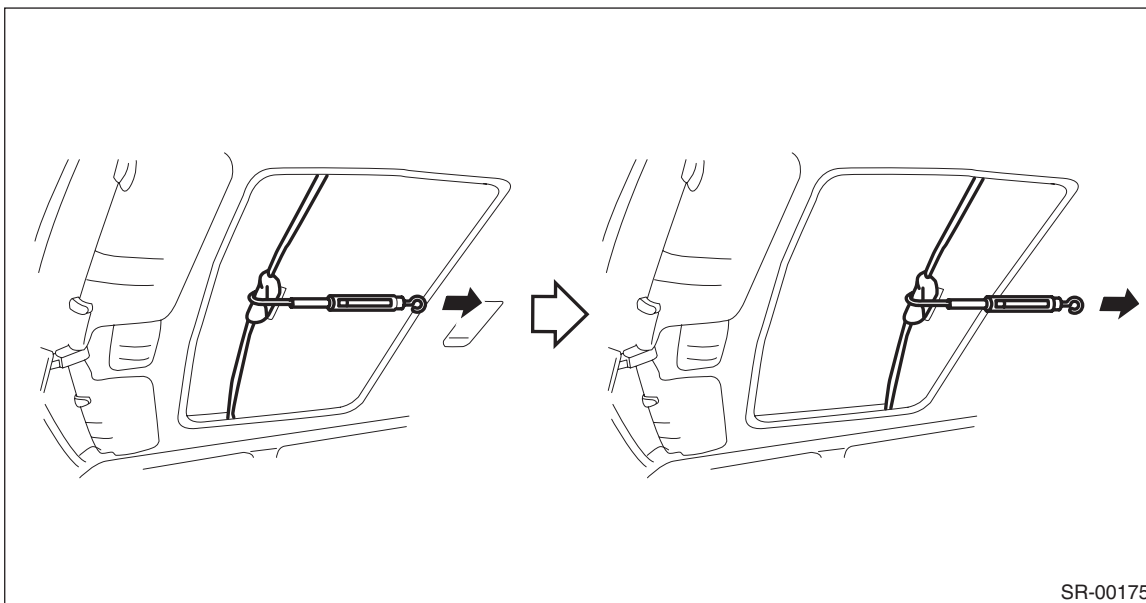

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while the sunshade assembly is sliding smoothly.

- 3) If the inspection result exceeds the standard, check the sunshade assembly or the rail assembly - sunroof for improper installation, and replace if necessary.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Under Cover	22
3. Mud Guard	23
4. Floor Under Protector	24
5. Fuel Tank Protector	25
6. Front Grille	26
7. Front Hood Duct	30
8. Front Bumper	31
9. Rear Bumper	42
10. Cowl Panel	46
11. Side Garnish	49
12. Roof Spoiler	50
13. Roof Molding	52
14. Roof Rail	54
15. Door Trim	55
16. Instrument Panel Lower Cover	59
17. Glove Box	61
18. Center Console	63
19. Console Box	65
20. Instrument Panel Assembly	69
21. Lower Inner Trim	92
22. Upper Inner Trim	97
23. Rear Quarter Trim	102
24. Sun Visor	107
25. Assist Grip	108
26. Roof Trim	109
27. Rear Gate Trim	122
28. Floor Mat	124
29. Rear Gate Garnish	126
30. Heat Shield Cover	129
31. Ornament	130