


2. Front Brake Pad

A: REMOVAL


- 1) Lift up the vehicle, and then remove the front wheels.
- 2) Remove the front brake pad.
 - (1) Remove the caliper bolt on the lower side.
 - (2) Raise the caliper body assembly and support it.

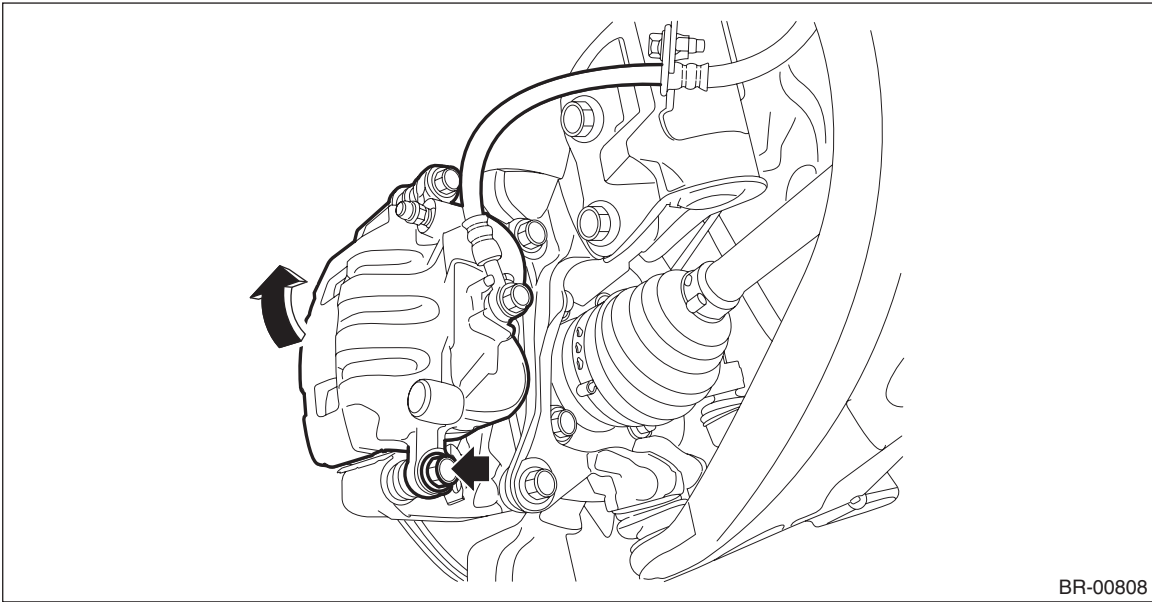

NOTE:

Do not disconnect the brake hose from the caliper body assembly.

- (3) Remove the brake pad from support - front disc brake.

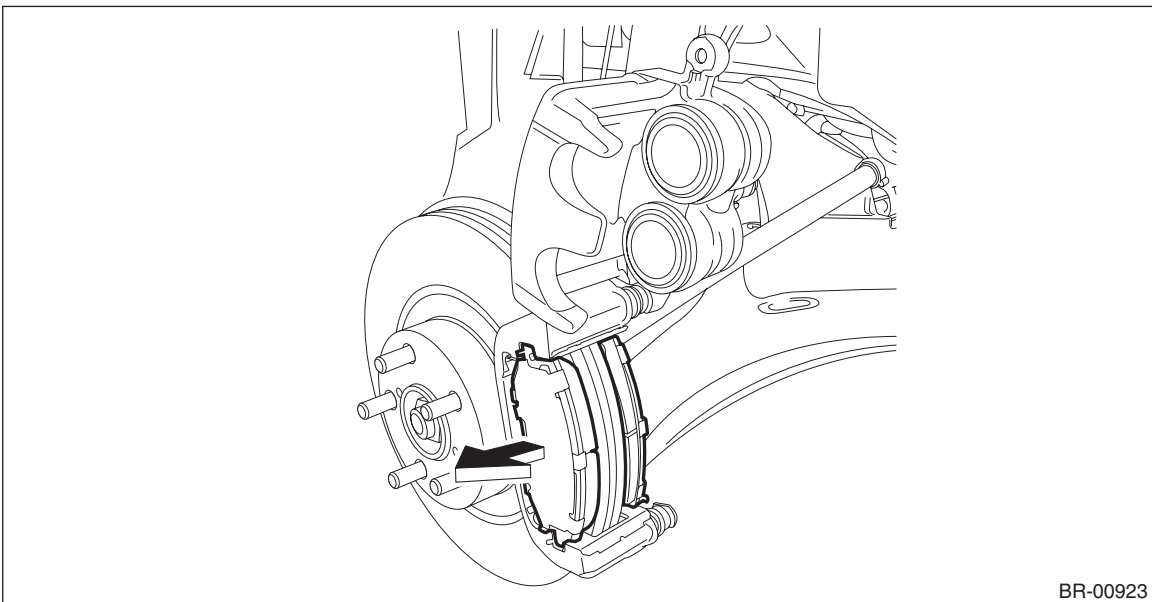

Front Brake Pad

BRAKE

B: INSTALLATION

NOTE:

Before installation, remove mud and foreign matter from the caliper body assembly and support - front disc brake.

1) Check the brake pad. <Ref. to BR-18, INSPECTION, Front Brake Pad.>

2) Apply a thin coat of grease to the pad clip. (A)


Grease:

Molykote M7439 (Part No. 003602001) or an item contained in the pad kit

3) Apply a thin coat of grease to the pad and both sides of the shim - disc brake front inner (a). (B)

Grease:

Molykote AS880N (Part No. K0777YA010) or an item contained in the pad kit

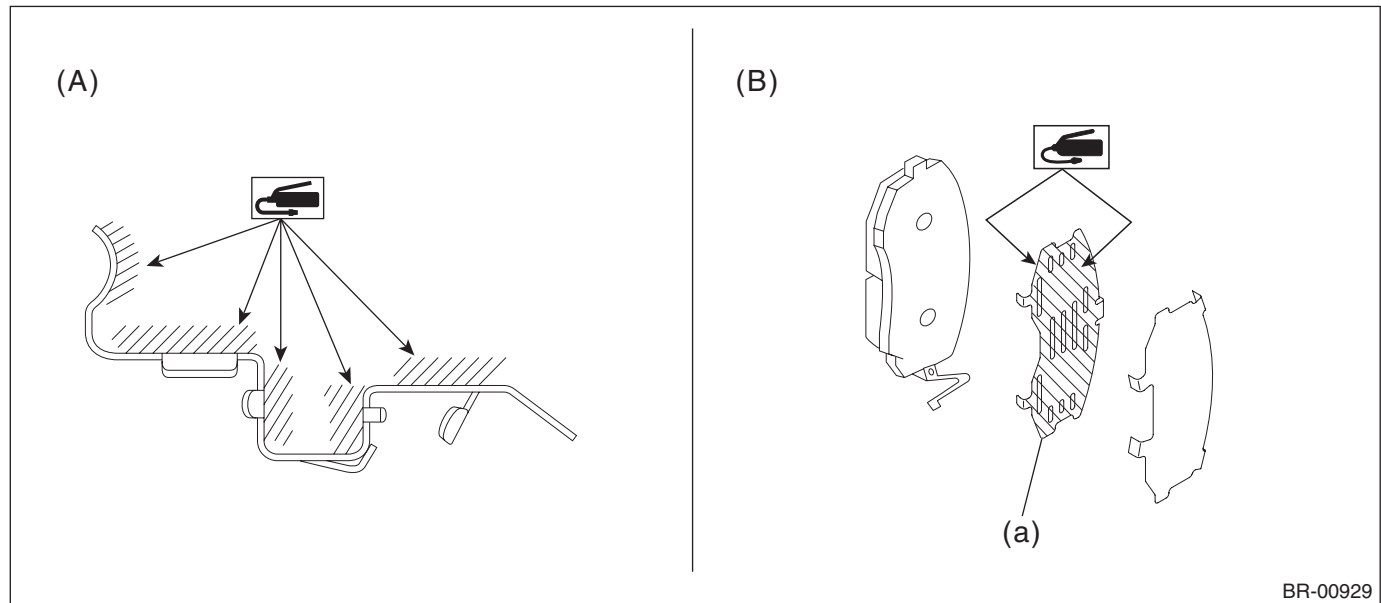


BR-00929

4) Install the brake pad to the support - front disc brake.

CAUTION:

- Be sure to install so that the pad return spring faces the input side of the direction of brake rotor rotation, as shown in the figure.
- Correctly install the pad return spring to the supporting surface of the pad clip as shown in the figure.
- If the pad return spring is deformed or damaged, replace the brake pad with a new part.

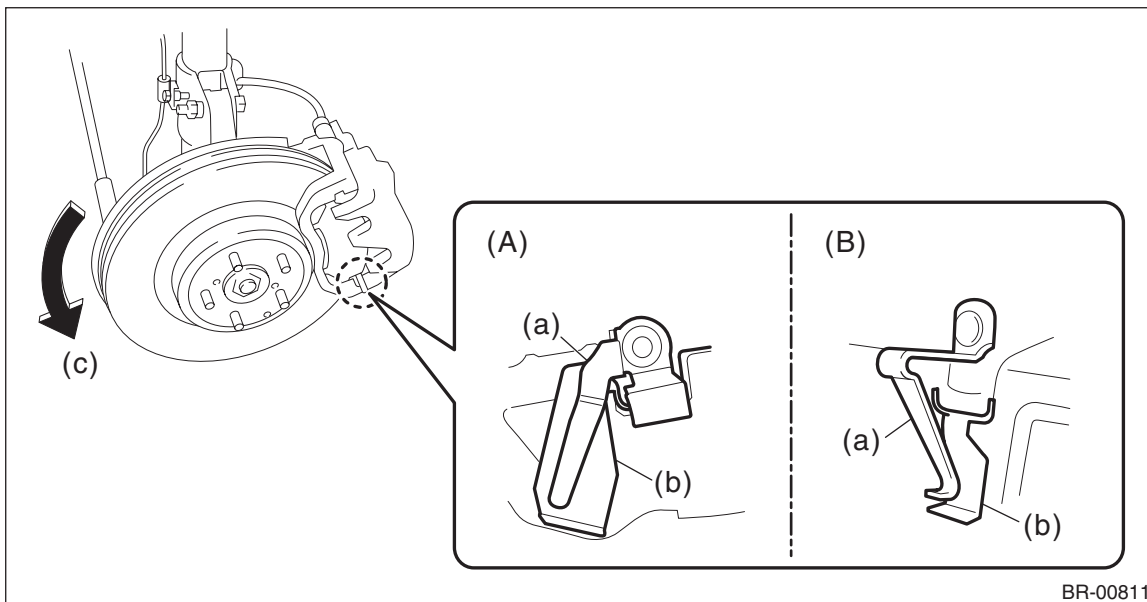

BR-00811

(A) 16-inch

(B) 17-inch


(a) Pad return spring

(b) Supporting surface of pad clip

(c) Direction of brake rotor rotation

NOTE:

Install the brake pad indicator in proper direction.

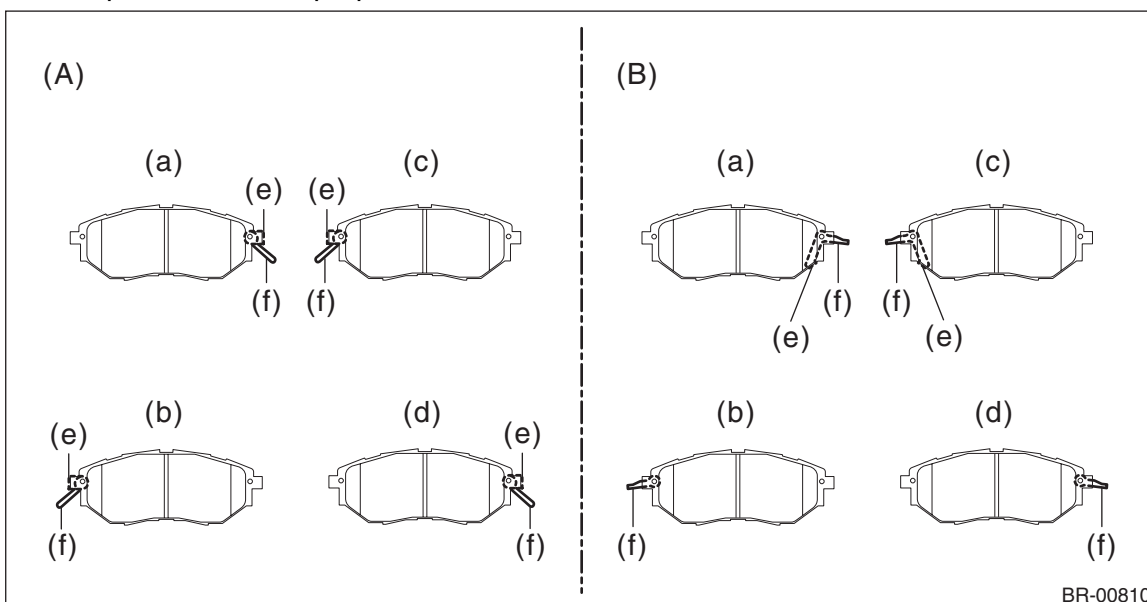

BR-00810

(A) 16-inch

(B) 17-inch

(a) LH — IN

(c) RH — IN

(e) Pad indicator

(b) LH — OUT

(d) RH — OUT

(f) Pad return spring

Front Brake Pad

BRAKE

5) Install the caliper body assembly to the support - front disc brake.

Tightening torque:

Caliper bolt: 27 N·m (2.75 kgf-m, 19.9 ft-lb)

6) Install the front wheels.

Tightening torque:


120 N·m (12.24 kgf-m, 88.5 ft-lb)

C: INSPECTION

1) Check the pad thickness (A).

NOTE:

- Always replace the pads of both wheels and both sides as a set.
- Replace pad clips if they are twisted or worn.
- Replace the pad if there is oil or grease on it.

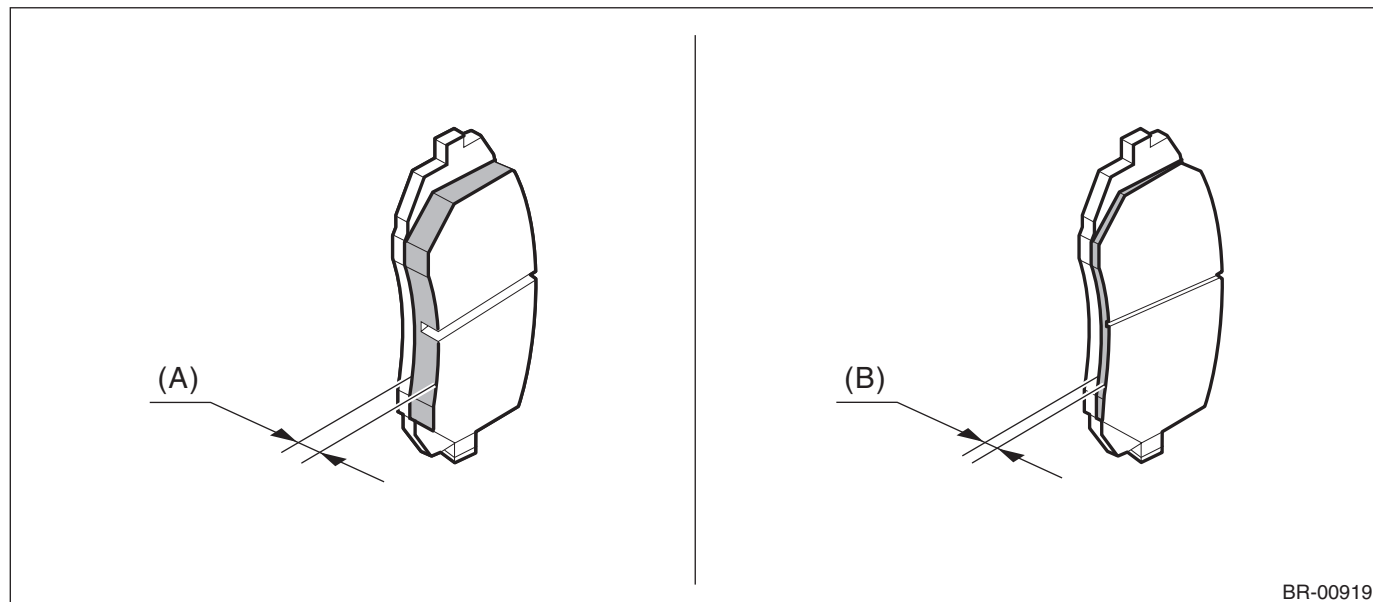

	Standard (A)	Wear limit (B)
Pad thickness	11 mm (0.43 in)	1.5 mm (0.059 in)

NOTE:

- Always replace the pads of both wheels and both sides as a set.
- Replace pad clips if they are twisted or worn.
- Wear indicators are installed on the inner and outer disc brake pads.

If the pad is worn to the limit, the end of wear indicator contacts disc rotor, and a squeaking sound is heard as the wheel rotates. If the sound is heard, replace the pad.

- Replace the pad if there is oil or grease on it.

2) If the wear limit is exceeded in the inspection, replace the brake pad.