


Electrical Component Location

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

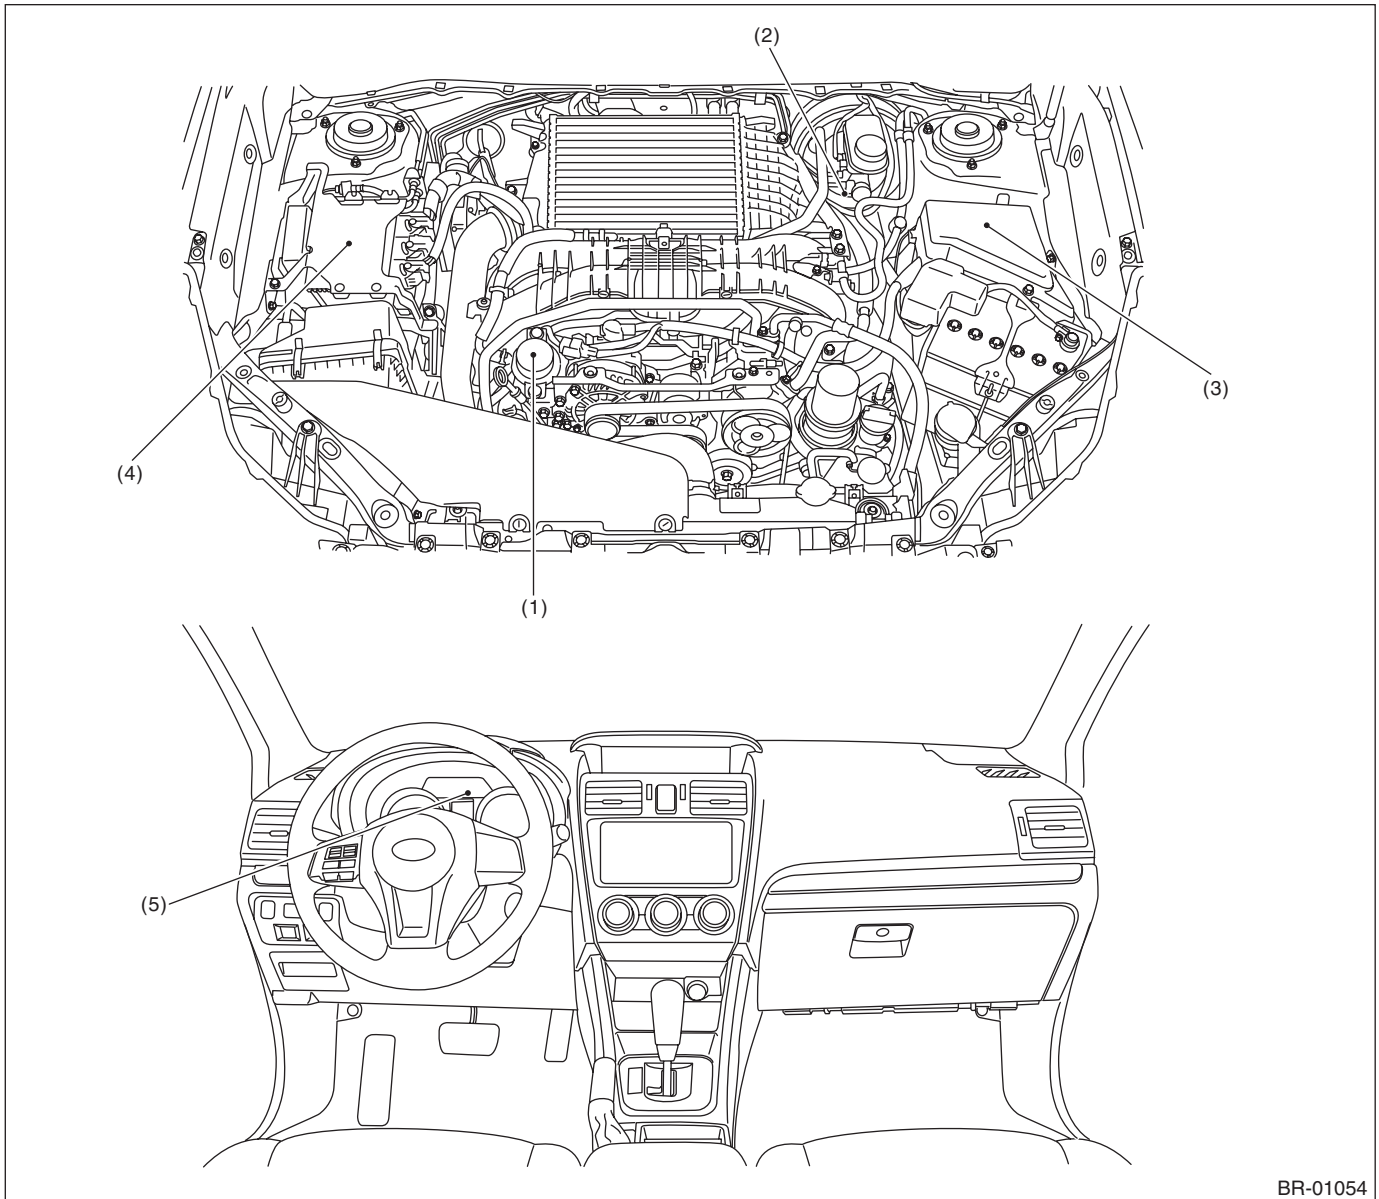


BR-01054


- | | | |
|-----------------------------------|---------------------------------|-------------------------------------|
| (1) Brake pump | (3) Brake pump relay | (5) Brake vacuum pump warning light |
| (2) Brake booster pressure sensor | (4) Engine control module (ECM) | |

Electrical Component Location


BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

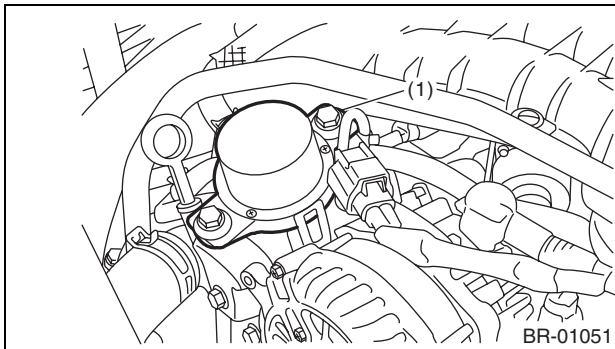


BR-01051

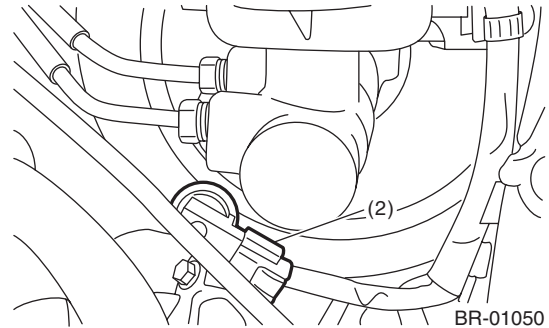


BR-01050

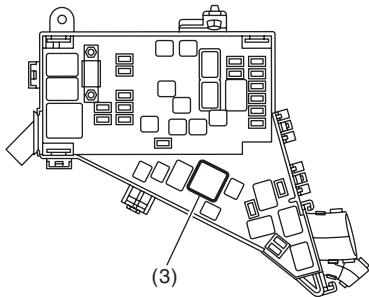

BR-01052

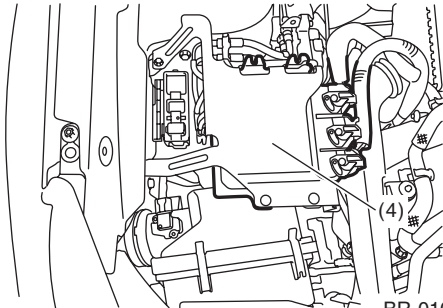

BR-01072

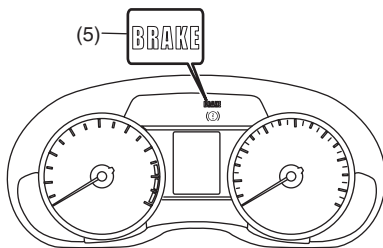

BR-01090

SUBARU.