

## General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

### 15.General Diagnostic Table

#### A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none"><li>• Improper tire pressure adjustment.</li><li>• Punctured tire</li></ul>
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none"><li>• Air pressure sensor malfunction</li><li>• Air pressure sensor is out of battery.</li><li>• Defective TPMS &amp; keyless entry control module</li><li>• Defective vehicle harness</li><li>• Defective combination meter</li></ul>
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none"><li>• Air pressure sensor is faulty.</li><li>• Defective TPMS &amp; keyless entry control module</li><li>• Defective combination meter</li></ul>

# DIFFERENTIALS

*DI*

---

	Page
1. General Description .....	2
2. Differential Gear Oil .....	19
3. Front Differential Assembly .....	21
4. Rear Differential (T-type) .....	22
5. Rear Differential (VA-type) .....	42
6. Rear Differential Front Oil Seal .....	58
7. Rear Differential Side Oil Seal .....	60
8. Rear Differential Front Member .....	61
9. Rear Differential Mount Bushing .....	62
10. Rear Differential Inspection Mode .....	66
11. General Diagnostic Table .....	68