


# Electrical Component Location

## TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

### 3. Electrical Component Location

#### A: LOCATION

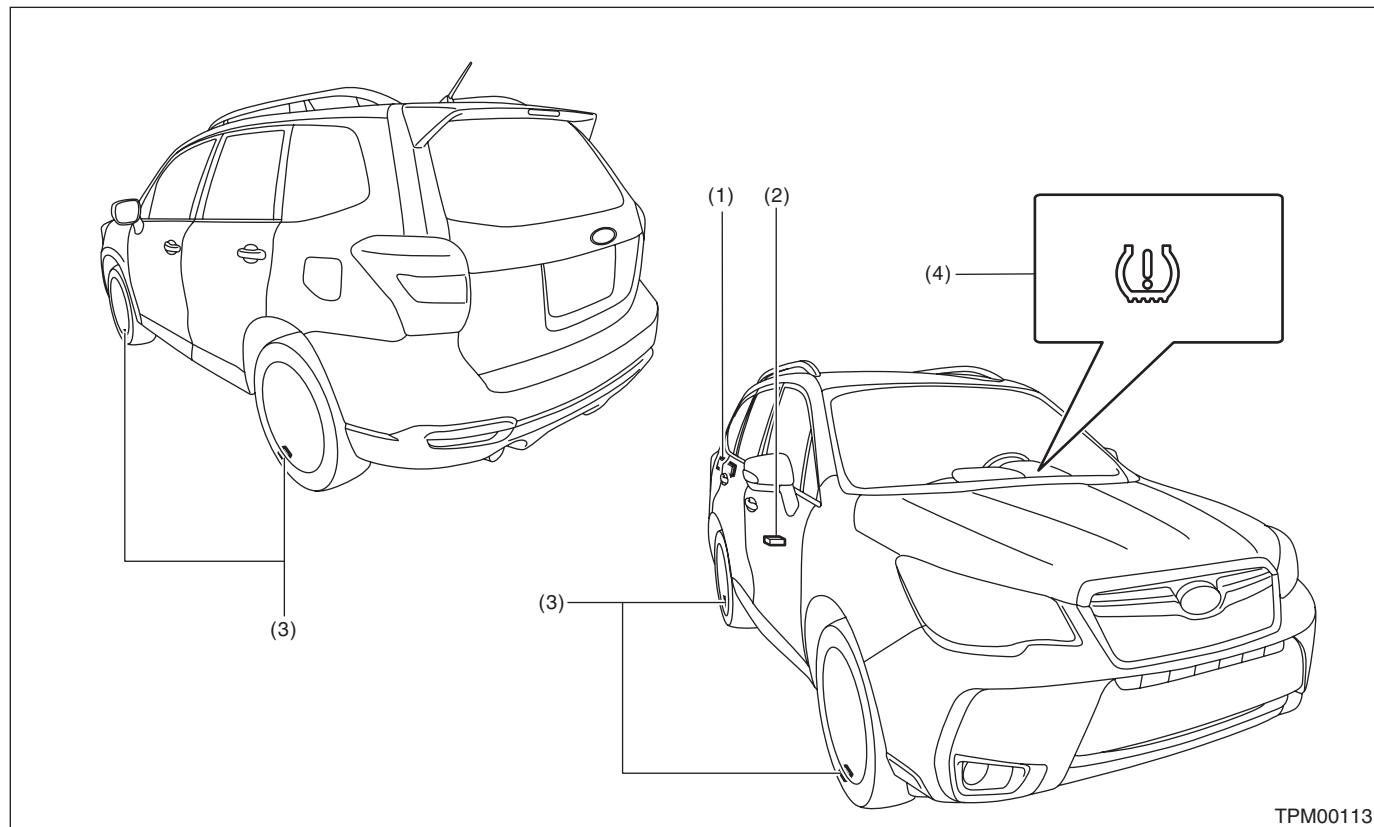

(1) TPMS & keyless entry control module  
(model with keyless entry)


(2) TPMS control module  
(model with keyless access)

(3) Snap-in type transmitter


(4) Tire pressure warning light

## Electrical Component Location


### TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

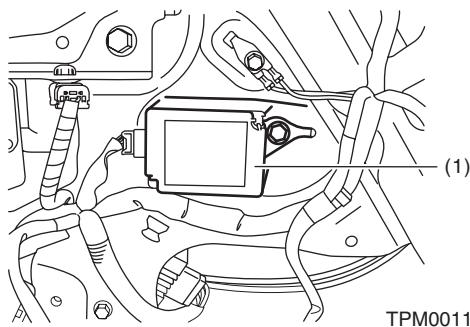

TPM00114

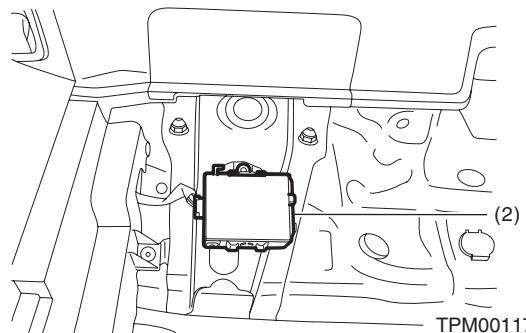

TPM00117

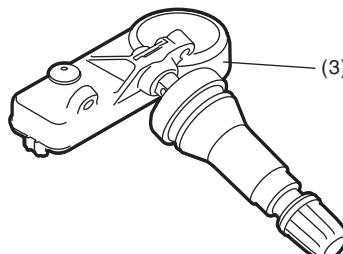

TPM00049

**SUBARU.**