


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

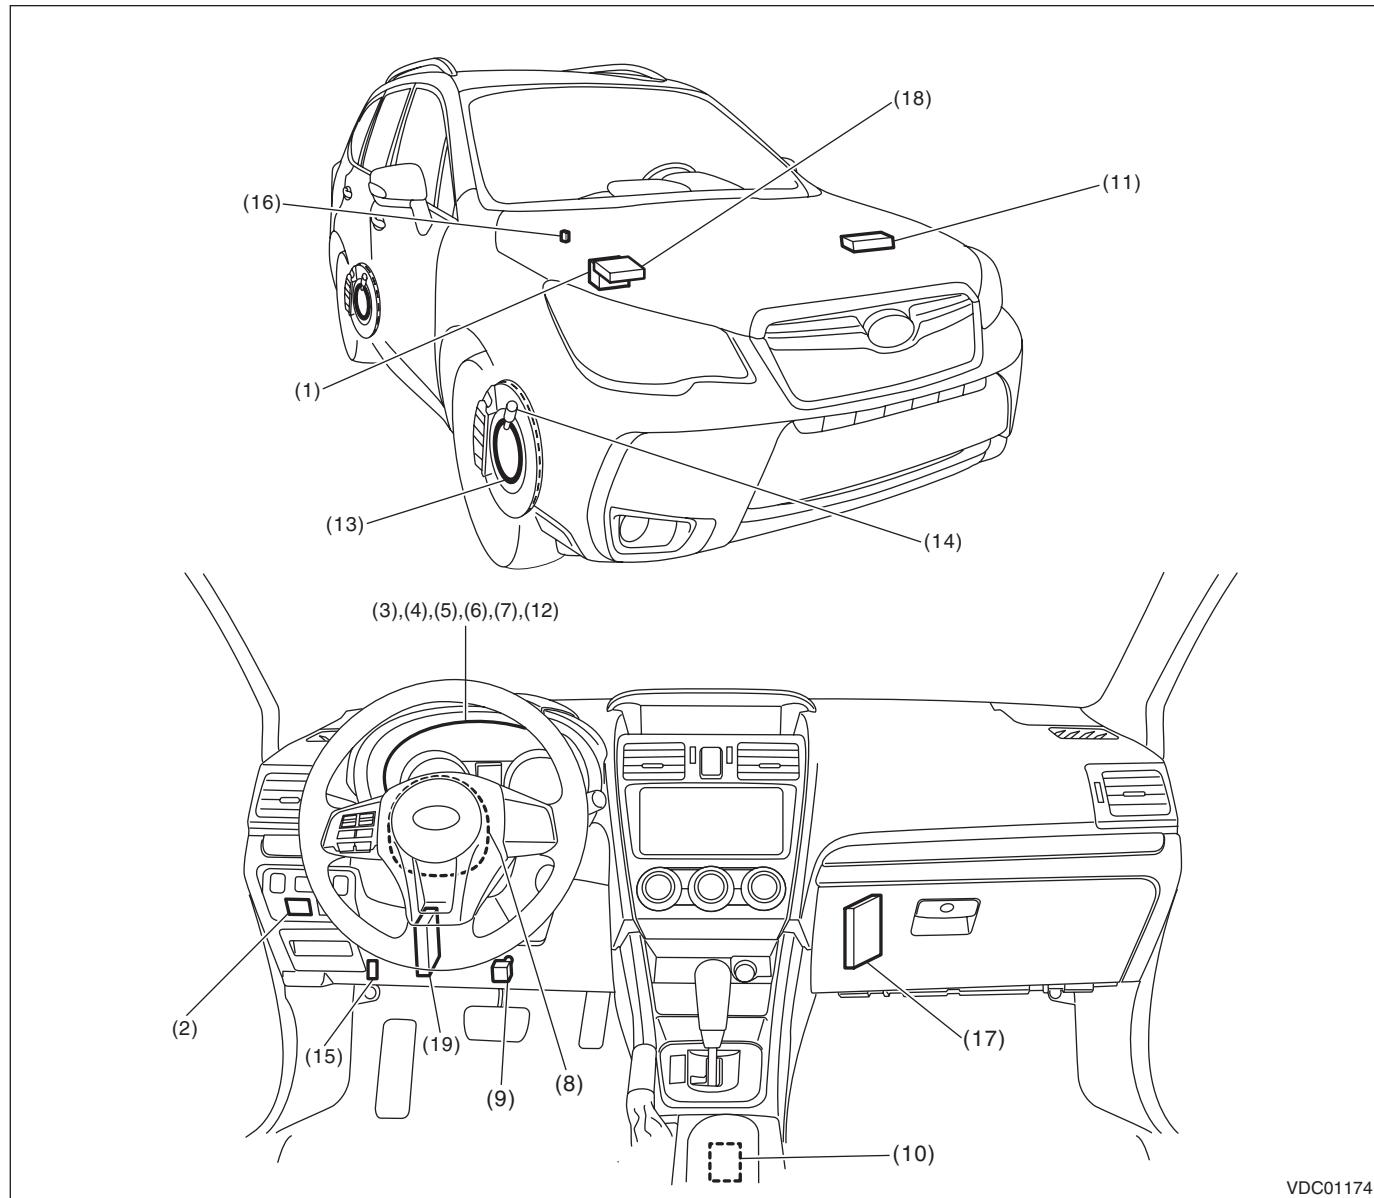


(1) VDC control module and hydraulic control unit (VDCCM&H/U)	(8) Steering angle sensor	(14) ABS wheel speed sensor
(2) VDC OFF switch	(9) Stop light and brake switch	(15) Data link connector
(3) ABS warning light	(10) Yaw rate & G sensor (model with EyeSight)	(16) Two-way connector
(4) Brake warning light (EBD warning light)	(11) Brake light relay (model with X mode and model with EyeSight)	(17) Engine control module (ECM) (non-turbo model)
(5) VDC warning light & VDC indicator light	(12) Hill descent control indicator light (model with X mode)	(18) Engine control module (ECM) (turbo model)
(6) VDC OFF indicator light	(13) Magnetic encoder	(19) Transmission control module (TCM)
(7) Hill start assist warning light		

Electrical Component Location


VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

- Models without EyeSight

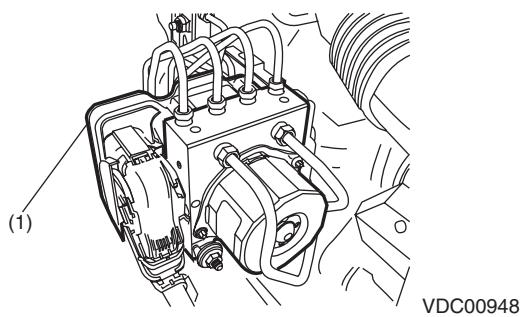


VDC00948


- Models with EyeSight

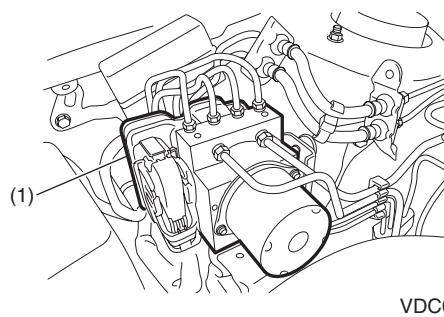


VDC01190

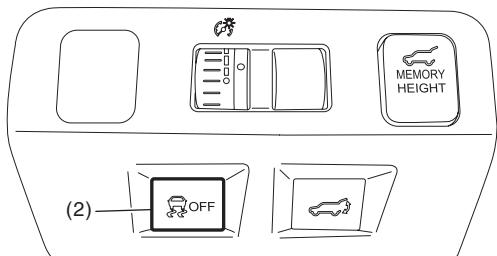


VDC01175

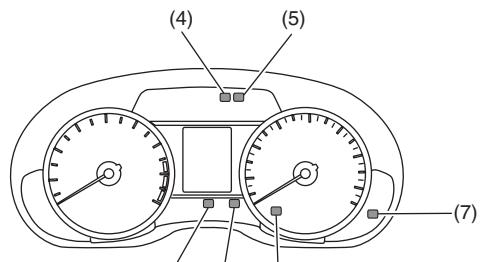


VDC01165

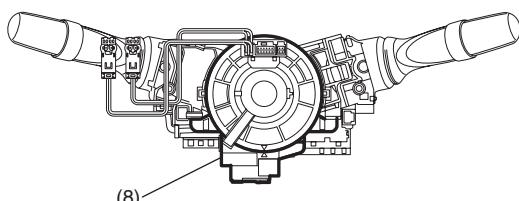


VDC00952

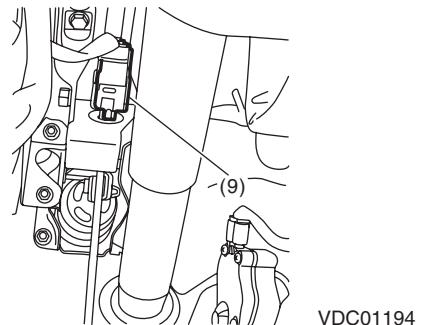


VDC01194

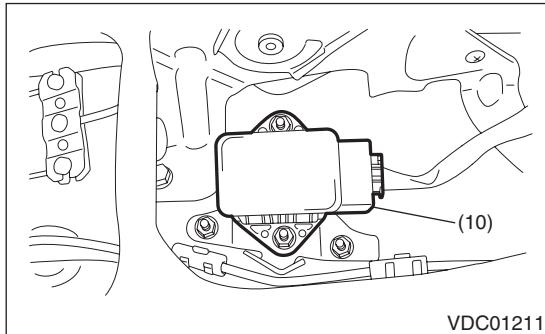


VDC01211

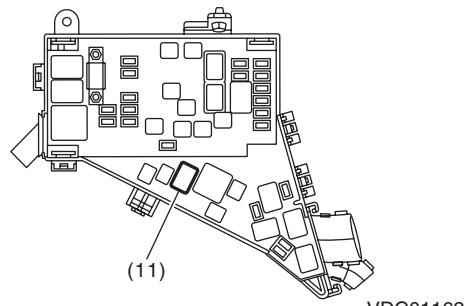

VDC01162

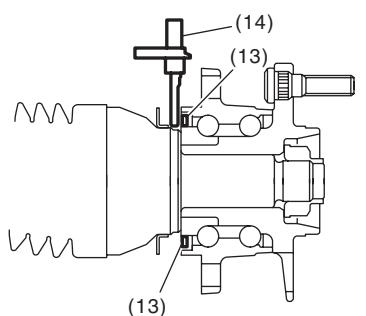

VDC01195

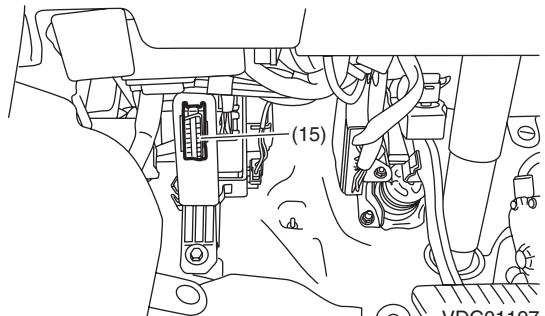

VDC01197