


Relay and Fuse

VEHICLE DYNAMICS CONTROL (VDC)

2. Relay and Fuse

A: LOCATION

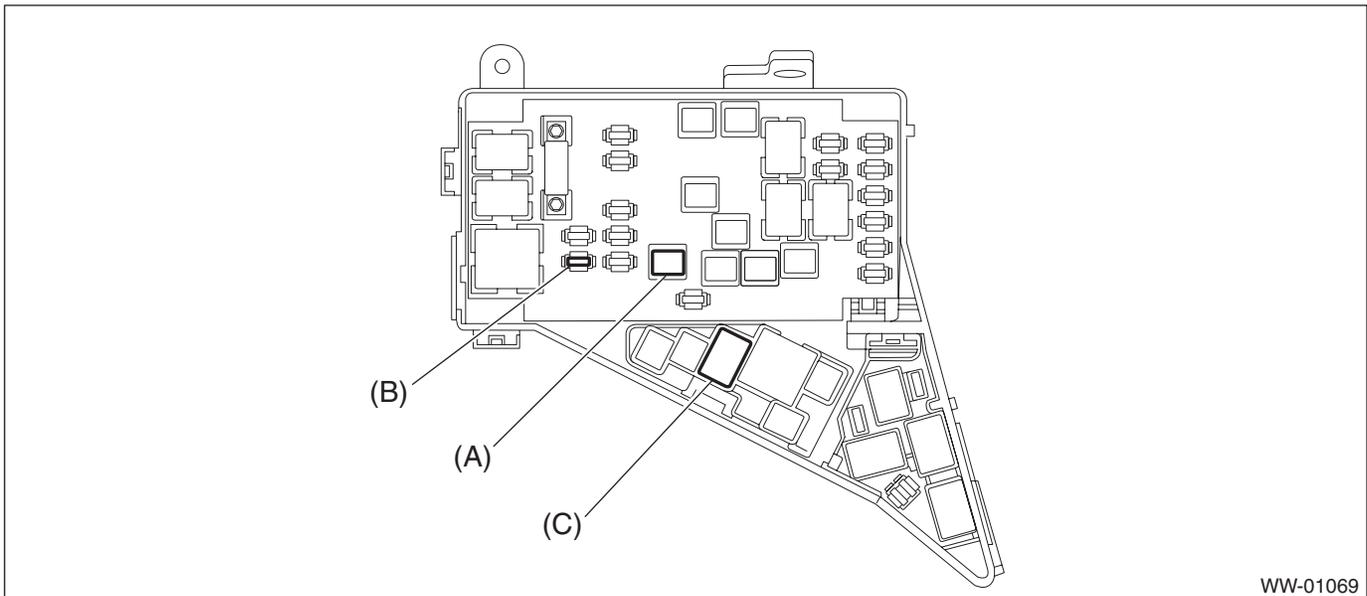

WW-01069

Main fuse box	Fuse 50A (VDC CM&H/U)	(A)
	Fuse 30A (VDC CM&H/U)	(B)
	Brake light relay	(C)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-24, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	<p>SL-01085</p>
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between terminals 3 and 5.	Less than 1 Ω	

- 2) Replace the relay if the inspection result is not within the standard value.