

### 8. Fuel Level Sensor

#### A: REMOVAL

For removal procedures, refer to the “FU(H4DO)” section. <Ref. to FU(H4DO)-141, REMOVAL, Fuel Level Sensor.>

#### B: INSTALLATION

For installation procedures, refer to the “FU(H4DO)” section. <Ref. to FU(H4DO)-142, INSTALLATION, Fuel Level Sensor.>

#### C: INSPECTION

For inspection procedures, refer to the “FU(H4DO)” section. <Ref. to FU(H4DO)-143, INSPECTION, Fuel Level Sensor.>