


# IG Relay

## FUEL INJECTION (FUEL SYSTEMS)

### 22.IG Relay

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-61, REMOVAL, Glove Box.>
- 3) Remove the IG relay from the relay block.

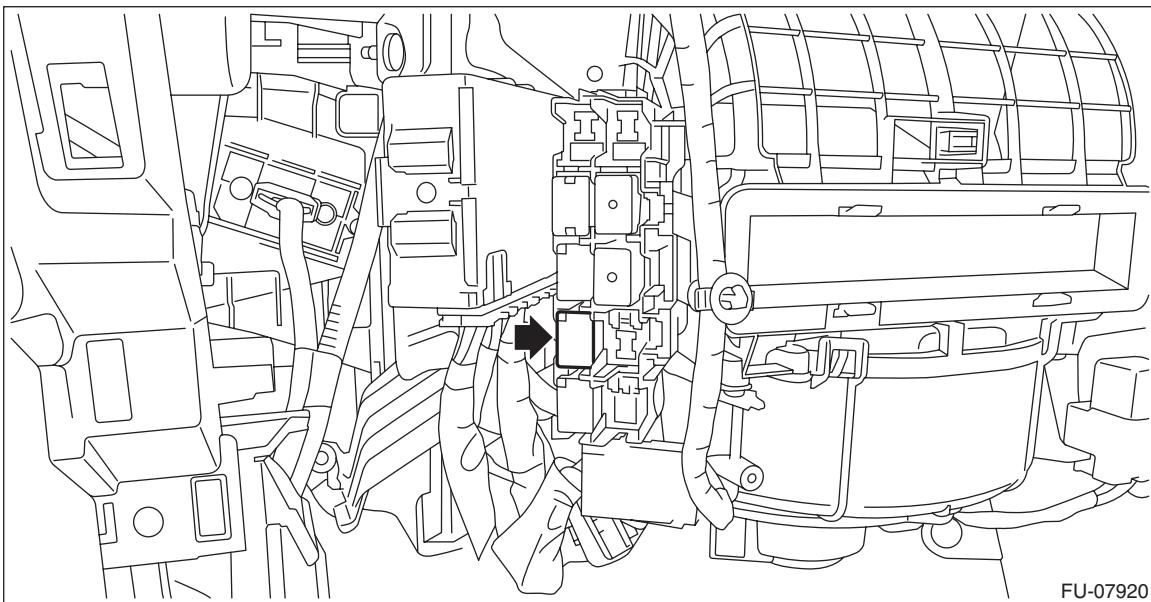


#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Check that the IG relay has no deformation, cracks or other damages.
- 2) Measure the resistance between the IG relay terminals.

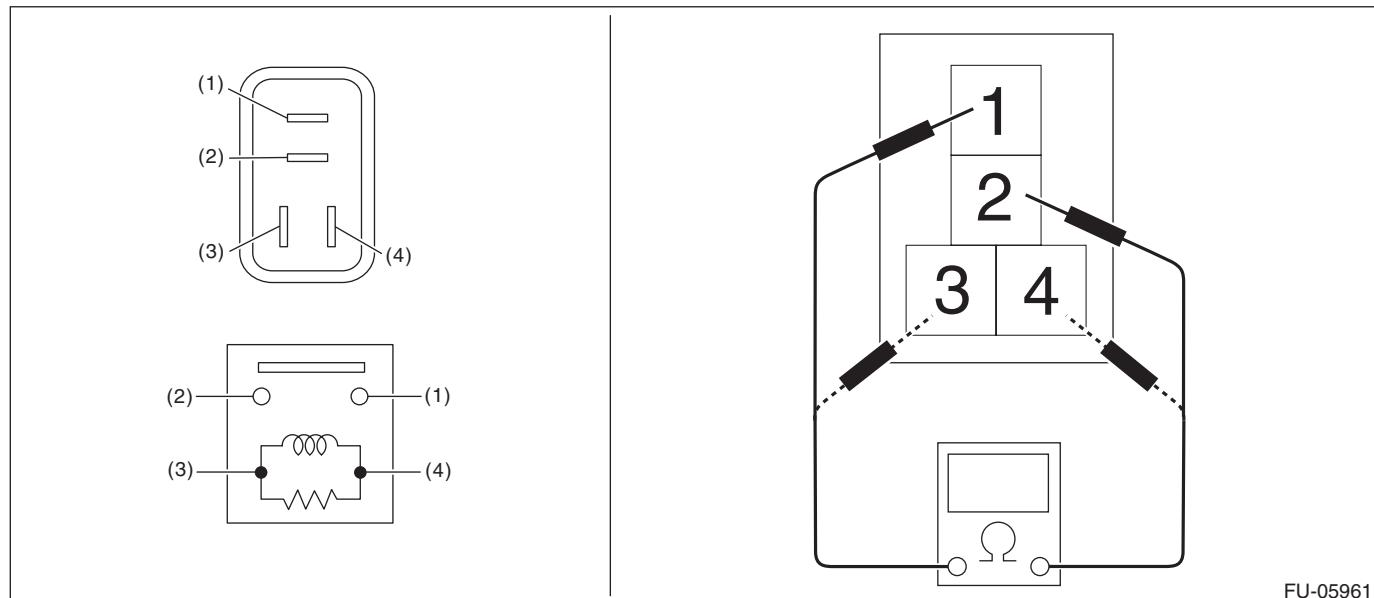


| Terminal No. | Standard                           |
|--------------|------------------------------------|
| 1 and 2      | 1 MΩ or more                       |
| 3 and 4      | 130.4 — 230.8 Ω (when 20°C (68°F)) |

# IG Relay

## FUEL INJECTION (FUEL SYSTEMS)

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between IG relay terminals.

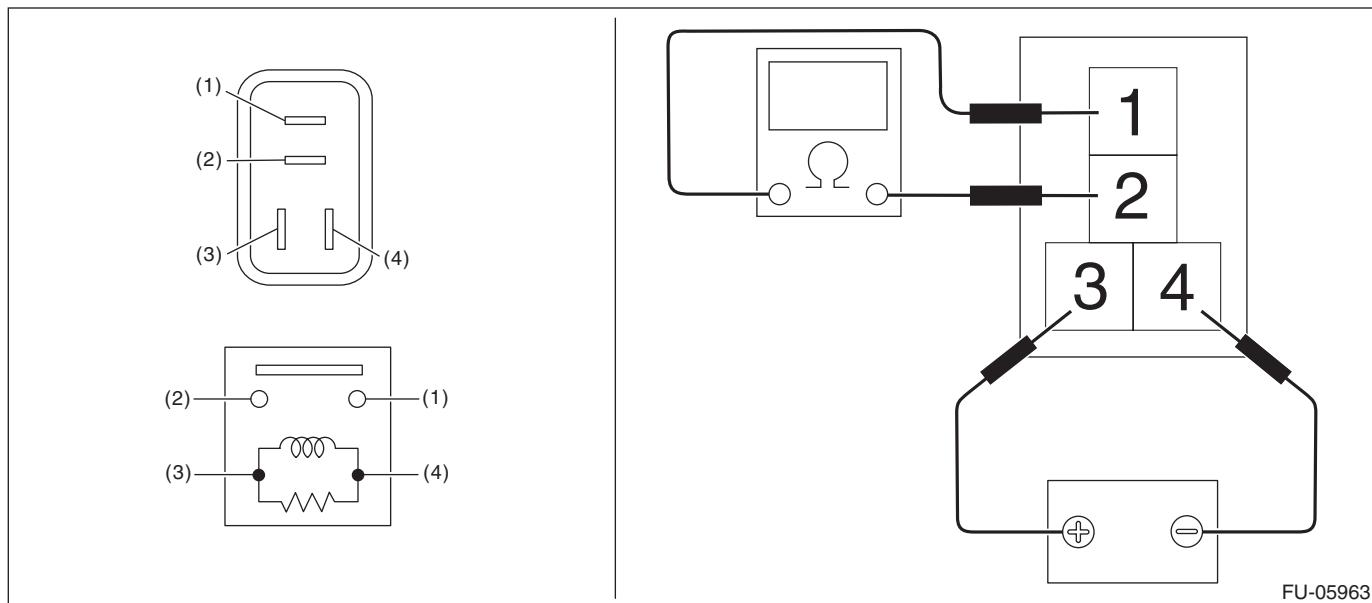

FU-05963

| Terminal No. | Standard             |
|--------------|----------------------|
| 1 and 2      | Less than 1 $\Omega$ |