

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H4DO)-6, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4DO)-8, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H4DO)

	Page
1. General Description	2
2. Compression	28
3. Idle Speed	30
4. Ignition Timing	31
5. Intake Manifold Vacuum	32
6. Engine Oil Pressure	34
7. Fuel Pressure	35
8. Cam Clearance	39
9. Engine Assembly	50
10. Engine Mounting	85
11. Preparation for Overhaul	86
12. V-belt	87
13. Crank Pulley	95
14. Chain Cover	104
15. Timing Chain Assembly	121
16. Cam Sprocket	141
17. Crank Sprocket	149
18. Rocker Cover	151
19. Camshaft	164
20. Cam Carrier	165
21. Cylinder Head	211
22. Cylinder Block	253
23. Intake and Exhaust Valve	358
24. Piston	359
25. Connecting Rod	360
26. Crankshaft	361
27. Engine Trouble in General	362
28. Engine Noise	368