

## 4. Oil Pump

### A: SPECIFICATION

The oil pump cannot be disassembled.

Refer to "Chain Cover" for removal and installation procedures. <Ref. to ME(H4DO)-104, REMOVAL, Chain Cover.> <Ref. to ME(H4DOTC)-90, REMOVAL, Chain Cover.> <Ref. to ME(H4DO)-109, INSTALLATION, Chain Cover.> <Ref. to ME(H4DOTC)-97, INSTALLATION, Chain Cover.>