


## 17.Crank Sprocket

### A: REMOVAL

**NOTE:**

When replacing a single part, perform the work with the engine assembly installed to body.

- 1) Remove the chain cover. <Ref. to ME(H4DO)-104, REMOVAL, Chain Cover.>
- 2) Remove the timing chain. <Ref. to ME(H4DO)-121, REMOVAL, Timing Chain Assembly.>
- 3) Remove the crank sprocket.

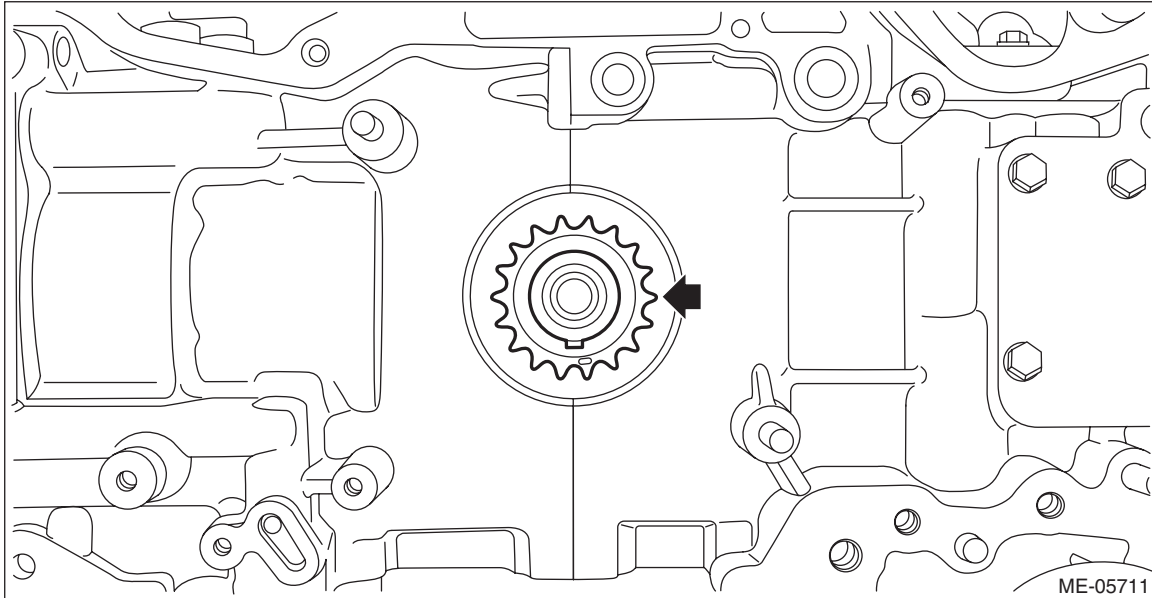


### B: INSTALLATION

- 1) Install the crank sprocket.

**NOTE:**

The direction of installation is not specified for the crank sprocket.

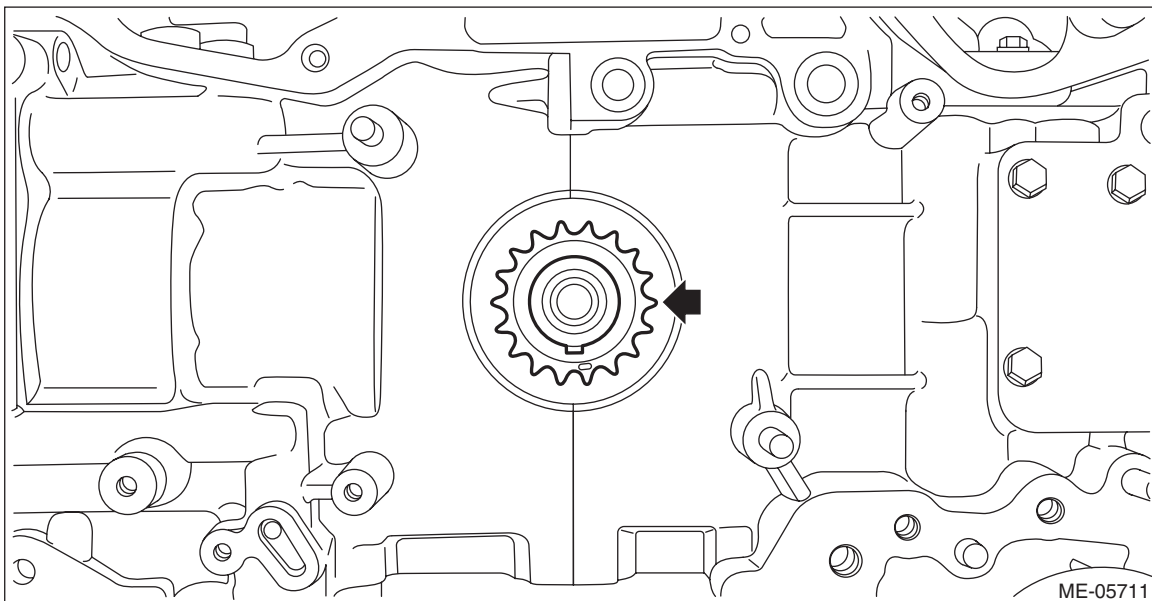

- 2) Install the timing chain. <Ref. to ME(H4DO)-128, INSTALLATION, Timing Chain Assembly.>
- 3) Install the chain cover. <Ref. to ME(H4DO)-109, INSTALLATION, Chain Cover.>

# Crank Sprocket

MECHANICAL

---

## **C: INSPECTION**

- 1) Check the crank sprocket teeth for abnormal wear and scratches.
- 2) Make sure there is no free play between crank sprocket and key.