

## **24.Piston**

### **A: SPECIFICATION**

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H4DO)-253, REMOVAL, Cylinder Block.> <Ref. to ME(H4DO)-271, INSTALLATION, Cylinder Block.>