

26.Crankshaft

A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of the crankshaft. <Ref. to ME(H4DO)-253, REMOVAL, Cylinder Block.> <Ref. to ME(H4DO)-271, INSTALLATION, Cylinder Block.>