

## **Fuel Sub Level Sensor**

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### **10. Fuel Sub Level Sensor**

#### **A: REMOVAL**

Refer to “Fuel Sub Level Sensor” for removal procedure of the fuel sub level sensor. <Ref. to FU(H4DOTC)-187, REMOVAL, Fuel Sub Level Sensor.>

#### **B: INSTALLATION**

Refer to “Fuel Sub Level Sensor” for installation procedure of the fuel sub level sensor. <Ref. to FU(H4DOTC)-191, INSTALLATION, Fuel Sub Level Sensor.>

#### **C: INSPECTION**

Refer to “Fuel Sub Level Sensor” for the fuel sub level sensor inspection procedure. <Ref. to FU(H4DOTC)-193, INSPECTION, Fuel Sub Level Sensor.>