

PCV Pipe

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


13.PCV Pipe

A: REMOVAL

CAUTION:

Do not remove except when the PCV pipe is broken.


1) Remove the clip (A), lift the front of the collector cover in the direction of arrow, and then remove the collector cover.

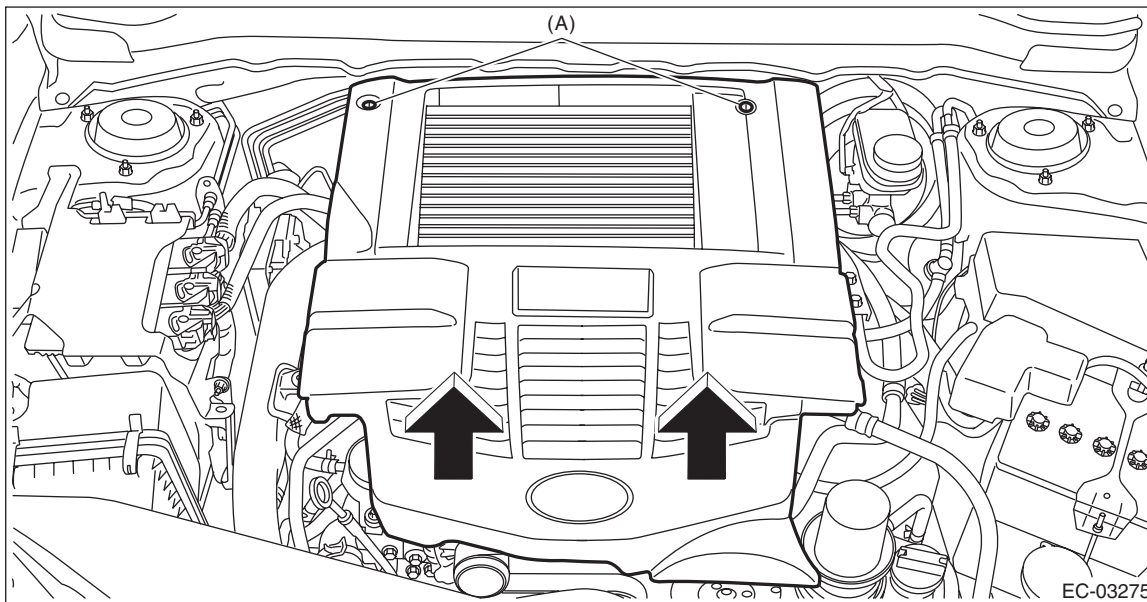

2) Collect the refrigerant from A/C system. <Ref. to AC-26, Refrigerant Recovery Procedure.>

3) Disconnect the ground cable from battery.


4) Disconnect the PCV pipe from the intake duct No. 1, and remove the clip (A) from the PCV pipe.

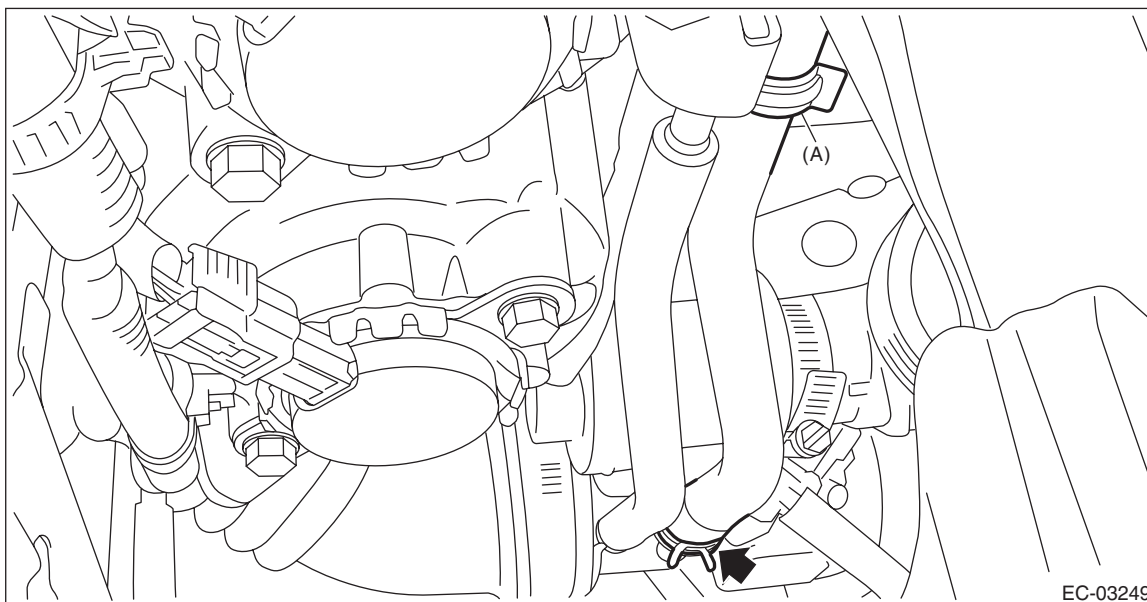

PCV Pipe


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

- 5) Remove the clip securing the PCV pipe to the intake manifold.

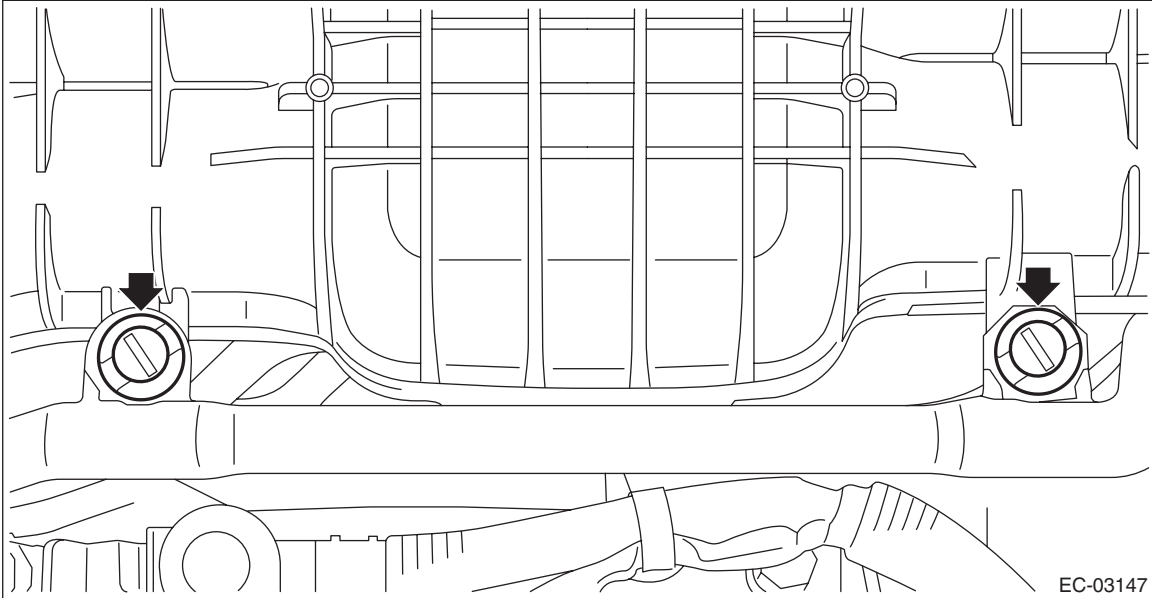

- 6) Remove the A/C compressor. <Ref. to AC-52, REMOVAL, Compressor.>

- 7) Remove the PCV pipe from the PCV connector.

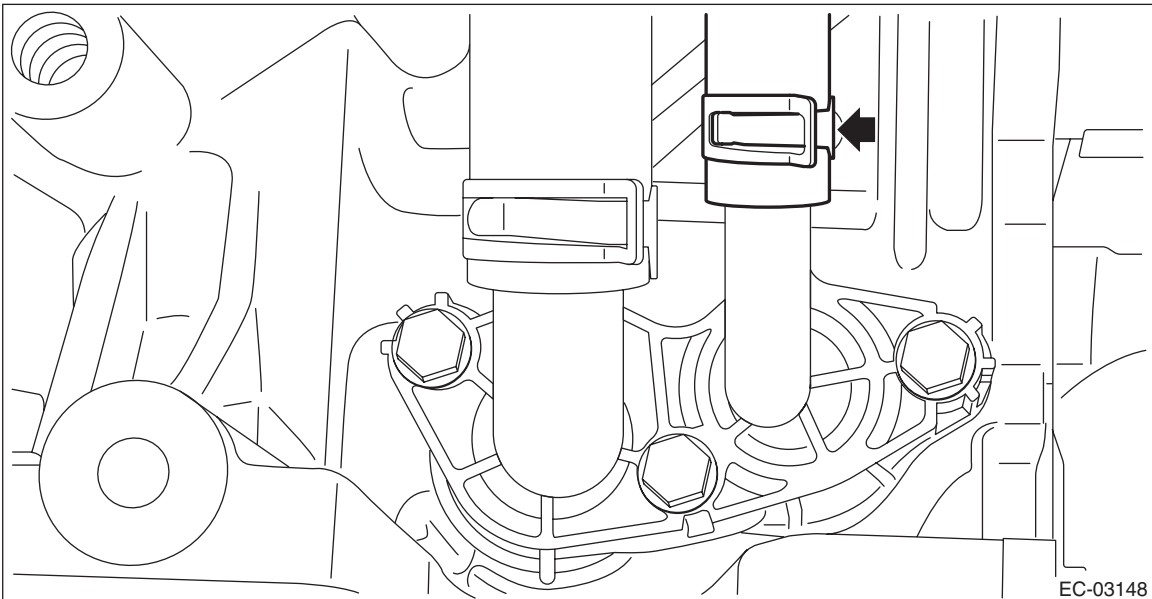

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check that the PCV pipe has no cracks, damage or loose part.