

PCV Hose

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


15.PCV Hose

A: REMOVAL


CAUTION:

Do not remove except when the PCV hose is broken.

- 1) Remove the clip (A), lift the front of the collector cover in the direction of arrow, and then remove the collector cover.

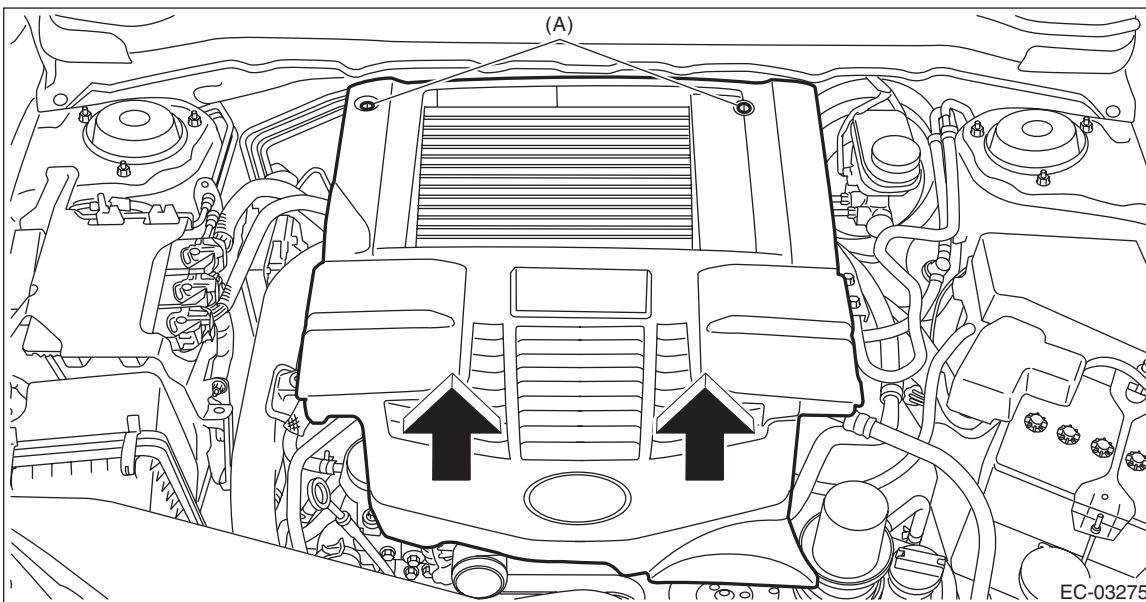


- 2) Disconnect the ground cable from battery.
- 3) Remove the intercooler. <Ref. to IN(H4DOTC)-35, REMOVAL, Intercooler.>
- 4) Remove the clip securing the brake booster vacuum hose to the intake manifold, and move the brake booster vacuum hose at the locations that do not interfere operation.

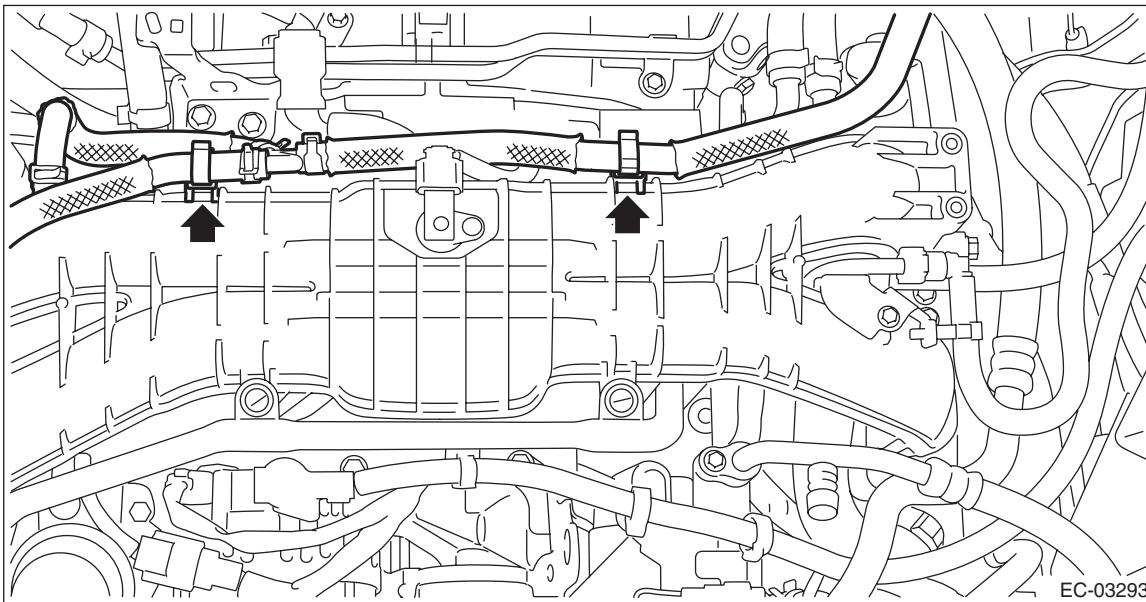

PCV Hose

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

- 5) Disconnect the PCV hose A from the intake manifold, and remove the PCV hose A from the PCV valve.

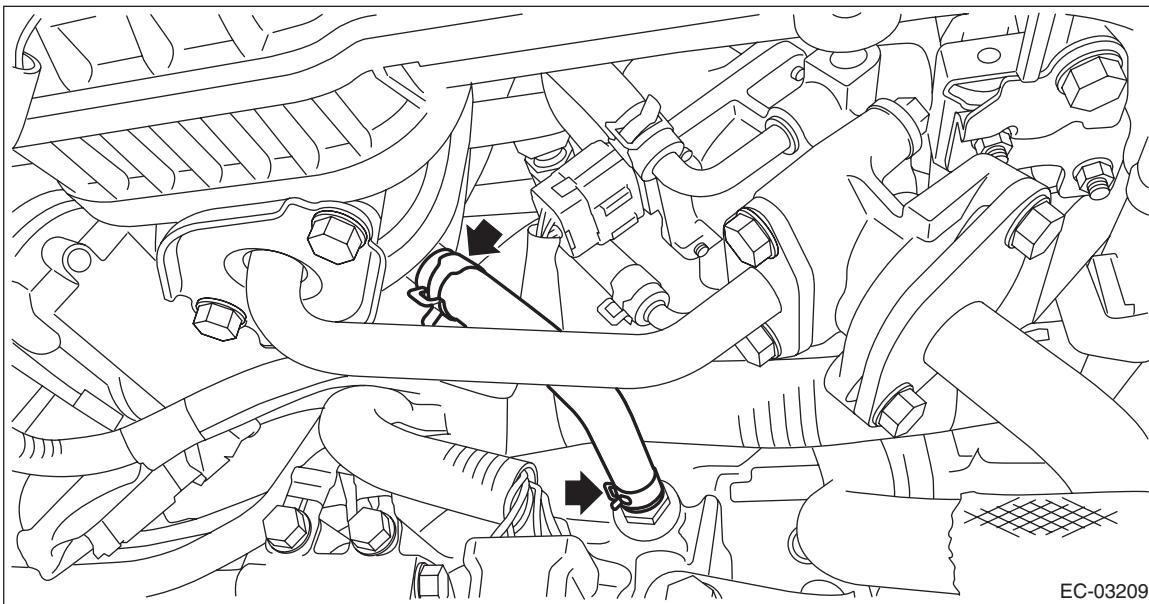

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check that the PCV hose has no cracks, damage or loose part.