

## Front Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### 2. Front Catalytic Converter

#### A: REMOVAL

The front catalytic converter is integrated into the center exhaust pipe (front). Refer to "Center Exhaust Pipe" for removal procedures. <Ref. to EX(H4DOTC)-30, REMOVAL, Center Exhaust Pipe.>

#### B: INSTALLATION

The front catalytic converter is integrated into the center exhaust pipe (front). Refer to "Center Exhaust Pipe" for installation procedures. <Ref. to EX(H4DOTC)-35, INSTALLATION, Center Exhaust Pipe.>

#### C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.