

14. System Operation Check Mode

A: OPERATION

CAUTION:

After executing the system operation check mode, execute the Clear Memory Mode. <Ref. to EN(H4DOTC)(diag)-60, OPERATION, Clear Memory Mode.>

NOTE:

For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".

Item	SSM display		Execution condition
Activating the actuator ON/OFF	Activating the fuel pump ON/OFF	Fuel Pump	ON ↔ OFF
	Activating the purge control solenoid valve ON/OFF	CPC Solenoid Valve	ON ↔ OFF
	Activating the radiator fan relay ON/OFF	Radiator Fan Relay	ON ↔ OFF
	Activating the A/C relay ON/OFF	A/C Relay	ON ↔ OFF
	Activating the wastegate control solenoid valve ON/OFF	Turbocharger Wastegate Solenoid	0.0% ↔ 99.6%
	Activating the purge control solenoid valve 2 ON/OFF	CPC Solenoid 2	ON ↔ OFF
	Activating the ELCM switching valve ON/OFF	ELCM switching valve	ON ↔ OFF
	Activating the ELCM vacuum pump ON/OFF	ELCM pump	ON ↔ OFF
Fuel pump control	Fuel pump OFF operation	OFF drive	OFF
Fixing the timing of idle ignition		Fixed Idle Ignition Timing	10.0°
Idle speed control		Idle Speed Control	500 — 2000 rpm
Injector control	Stopping fuel injection (Cylinder selection)	Injection Stop Mode	Injector 1 Injector 2 Injector 3 Injector 4
	Fuel injection amount control (All cylinders)	Injection Quantity Control	0 — 20%
EGR control valve control		EGR Valve Control	0 — 255 STEP
High pressure fuel pipe inspection		High Pressure Fuel Inspection	
Alternator control		Alternator control	Low mode Middle mode High mode
			At idling