


16.Oil Control Solenoid

A: REMOVAL


1. INTAKE SIDE

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct (rear). (RH side only) <Ref. to IN(H4DOTC)-19, REMOVAL, Air Intake Duct.>
- 3) Disconnect the connector (A) from the oil control solenoid, and remove the oil control solenoid from the chain cover.

- RH side

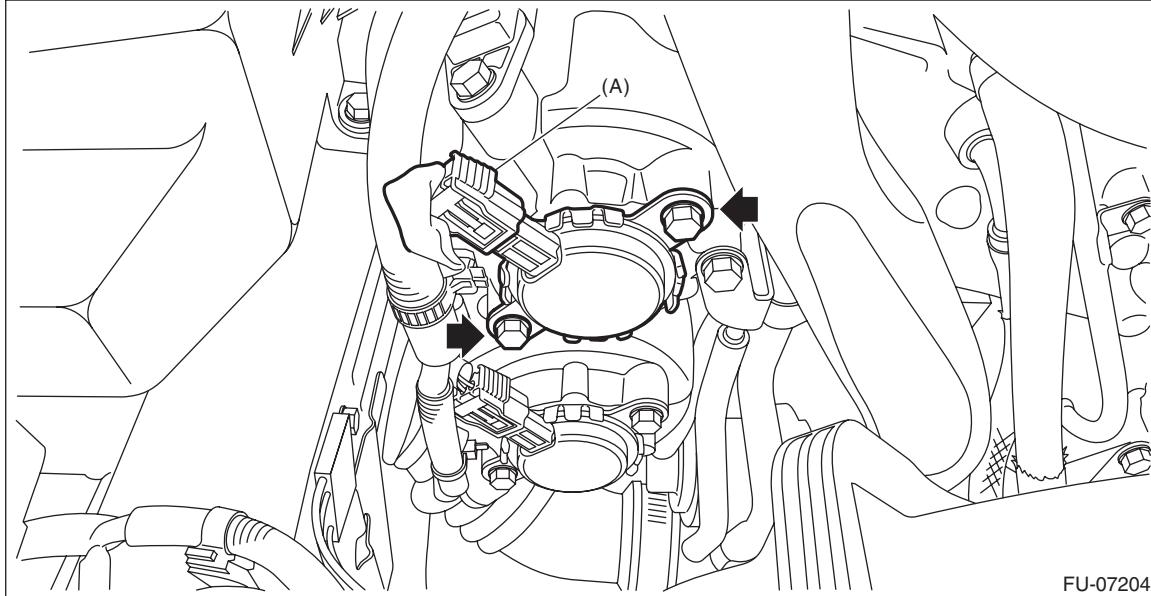

- LH side

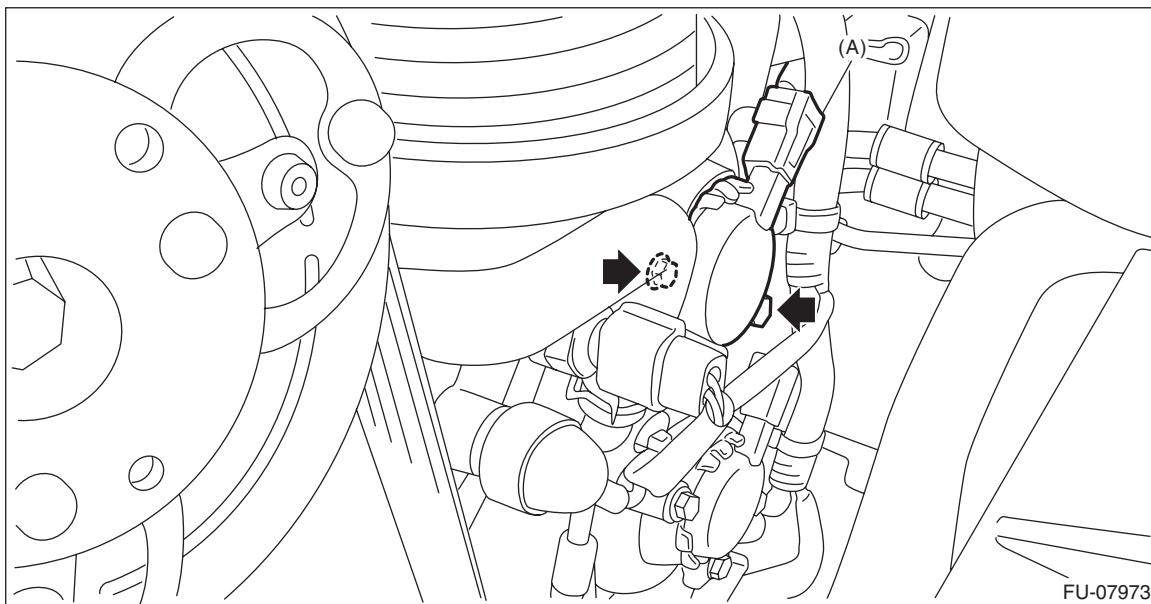


Oil Control Solenoid


FUEL INJECTION (FUEL SYSTEMS)

2. EXHAUST SIDE

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake duct (rear). (RH side only) *<Ref. to IN(H4DOTC)-19, REMOVAL, Air Intake Duct.>*
- 3) Disconnect the connector (A) from the oil control solenoid, and remove the oil control solenoid from the chain cover.
 - RH side

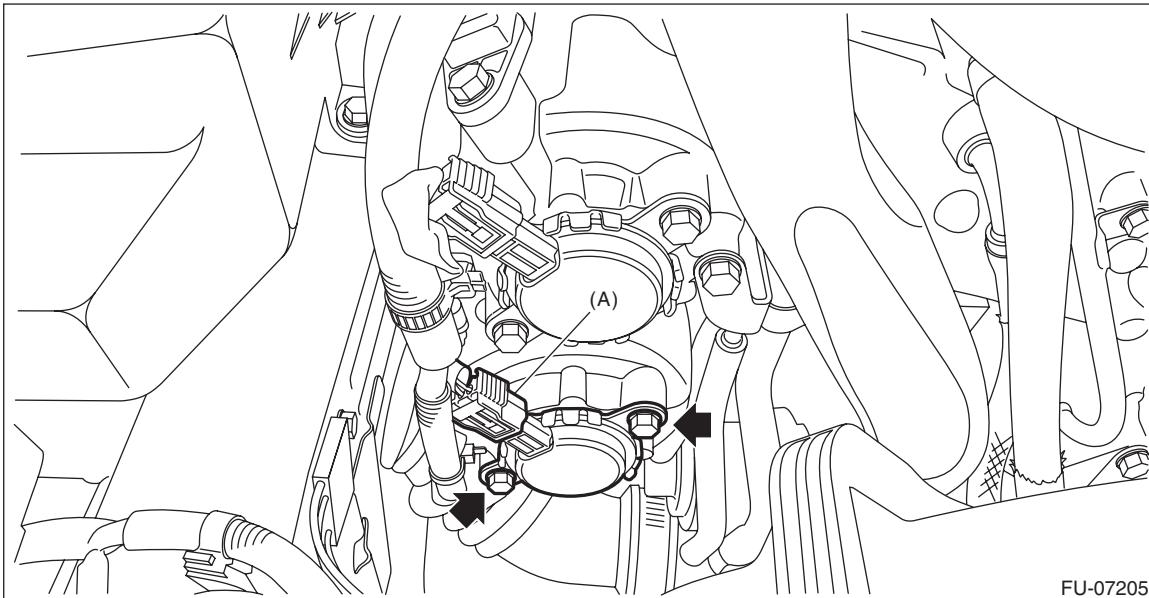

- LH side

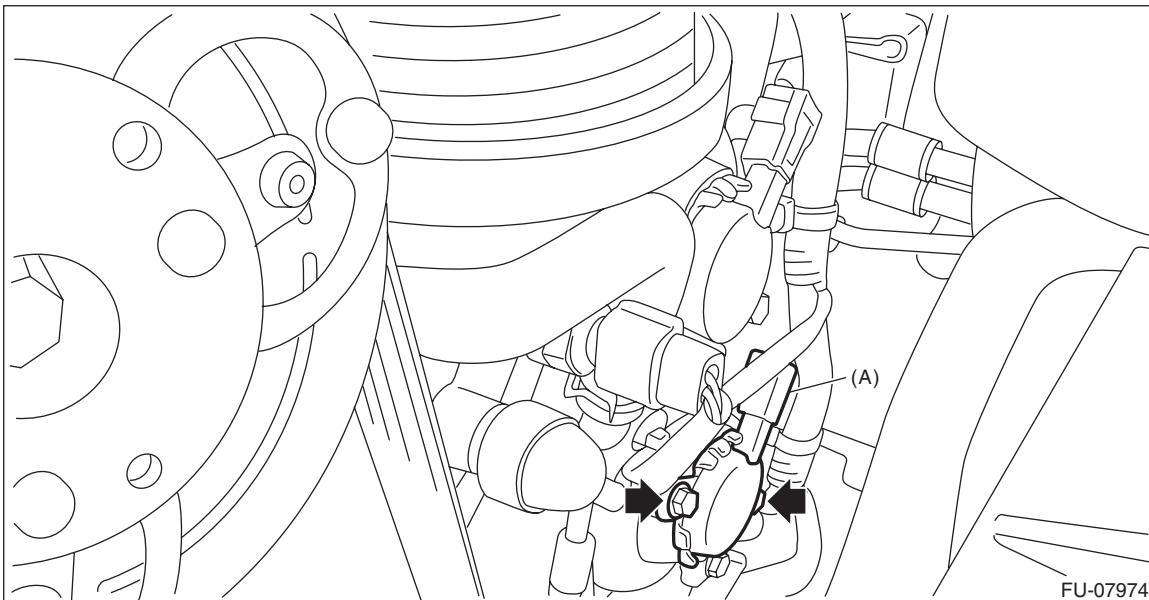

B: INSTALLATION

Install in the reverse order of removal.

NOTE:


- Use new O-rings.
- Apply engine oil to O-ring.

Tightening torque:

6.4 N·m (0.7 kgf·m, 4.7 ft-lb)

C: INSPECTION

- 1) Check that the oil control solenoid has no deformation, cracks or other damages.
- 2) Measure the resistance between the oil control solenoid terminals.

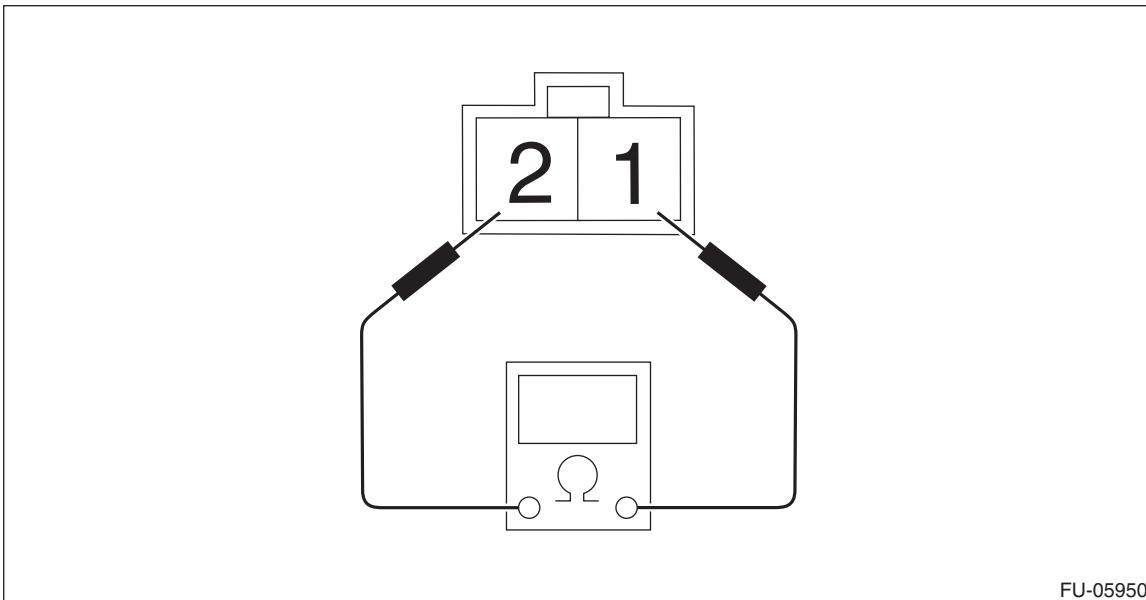

FU-05950

Terminal No.	Standard
1 and 2	$7.25 \pm 0.4 \Omega$ (when 20°C (68°F))