


# Main Relay

## FUEL INJECTION (FUEL SYSTEMS)

### 26. Main Relay

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-61, REMOVAL, Glove Box.>
- 3) Remove the main relay.

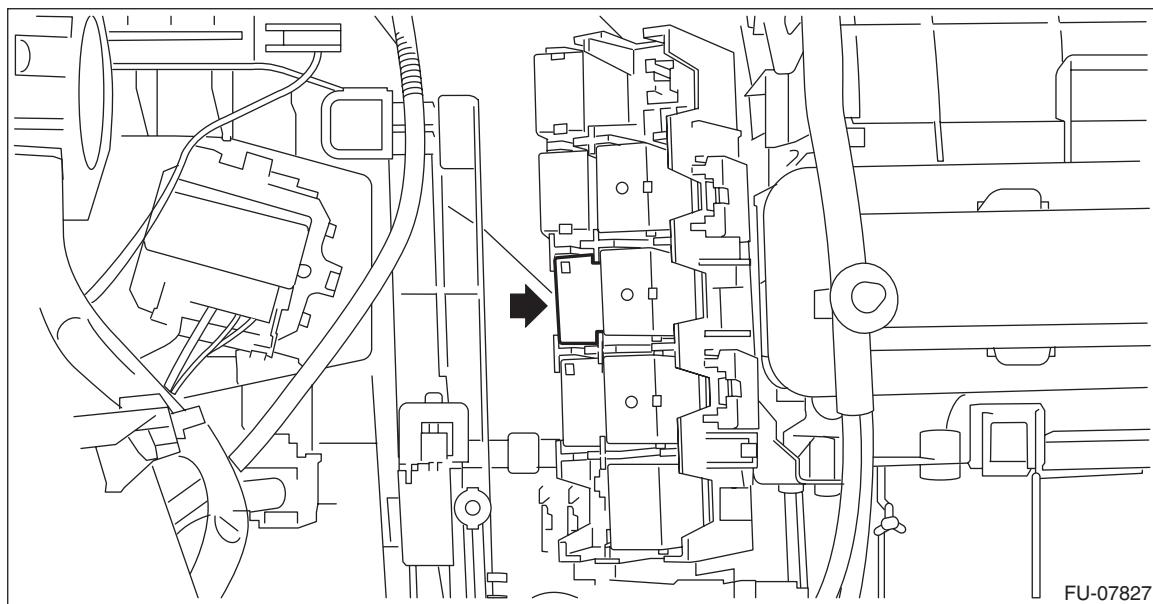


#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Check that the main relay has no deformation, cracks or other damages.
- 2) Measure the resistance between main relay terminals.

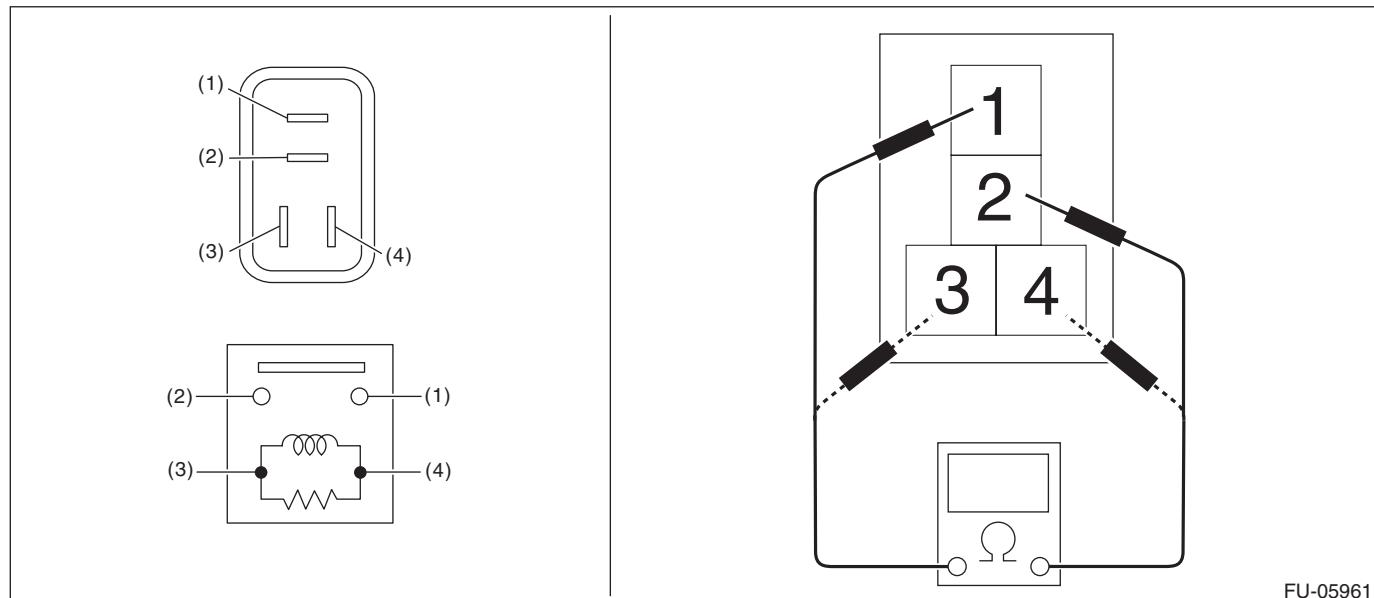


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	130.4 — 230.8 Ω (when 20°C (68°F))

## Main Relay

### FUEL INJECTION (FUEL SYSTEMS)

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the main relay terminals.

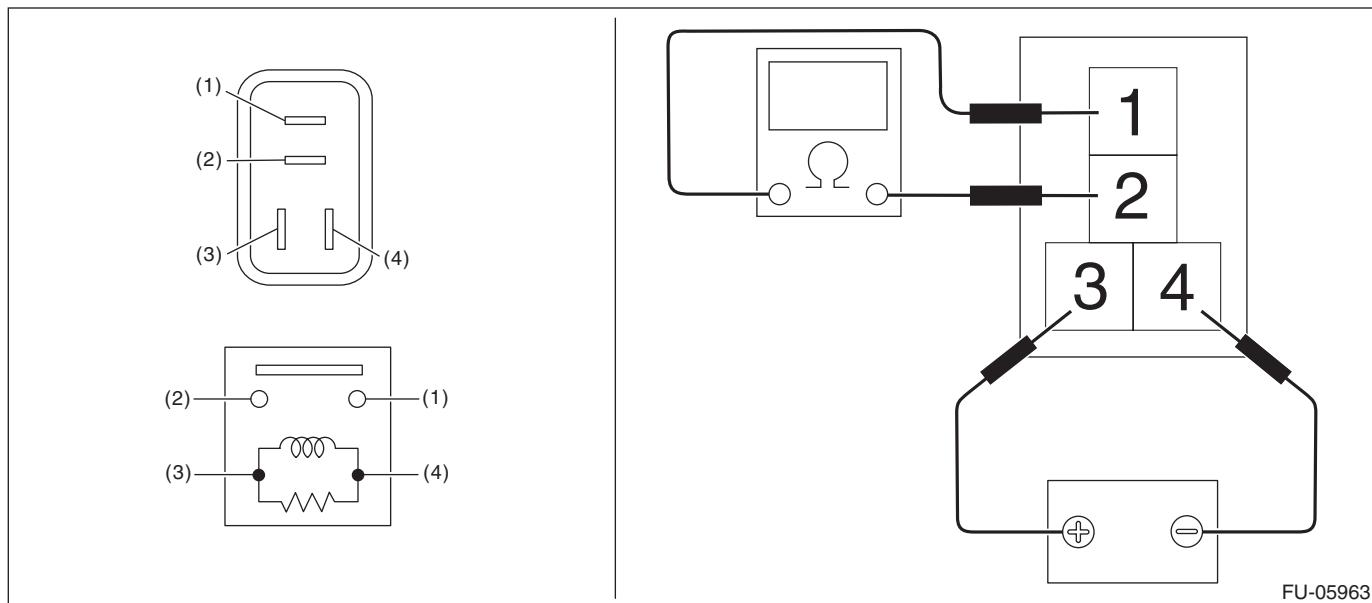

Terminal No.	Standard
1 and 2	Less than 1 $\Omega$