

10.Engine Mounting

A: REMOVAL

- 1) Remove the engine from the vehicle. <Ref. to ME(H4DOTC)-44, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from the engine.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

35 N·m (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION

Make sure that there are no cracks or other damages.