

19.Camshaft

A: REMOVAL

1. CAMSHAFT RH

The camshaft RH and cam carrier are designed as removing as a unit. Refer to “Cam Carrier” for removal procedures of camshaft RH. <Ref. to ME(H4DOTC)-172, CAM CARRIER RH, REMOVAL, Cam Carrier.> <Ref. to ME(H4DOTC)-200, CAM CARRIER RH, DISASSEMBLY, Cam Carrier.>

2. CAMSHAFT LH

The camshaft LH and cam carrier are designed as removing as a unit. Refer to “Cam Carrier” for removal procedures of camshaft LH. <Ref. to ME(H4DOTC)-175, CAM CARRIER LH, REMOVAL, Cam Carrier.> <Ref. to ME(H4DOTC)-202, CAM CARRIER LH, DISASSEMBLY, Cam Carrier.>

B: INSTALLATION

1. CAMSHAFT RH

The camshaft RH and cam carrier are designed as installing as a unit. Refer to “Cam Carrier” for installation procedures of camshaft RH. <Ref. to ME(H4DOTC)-203, CAM CARRIER RH, ASSEMBLY, Cam Carrier.> <Ref. to ME(H4DOTC)-180, CAM CARRIER RH, INSTALLATION, Cam Carrier.>

2. CAMSHAFT LH

The camshaft LH and cam carrier are designed as installing as a unit. Refer to “Cam Carrier” for installation procedures of camshaft LH. <Ref. to ME(H4DOTC)-207, CAM CARRIER LH, ASSEMBLY, Cam Carrier.> <Ref. to ME(H4DOTC)-189, CAM CARRIER LH, INSTALLATION, Cam Carrier.>