

23. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves. <Ref. to ME(H4DOTC)-215, REMOVAL, Cylinder Head.> <Ref. to ME(H4DOTC)-220, INSTALLATION, Cylinder Head.>