

11.Engine Coolant

A: INSPECTION


CAUTION:

- Do not use water instead of coolant.
- Refer to “RM” section for the recommended engine coolant. <Ref. to RM-4, ENGINE COOLANT, RECOMMENDED MATERIALS, Recommended Materials.>

- 1) Park the vehicle on a level surface.
- 2) Make sure the engine coolant level in the reservoir tank is between “FULL” and “LOW” when the engine is cold.

NOTE:

If the engine coolant level drops, make sure that there are no engine coolant leakage, and add engine coolant to the “FULL” line.

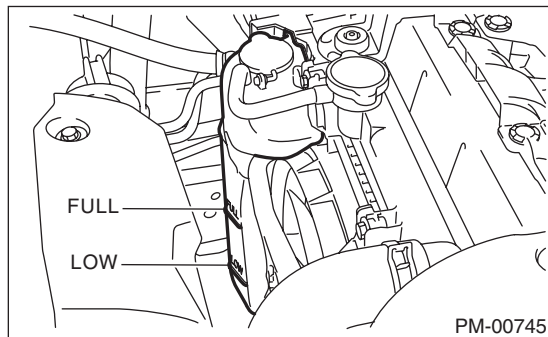

- 3) Remove the radiator cap and make sure that the radiator is filled with engine coolant up to the filler neck position.

B: REPLACEMENT

Refer to “CO” section for engine coolant replacement. <Ref. to CO(H4DO)-14, REPLACEMENT, Engine Coolant.> <Ref. to CO(H4DOTC)-13, REPLACEMENT, Engine Coolant.>