

## 3. Engine Oil

### A: INSPECTION

Refer to "LU" section for engine oil inspection.  
<Ref. to LU(H4DO)-13, INSPECTION, Engine Oil.>

### B: REPLACEMENT

Refer to "LU" section for engine oil replacement.  
<Ref. to LU(H4DO)-14, REPLACEMENT, Engine Oil.>