


25. Air Breather Hose


A: REMOVAL

1. FRONT DIFFERENTIAL SIDE

- 1) Remove the clip (A) from the air intake boot.
- 2) Loosen the clamp (B) connecting the air intake boot and air cleaner case (rear).
- 3) Loosen the clamp (C) which connects the air intake boot and throttle body.

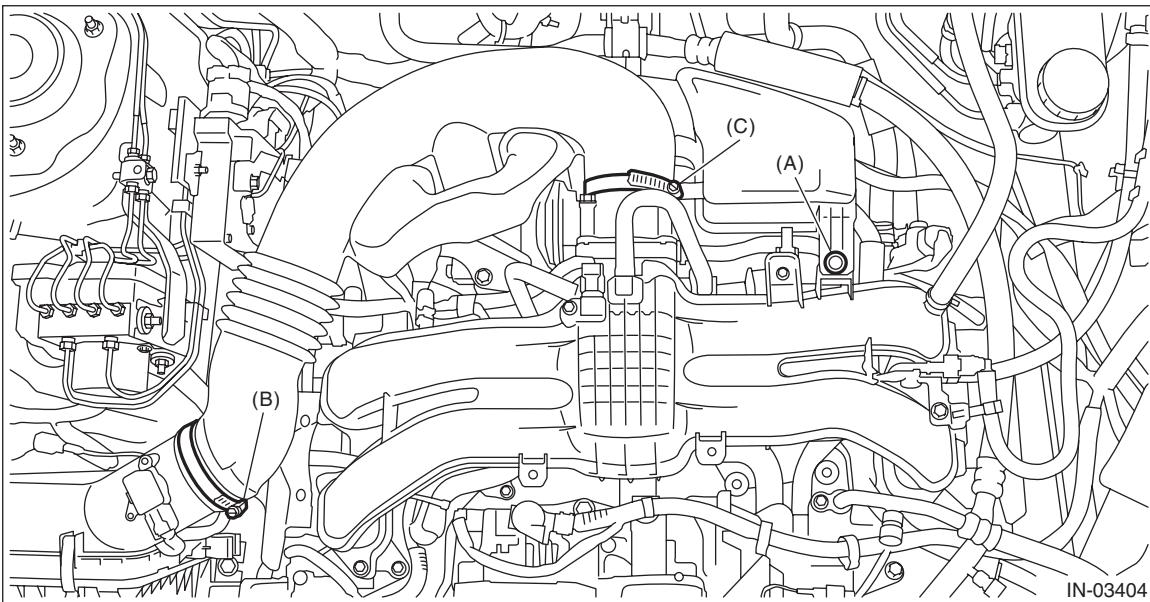


- 4) Remove the air intake boot from the throttle body, and move the air intake boot to the left side wheel apron.

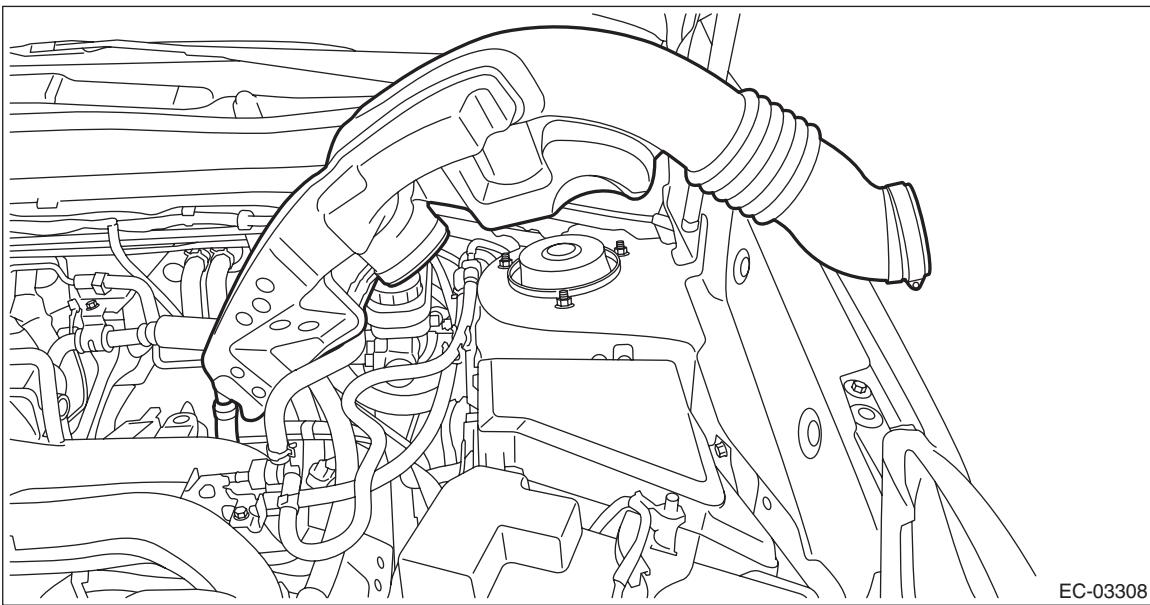

Air Breather Hose


CONTINUOUSLY VARIABLE TRANSMISSION

- 5) Remove the air breather hose.

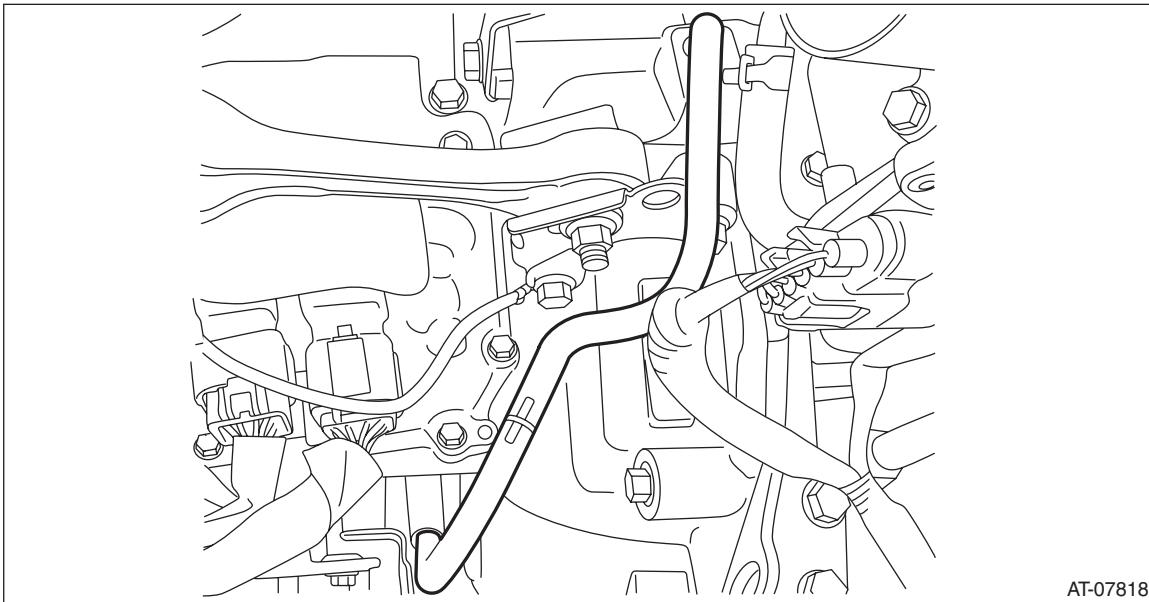

2. TRANSMISSION CASE SIDE


- 1) Remove the transmission assembly. <Ref. to CVT(TR580)-57, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the transmission case cover.

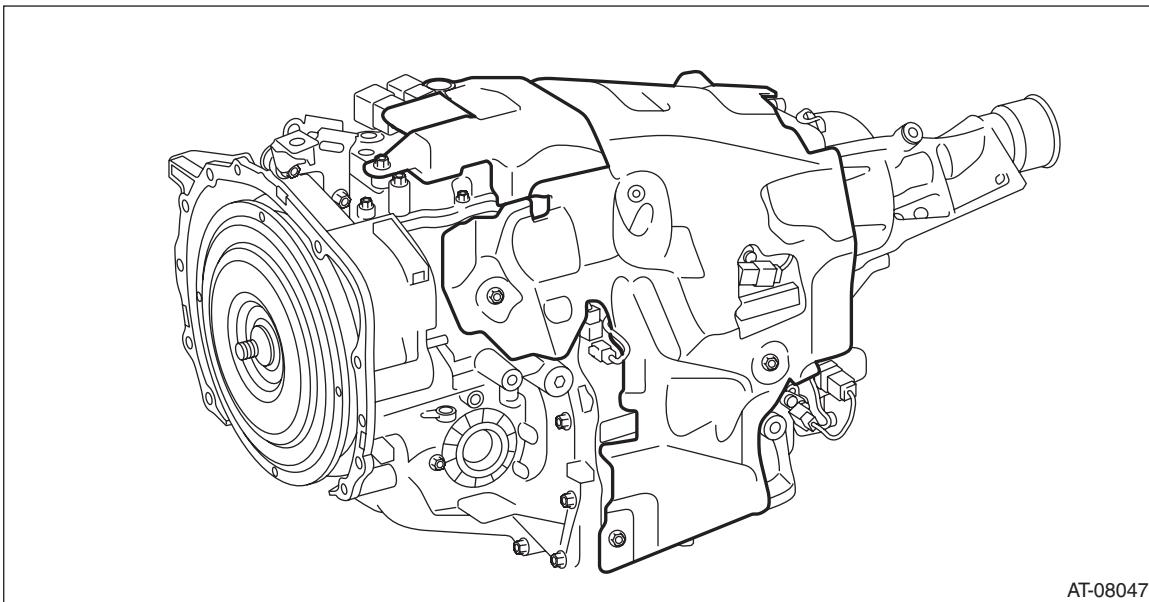

Air Breather Hose

CONTINUOUSLY VARIABLE TRANSMISSION

3) Remove the air breather hose.

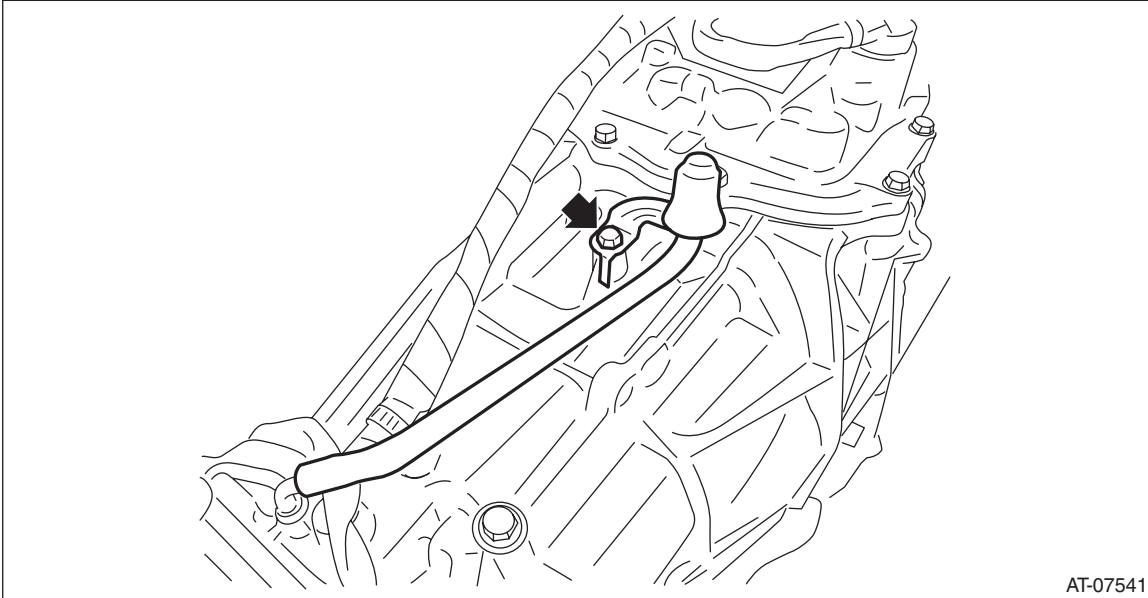

4) Remove the air breather cap.


B: INSTALLATION

1. FRONT DIFFERENTIAL SIDE

Install in the reverse order of removal.

NOTE:

Securely insert the air breather hose until the hose end contacts the catch of the pitching stopper bracket.

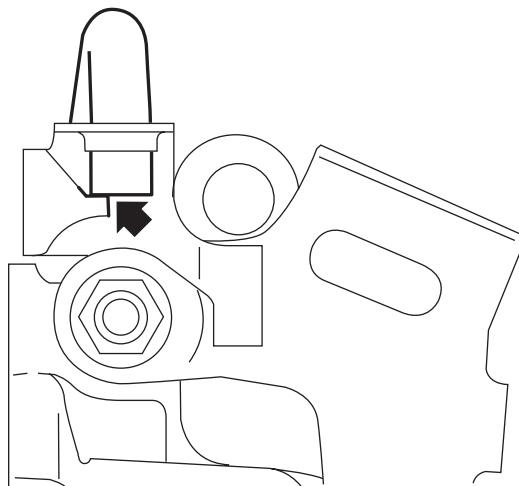

AT-07630

2. TRANSMISSION CASE SIDE

Install in the reverse order of removal.

Tightening torque:

Transmission case cover

8 N·m (0.8 kgf·m, 5.9 ft-lb)

Air breather hose

5 N·m (0.5 kgf·m, 3.7 ft-lb)

C: INSPECTION

Check the hose for peeling, crack or clogging.