



## 22.X MODE Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover - shift lever. <Ref. to EI-65, REMOVAL, Console Box.>
- 3) Remove the screws which secure the X mode switch from the cover - shift lever.

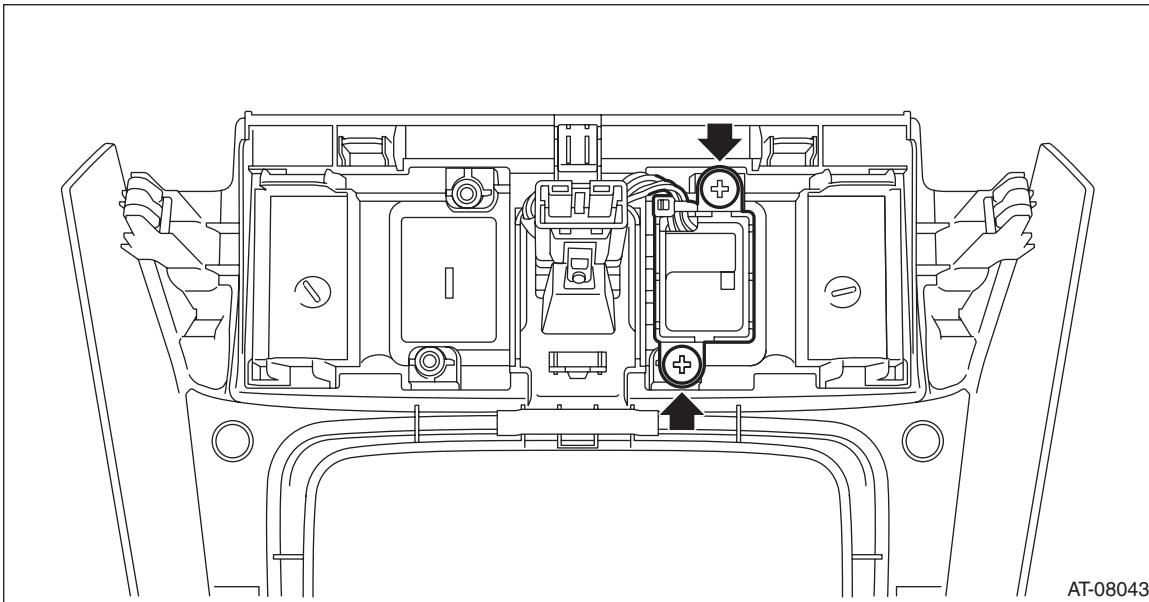

- 4) Disconnect the connector from the cover - shift lever and remove the X mode switch.

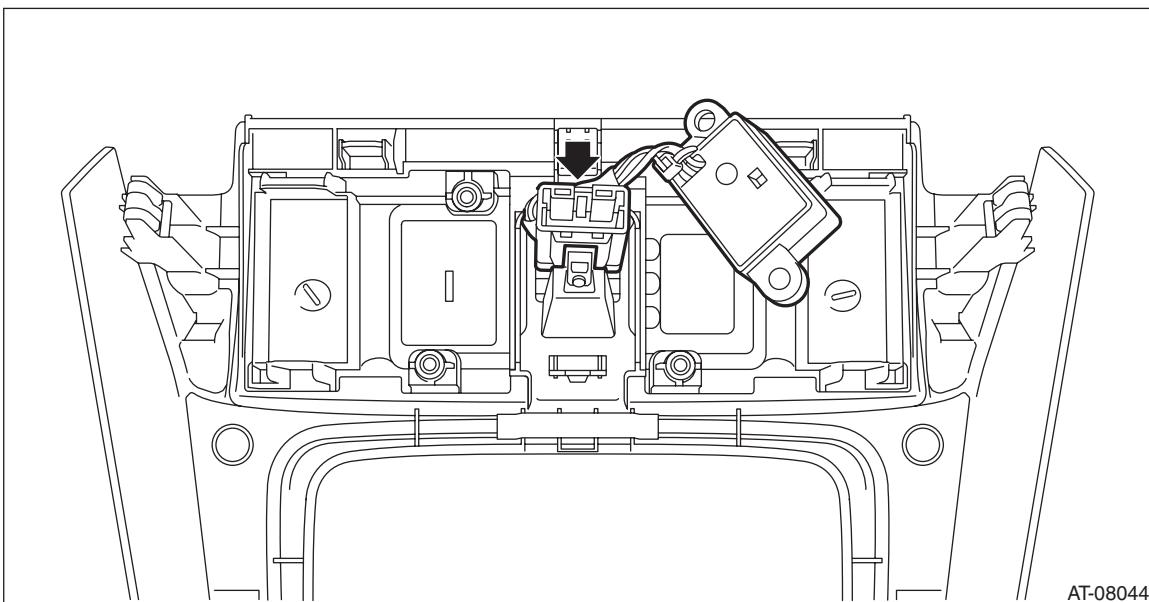

### B: INSTALLATION

Install in the reverse order of removal.

# X MODE Switch


## CONTINUOUSLY VARIABLE TRANSMISSION

### C: INSPECTION

#### 1. CHECK SWITCH UNIT

Measure the resistance between harness connector terminals of the X MODE switch.

	Terminal No.	Standard
OFF (when measured without operating the switch)	No. 4 — No. 5	1 MΩ or more
ON (when measured with the switch held down)		Less than 1 Ω

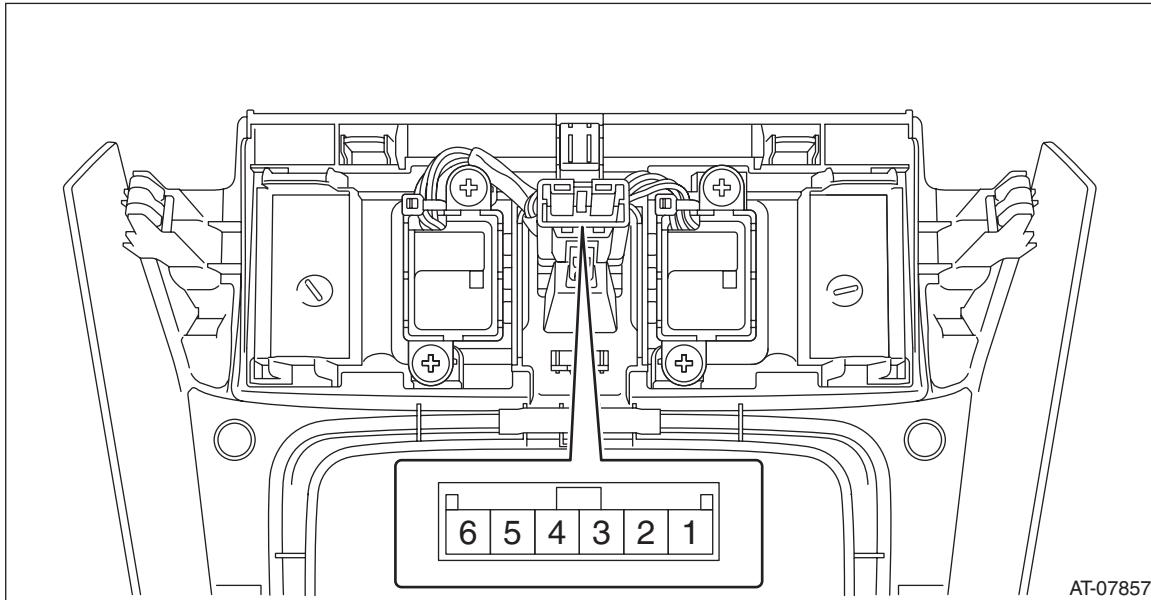

#### 2. CHECK X MODE SYSTEM

Refer to "CVT (TR580)" section for X mode system inspection. <Ref. to CVT(TR580)-139, CHECK X MODE SYSTEM, INSPECTION, X MODE Switch.>