


### 26. Drive Plate

#### A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to CVT(TR690)-55, REMOVAL, Automatic Transmission Assembly.>

2) Set the ST.

ST 498497300 CRANKSHAFT STOPPER

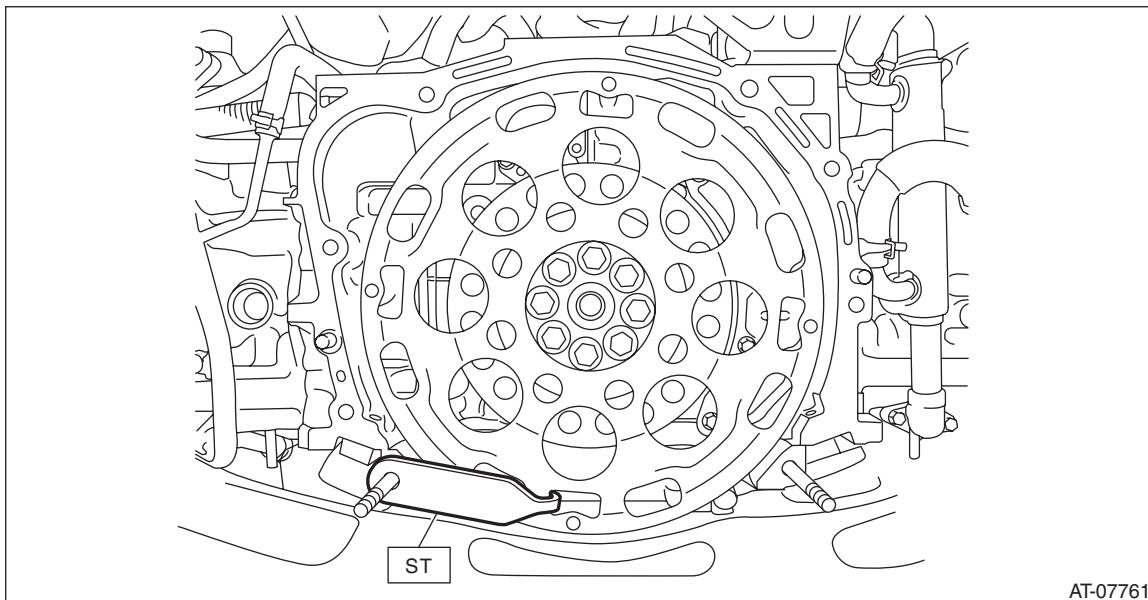

3) Remove the drive plate and reinforcement drive plate.

# Drive Plate


## CONTINUOUSLY VARIABLE TRANSMISSION

### B: INSTALLATION

1) Temporarily install the drive plate and reinforcement drive plate.

2) Set the ST.

ST 498497300 CRANKSHAFT STOPPER

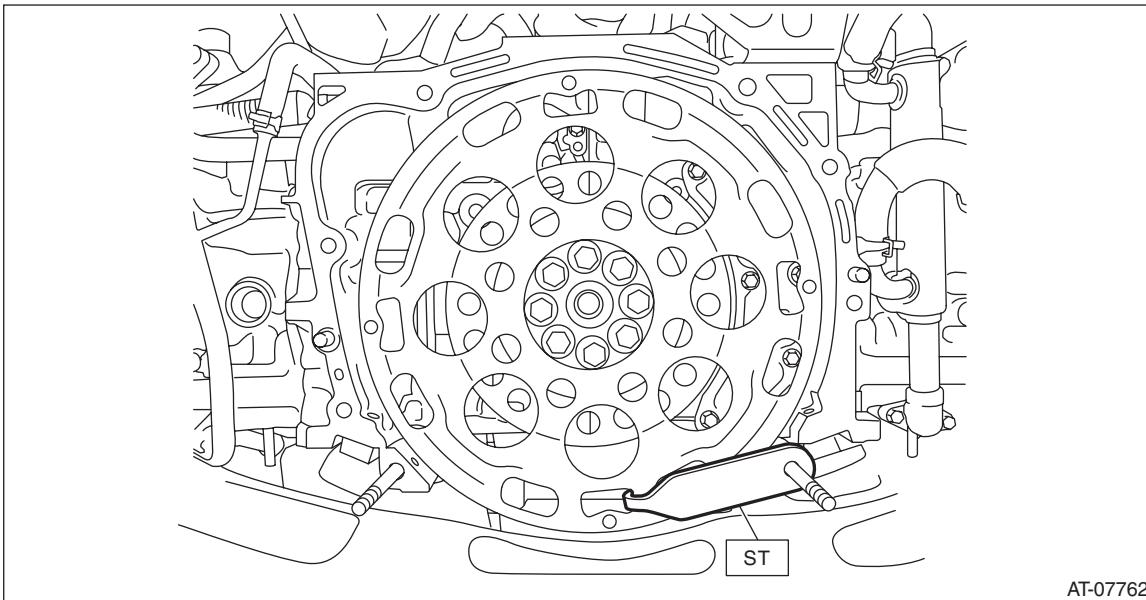

3) Tighten the drive plate mounting bolt in two stages.

**NOTE:**

Fix the engine unit.

(1) Tighten the drive plate mounting bolt.

**Tightening torque:**

**30 N·m (3.1 kgf·m, 22.1 ft·lb)**

(2) While checking the tightening angle with the angle gauge, tighten the drive plate mounting bolts to the specified angle.

**Tightening angle:**

**30° — 35°**

4) Install the transmission assembly to the vehicle. <Ref. to CVT(TR690)-68, INSTALLATION, Automatic Transmission Assembly.>

### C: INSPECTION

Check the drive cable for damage.