

Display of Status Information

AIRBAG SYSTEM (DIAGNOSTICS)

11. Display of Status Information

A: OPERATION

Check the operating condition of each sensor in the event of malfunction in the seat belt buckle switch, or when the seat belt buckle switch has been replaced.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Airbag System}.
- 3) On «Airbag System» display, select {Current Data Display & Save}.

The following table is for support data.

Item	Display	Note
Trip Count	—	—
Count	—	—
Time Count	—	—
Belt Buckle Switch RH	Unbelted/Belted	“Belted” when passenger’s seat belt is fastened “Unbelted” when passenger’s seat belt is not fastened
Passenger Occupant Status	Occupied/Empty or CRS	“Occupied” when the occupant is present “Empty or CRS” when the seat is unoccupied or when child restraint seat is installed CAUTION: When checking the operating status, be careful of the followings. <ul style="list-style-type: none">• When the seat is unoccupied: Do not place anything on the seat.• Child restraint seat: Install the seat according to its instruction manual.• When the seat is occupied: Someone who weighs at least approx. 70 kg (155 lb) must be seated during the check.
Passenger Airbag Status	ON/OFF	“ON” when the passenger occupant status is “Occupied” “OFF” when the status is “Empty or CRS”

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.