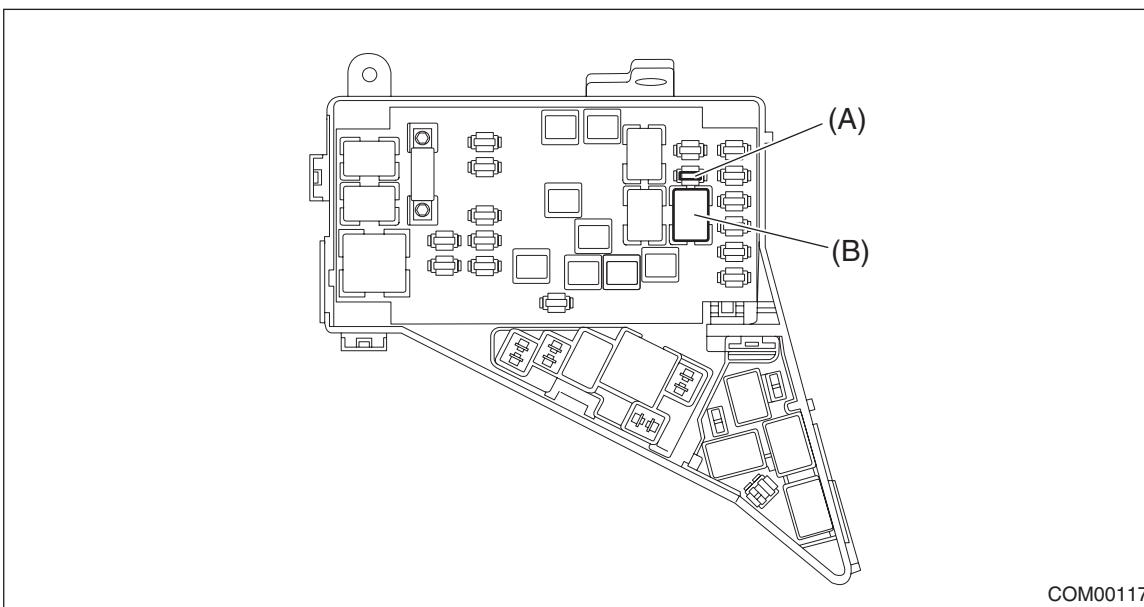


## 2. Relay and Fuse

### A: LOCATION



COM00117

Main fuse box	Fuse 15 A (horn assembly - Hi, Lo)	(A)
	Horn relay	(B)

#### NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-24, Power Supply Circuit.>

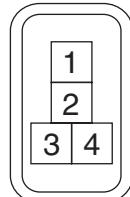
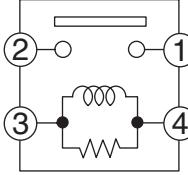
### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

#### 2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Specification	Circuit
1 — 2	Always	1 MΩ or more	 
1 — 2	Apply battery voltage between 4 — 3 terminals.	Less than 1 Ω	

SR-00180

- 2) Replace the relay if the inspection result is not within the standard value.