

5. Horn Switch

A: REMOVAL

NOTE:


Horn switch is a unit with the driver's airbag module.

- 1) Position the front wheels straight ahead. (After moving a vehicle 5 m (16 ft) or more with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead.)
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 4) Remove the driver's airbag module.


CAUTION:

Before handling the airbag module, refer to “CAUTION” of “General Description” in “AIRBAG SYSTEM”.<Ref. to AB-9, CAUTION, General Description.>

- (1) Using a hexagon wrench etc. wrapped by protective tape, insert the snap pins and release the locks (3 locations).

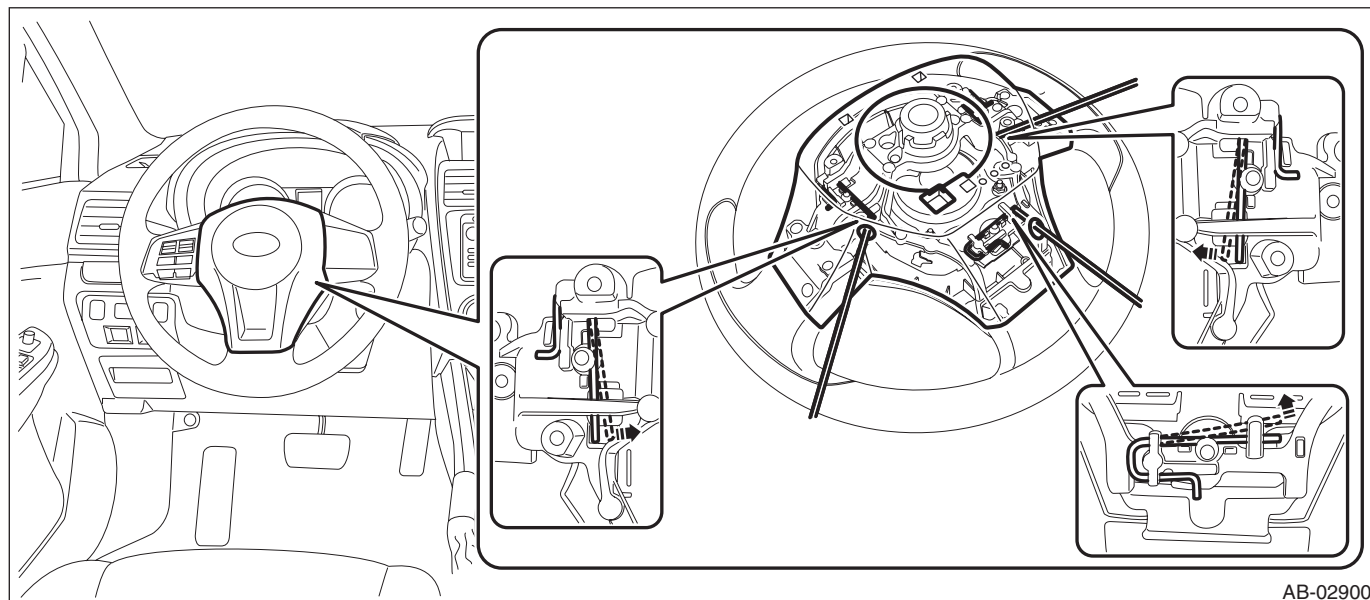

- (2) Disconnect the horn harness and airbag connector, and remove the driver's airbag module.<Ref. to AB-22, DRIVER'S AIRBAG MODULE, KNEE AIRBAG MODULE, CURTAIN AIRBAG MODULE AND PRETENSIONER, PROCEDURE, Airbag Connector.>

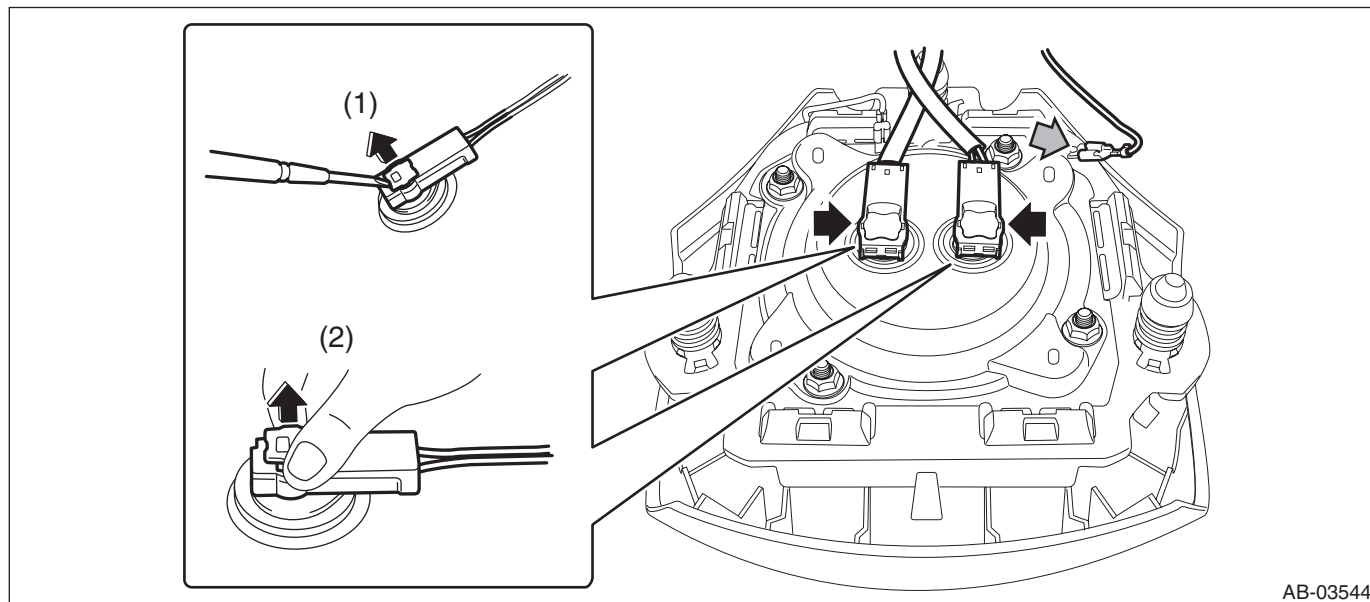

B: INSTALLATION

CAUTION:

- Before handling the airbag module, refer to “CAUTION” of “General Description” in “AIRBAG SYSTEM”. <Ref. to AB-9, CAUTION, General Description.>
 - Do not allow harness and connectors to interfere or get tangled up with other parts.
- 1) Install the driver’s airbag module. <Ref. to AB-40, INSTALLATION, Driver’s Airbag Module.>
 - 2) Install each part in the reverse order of removal.


C: INSPECTION

1. CHECK HORN SWITCH

- 1) Remove the horn switch. <Ref. to COM-8, REMOVAL, Horn Switch.>
- 2) Check that the connection of the horn switch harness connector is correct.
- 3) Disconnect the horn switch harness connector and check the resistance between the harness connectors.

Preparation tool:

Circuit tester

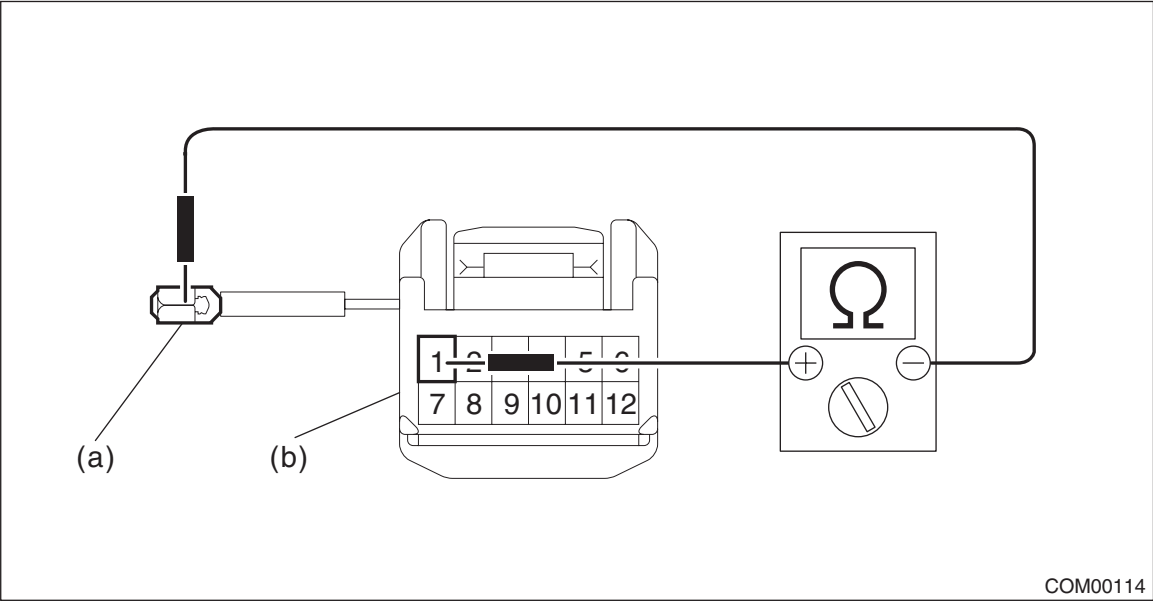

(a) Ground terminal (b) Horn switch terminal

Terminal No.	Standard
Horn switch terminal — ground terminal	Less than 1 Ω

- 4) Replace the driver’s airbag module if the inspection result is not within the standard value.


Horn Switch

COMMUNICATION SYSTEM

2. CHECK ROLL CONNECTOR

- 1) Remove the roll connector.<Ref. to AB-102, REMOVAL, Roll Connector.>
- 2) Check the resistance between roll connector terminals.

Preparation tool:
Circuit tester

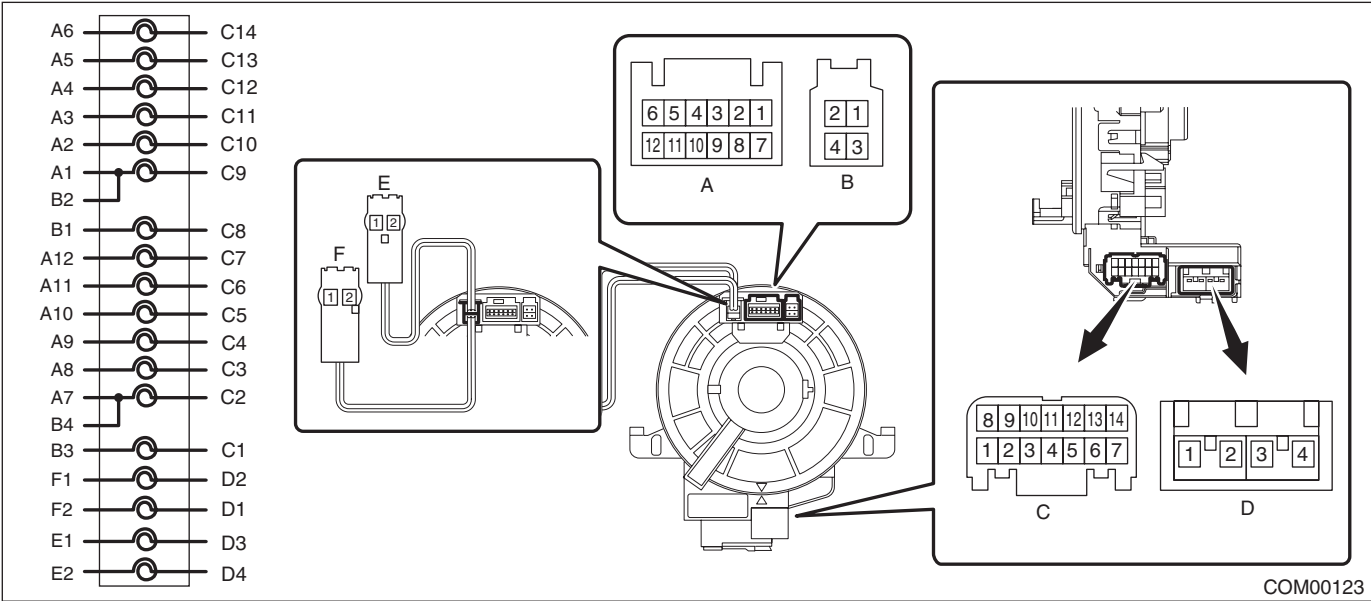

Terminal No.	Inspection conditions	Standard
A1 — C9	Always	Less than 1 Ω

- 3) Replace the roll connector if the inspection result is not within the standard value.

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Relay and Fuse	7
3. Power Window System	9
4. Power Window Control Switch	11
5. Front Door Glass	17
6. Front Regulator and Motor Assembly	20
7. Remote Control Mirror System	22
8. Outer Mirror Assembly	23
9. Remote Control Mirror Switch	29
10. Rearview Mirror	31
11. Rear Door Glass	32
12. Rear Regulator and Motor Assembly	34
13. Windshield Glass	36
14. Rear Gate Glass	45
15. Rear Window Defogger System	48
16. Rear Quarter Glass	51
17. Wiper Deicer System	54