

## 4. Cruise Control Module

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

### B: REMOVAL

For removal procedures of the control module, refer to “FUEL INJECTION (FUEL SYSTEMS)”.

- Non-turbo model: <Ref. to FU(H4DO)-91, REMOVAL, Engine Control Module (ECM).>
- Turbo model: <Ref. to FU(H4DOTC)-135, REMOVAL, Engine Control Module (ECM).>

### C: INSTALLATION

For installation procedures of the control module, refer to “FUEL INJECTION (FUEL SYSTEMS)”.

- Non-turbo model: <Ref. to FU(H4DO)-92, INSTALLATION, Engine Control Module (ECM).>
- Turbo model: <Ref. to FU(H4DOTC)-137, INSTALLATION, Engine Control Module (ECM).>