


17.AUX Input Terminal

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover - shift lever, the console box assembly and the panel center LWR.<Ref. to EI-65, REMOVAL, Console Box.>
- 3) Remove the AUX input terminal.
 - (1) Release the claws.
 - (2) Remove the AUX input terminal assembly by pushing it into the console box.

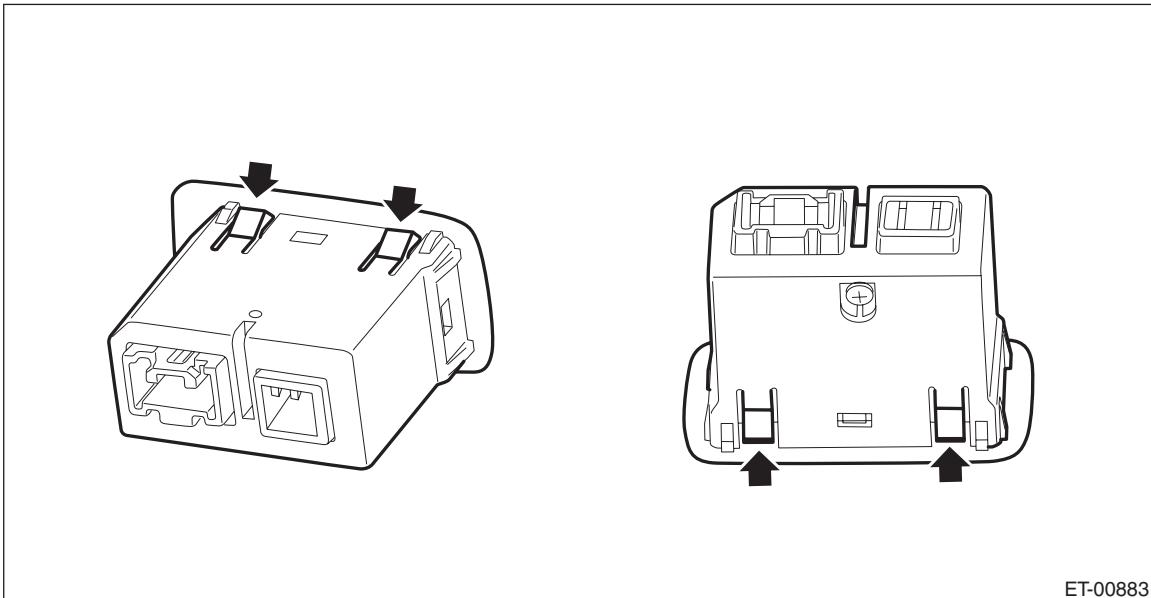


ET-00883

- 4) Remove the panel center assembly.

CAUTION:

- Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.
- Pull the panel center assembly slowly. Pulling with excessive force may damage the connector.
 - (1) On manual A/C models, disconnect the control cables from both sides of the heater and cooling unit assembly.

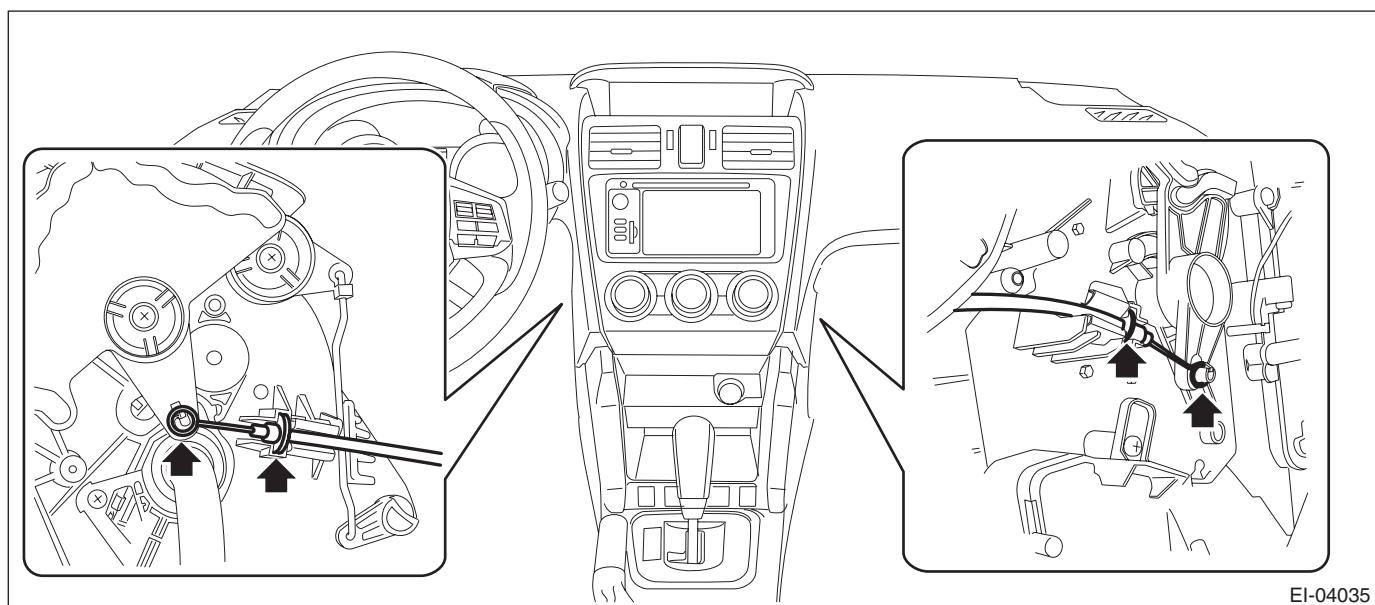


EI-04035

NOTE:


Remove the glove box pocket assembly on the passenger's side.

- (2) Insert a plastic remover to the three areas shown by the arrows, and slightly lift up the panel center assembly.
- (3) With the panel center assembly lifted up slightly, release the claw by using a clip remover wrapped with protective tape.
- (4) Release the rest of the claws, and pull out the panel center assembly.
- (5) Disconnect the connectors, and remove the panel center assembly.

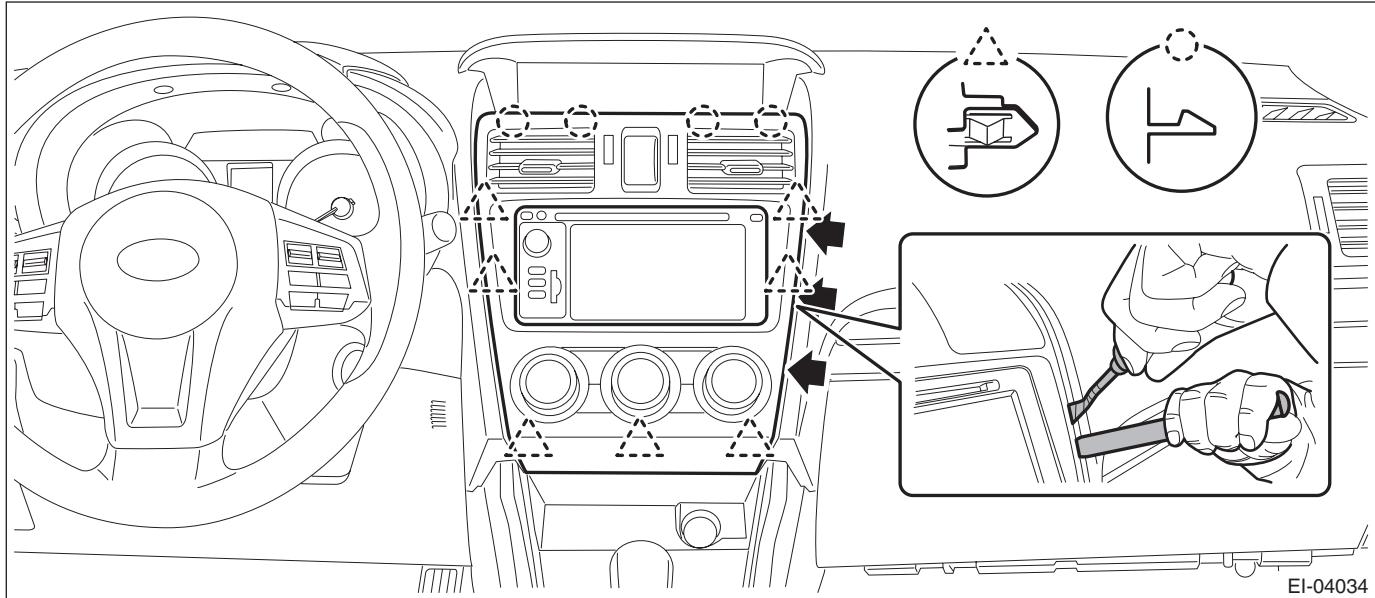

- 5) Remove the audio assembly or navigation assembly.


- (1) Remove the screws, and partially pull out the audio assembly or navigation assembly.
- (2) Disconnect the connectors, and remove the audio assembly or navigation assembly.

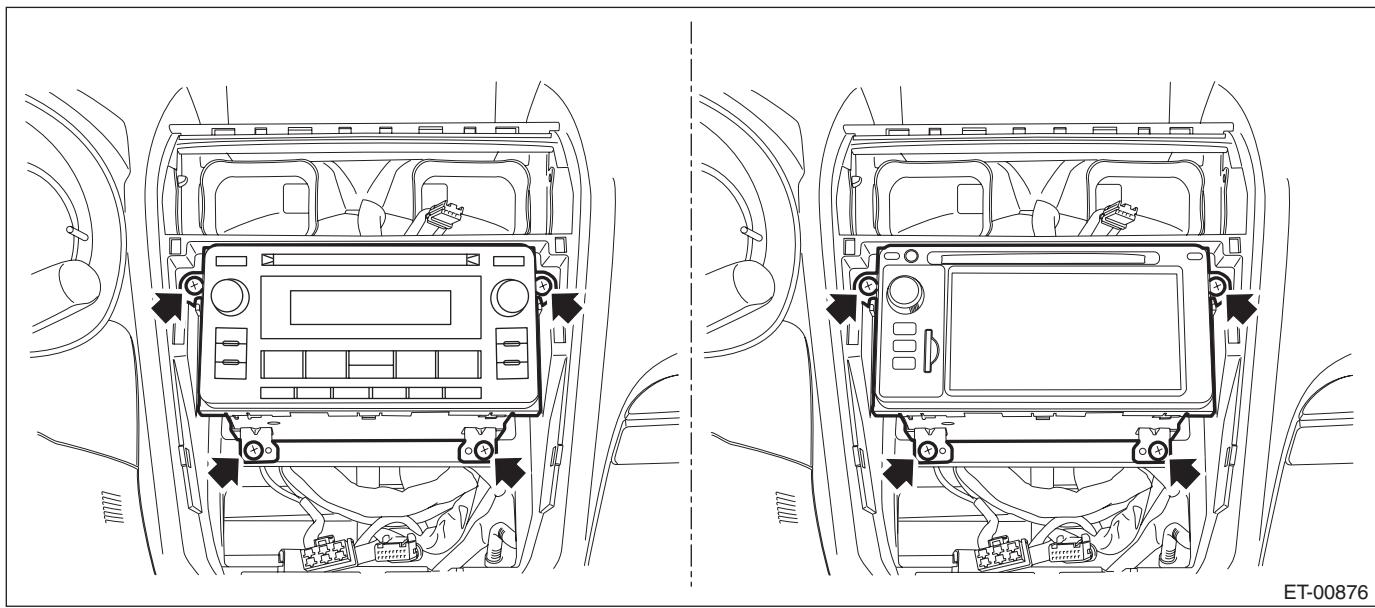

AUX Input Terminal

ENTERTAINMENT

- 6) Remove the clamp and remove the AUX (USB) terminal cord.

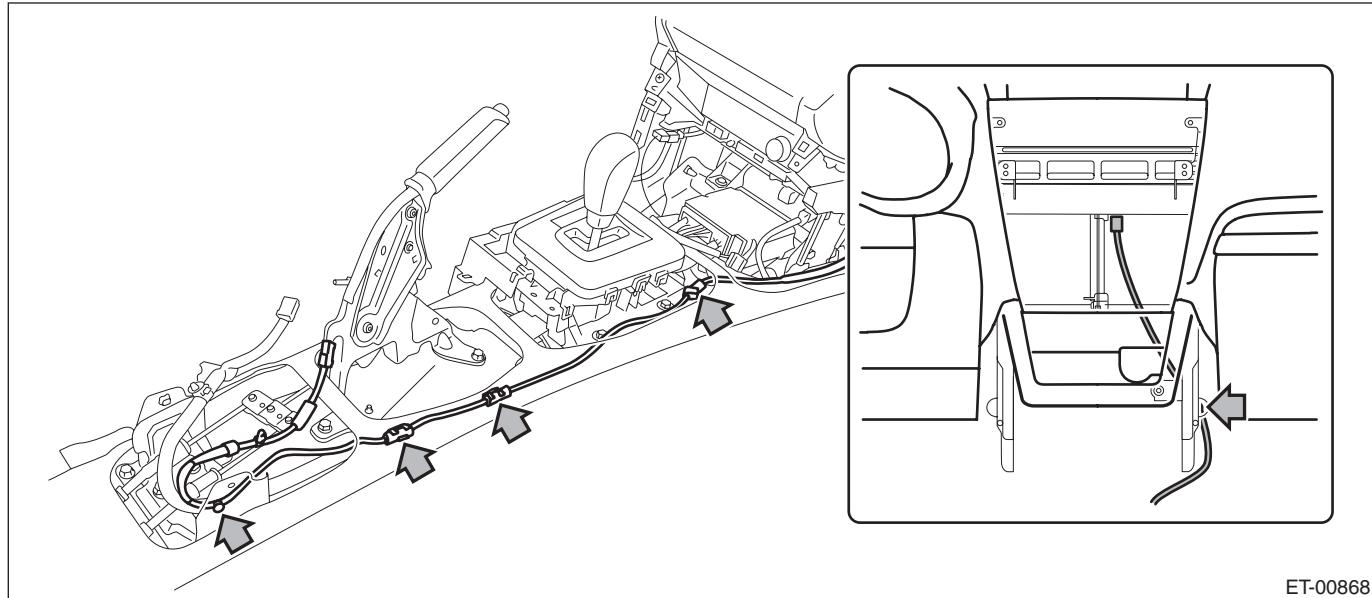

B: INSTALLATION

CAUTION:

After installing the panel center assembly, check that the air vent grille of the panel center assembly is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.

COMMUNICATION SYSTEM

COM

	Page
1. General Description	2
2. Relay and Fuse	3
3. Horn System	4
4. Horn	5
5. Horn Switch	8