


## 2. Relay and Fuse

### A: LOCATION

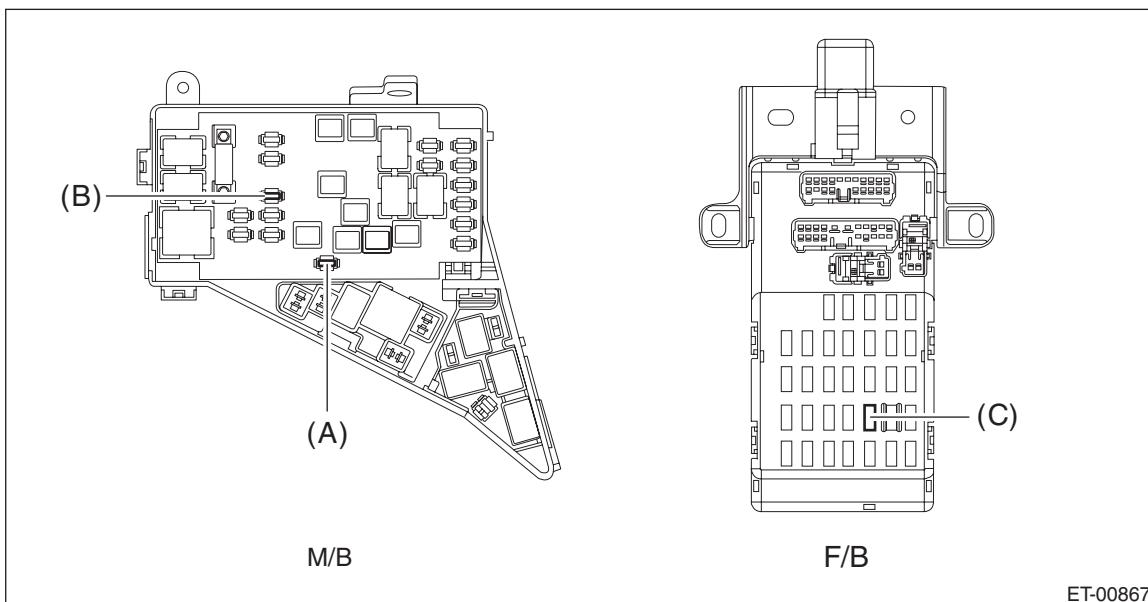

Main fuse box	Fuse 20A (audio connector, navigation unit) Fuse 25A (audio amplifier)	(A) (B)
Relay & fuse box	Fuse 10A (audio connector, navigation unit)	(C)

**NOTE:**

For other related fuses, refer to the wiring diagram. <Ref. to WI-24, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

**NOTE:**

If the fuse is blown again, check the system wiring harness.