

10. Weather Strip


A: REPLACEMENT

1. FLANGE

- 1) Remove the weather strip - body side flange while pulling the rubber. Be careful not to tear the rubber.

NOTE:

While removing, be careful not to damage the clips attached to the weather strip - body arch.

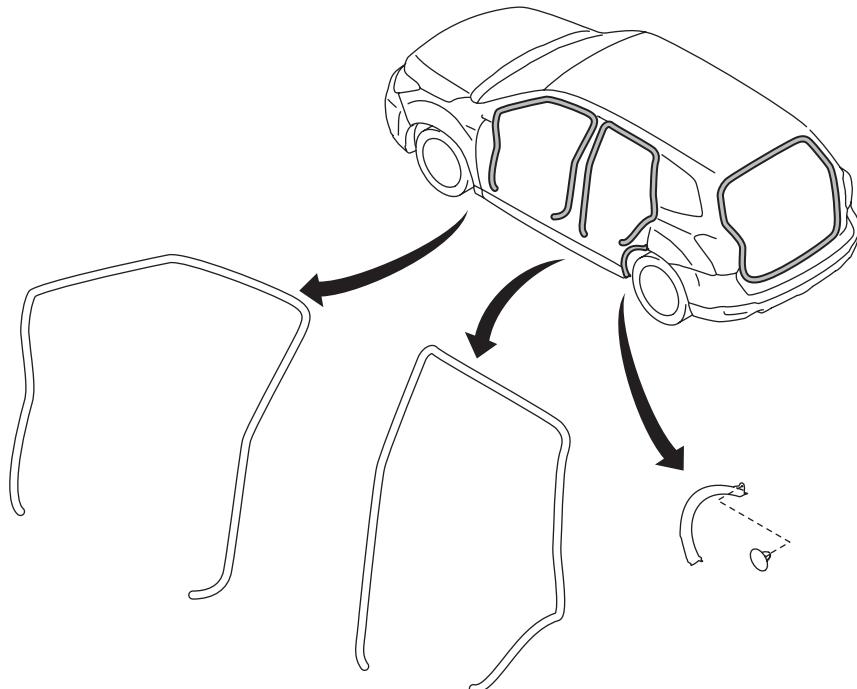

EB-00883


Weather Strip

EXTERIOR BODY PANELS

2) Replace the weather strip - rear gate while pulling the rubber. Be careful not to tear the rubber.

NOTE:

While removing the weather strip - rear gate, be careful not to allow adhesive to contact the trim panel - roof assembly and trim panel - trunk side.

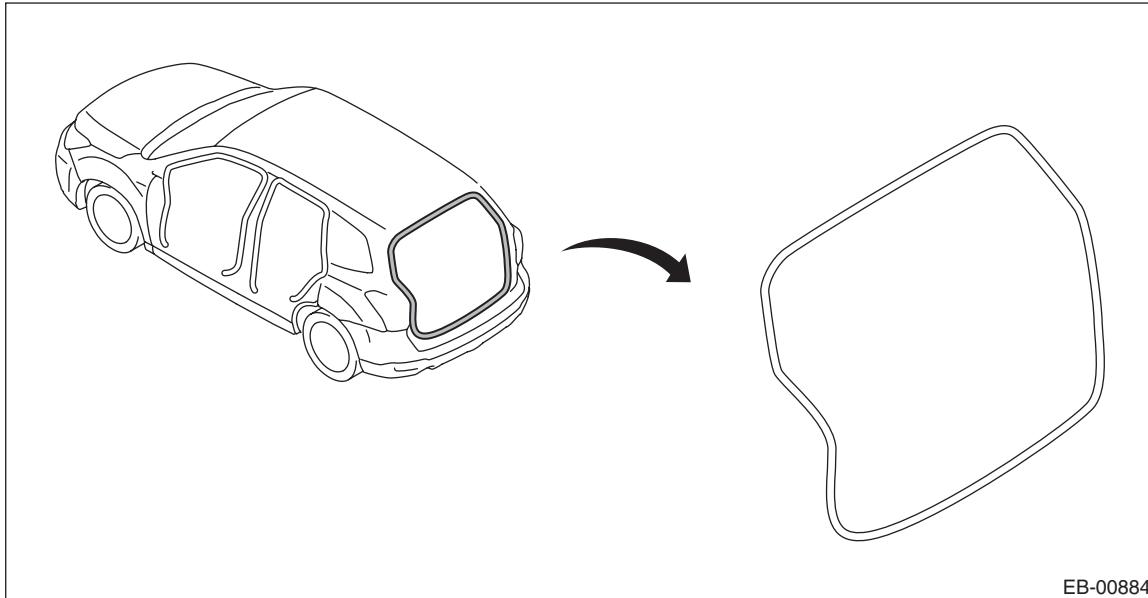

Weather Strip



EXTERIOR BODY PANELS

2. DOOR

1) Remove the weather strip after removing the clip. Be careful not to tear the rubber.

CAUTION:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

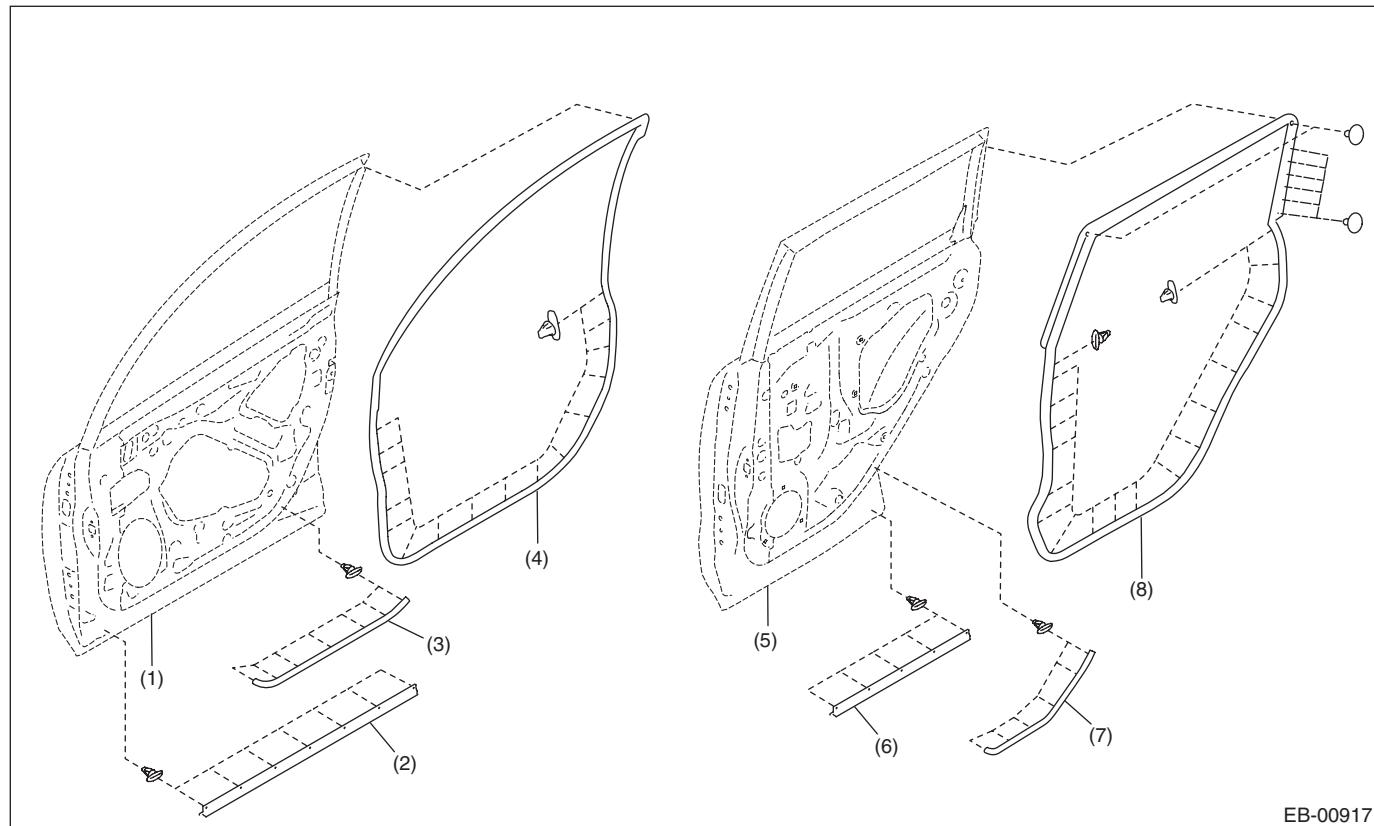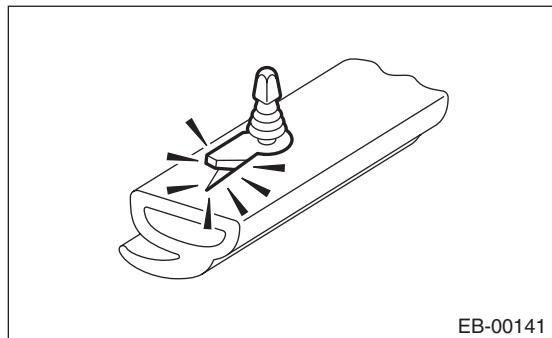

(1) Panel ASSY - front door	(4) Weather strip - front door	(7) Weather strip - rear door - lower
(2) Weather strip - front door - side sill	(5) Panel ASSY - rear door	(8) Weather strip - rear door
(3) Weather strip - front door - lower	(6) Weather strip - rear door - side sill	

POWER REAR GATE SYSTEM

PRG

	Page
1. General Description	2
2. Relay and Fuse	7
3. Power Rear Gate System	8
4. Power Rear Gate Control Module	9
5. Power Rear Gate Drive Unit	10
6. Power Rear Gate Rod	15
7. Power Rear Gate Auto Closer	17
8. Power Rear Gate Touch Sensor	21
9. Power Rear Gate Buzzer	22
10. Power Rear Gate Inner Switch	23
11. Power Rear Gate Driver's Switch	24
12. Memory Height Switch	25
13. Rear Gate Opener Button	27
14. Body Integrated Unit	28
15. Turn Signal Light & Hazard Light Unit	29
16. Diagnostics with Phenomenon	30