


## 5. Front Sealing Cover

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - front door.
  - (1) Attach the protective tape (a).
  - (2) Remove the cover - door handle by using a plastic remover.
  - (3) Remove the screws and clips, and remove the trim panel - front door from the panel assembly - front door.

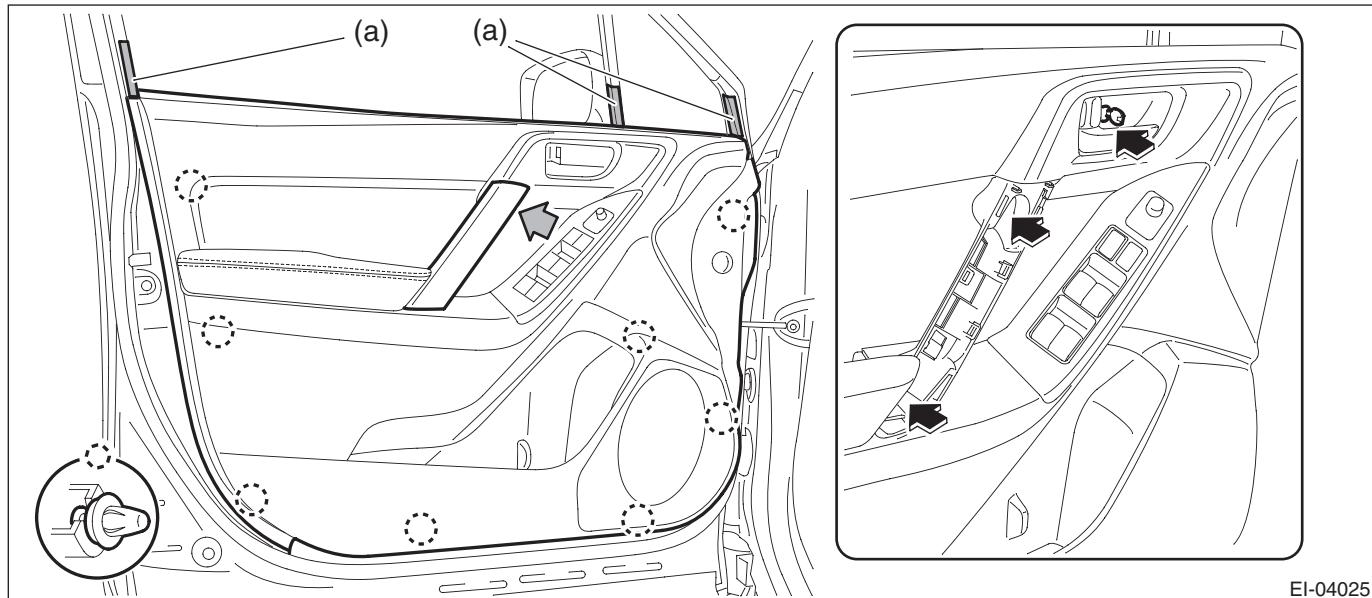


EI-04025

#### NOTE:

It is easier to remove the cover - door handle if the removal is performed from the gray arrow section.

- (4) Detach the door lock cable (a) and door open cable (b) from the remote assembly - door.

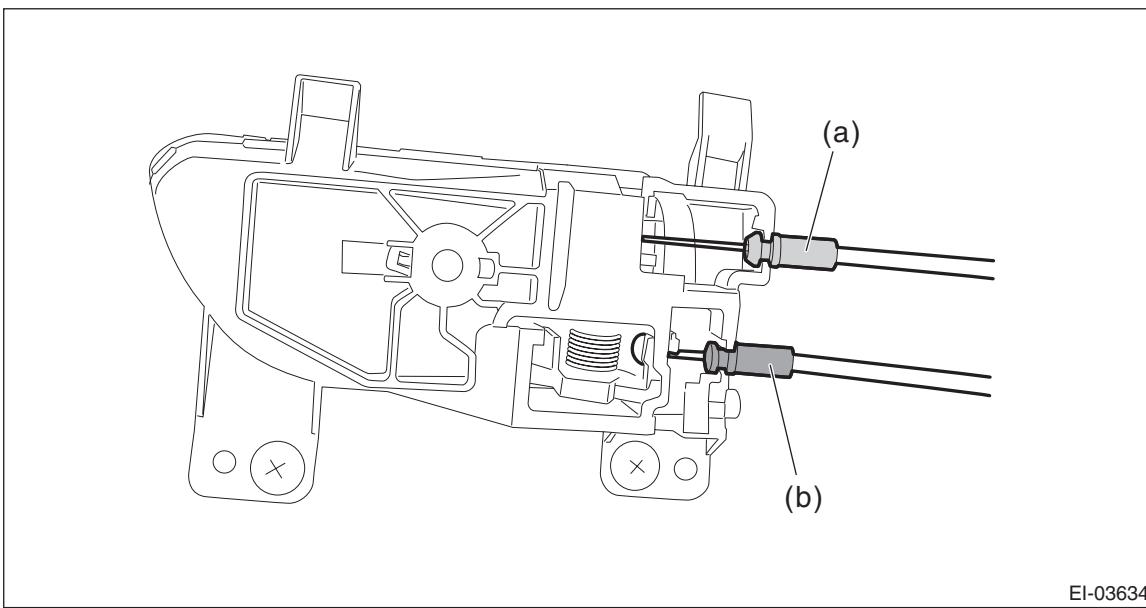

EI-03634

- (5) Disconnect the harness connector and remove the trim panel - front door.

#### CAUTION:

Pulling the door trim excessively may damage the harness.

# Front Sealing Cover

## EXTERIOR BODY PANELS


3) Remove the sealing cover - front door.

### CAUTION:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If the sealing cover - front door gets broken, replace it with a new part.
- Be careful not to allow the butyl tape to contact any trims and seats because the butyl tape, which has a strong adhesive force, is difficult to remove once it adhered.

(1) Disconnect connectors.

(2) Carefully remove the butyl tape to remove the sealing cover - front door.

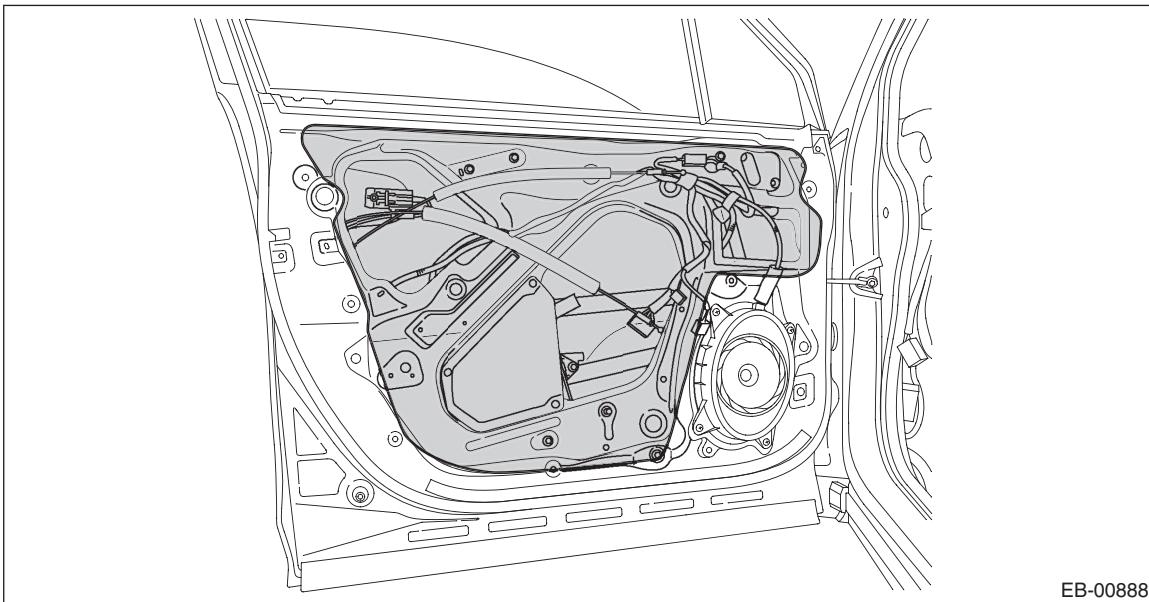

## B: INSTALLATION

### CAUTION:

- If the sealing cover - front door gets broken, replace it with a new part.
- Apply a uniform bead of butyl tape.
- Attach the sealing cover - front door, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

1) Install each part in the reverse order of removal.

2) When replacing the sealing cover - front door, use the butyl tape.

3) Press the butyl tape-applied area firmly to prevent any floating on surface.

### Butyl tape:

3M 8626 or equivalent

## C: INSPECTION

If the sealing cover - front door is broken, replace it with a new part.